


# PCG-XG38/XG38K/XG39/XG39K

## SERVICE MANUAL

US Model  
Canadian Model

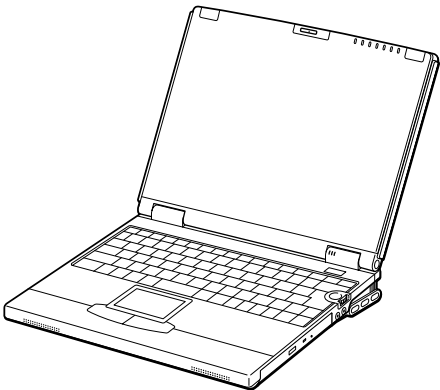

Illust : PCG-XG39K

i S400



PCG-XG38/XG38K/XG39/XG39K (UC)

Confidential

9-872-131-11

2000K1605-1

SONY®

This manual and the constituent data may not be replicated, copied nor reprinted in whole or in part without prior written authorization of Sony Corporation.

Information in this document is subject to change without notice.

Sony and VAIO are trademarks of Sony. Intel logo and Intel Inside logo are registered trademarks of Intel Corporation. Pentium MMX is a trademark of Intel Corporation. Microsoft, MS-DOS, Windows, the Windows 95 and Windows 98 logo are trademarks of Microsoft Corporation.

All other trademarks are trademarks or registered trademarks of their respective owners. Other trademarks and trade names may be used in this document to refer to the entities claiming the marks and names or their products. Sony Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

Caution Markings for Lithium/Ion Battery - The following or similar texts shall be provided on battery pack of equipment or in both the operating and the service instructions.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer’s instructions.

CAUTION: The battery pack used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate. Dispose of used battery promptly. Keep away from children.

CAUTION: Changing the back up battery.

- Overcharging, short circuiting, reverse charging, multilation or incineration of the cells must be avoided to prevent one or more of the following occurrences; release of toxic materials, release of hydrogen and/or oxygen gas, rise in surface temperature.
- If a cell has leaked or vented, it should be replaced immediately. Do not touch the battery without protection.



Service and Inspection Precautions

1. Obey precautionary markings and instructions

Labels and stamps on the cabinet, chassis, and components identify areas requiring special precautions. Be sure to observe these precautions, as well as all precautions listed in the operating manual and other associated documents.

2. Use designated parts only

The set’s components possess important safety characteristics, such as noncombustibility and the ability to tolerate large voltages. Be sure that replacement parts possess the same safety characteristics as the originals. Also remember that the ⚠ mark, which appears in circuit diagrams and parts lists, denotes components that have particularly important safety functions; be certain to use only the designated components.

3. Always follow the original design when mounting parts and routing wires

The original layout includes various safety features, such as inclusion of insulating materials (tubes and tape) and the mounting of parts above the printer board. In addition, internal wiring has been routed and clamped so as to keep it away from hot or high-voltage parts. When mounting parts or routing wires, therefore, be sure to duplicate the original layout.

4. Inspect after completing service

After servicing, inspect to make sure that all screws, components, and wiring have been returned to their original condition. Also check the area around the repair location to ensure that repair work has caused no damage, and confirm safety.

5. When replacing chip components...

Never reuse components. Also remember that the negative side of tantalum capacitors is easily damaged by heat.

6. When handling flexible print boards...

- The temperature of the soldering-iron tip should be about 270°C.
- Do not apply the tip more than three times to the same pattern.
- Handle patterns with care; never apply force.

Caution: Remember that hard disk drives are easily damaged by vibration. Always handle with care.

ATTENTION AU COMPOSANT AYANT RAPPORT  
À LA SÉCURITÉ!  
LES COMPOSANTS IDENTIFÉS PAR UNE MARQUE ⚠ SUR LES  
DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT  
CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE  
REEMPLACER CES COMPOSANTS QUE PAR DES PIÈSES SONY  
DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU  
DANS LES SUPPÉMENTS PUBLIÉS PAR SONY.

## TABLE OF CONTENTS

| <u>Section</u>                                        | <u>Title</u>                                                                | <u>Page</u> |
|-------------------------------------------------------|-----------------------------------------------------------------------------|-------------|
| <b>SECTION 1</b>                                      |                                                                             |             |
| <b>CHAPTER 1. OPERATION</b>                           |                                                                             |             |
| 1-1.                                                  | VAIO Notebook User Guide .....                                              | 1-1         |
|                                                       | (to 1-70)                                                                   |             |
| <b>SECTION 2</b>                                      |                                                                             |             |
| <b>CHAPTER 1. REMOVAL</b>                             |                                                                             |             |
| 1-1.                                                  | Flowchart .....                                                             | 1-1         |
| 1-2.                                                  | Main Electrical Parts Location Diagram .....                                | 1-1         |
| 1-3.                                                  | Removal .....                                                               | 1-2         |
| 1.                                                    | Hinge Cover .....                                                           | 1-2         |
| 2.                                                    | Keyboard Unit .....                                                         | 1-2         |
| 3.                                                    | HDD Assy .....                                                              | 1-3         |
| 4.                                                    | Hou Flap Assy, Flap Base Plate .....                                        | 1-3         |
| 5.                                                    | Hou Palmrest Assy, Display Base, IFX-70 Board .....                         | 1-4         |
| 6.                                                    | Display Assy .....                                                          | 1-4         |
| 7.                                                    | MBX-43 Board Assy (1) .....                                                 | 1-5         |
| 8.                                                    | Speaker Assy, V/L Rechargeable Battery,<br>CNX-75 Board, ANL-17 Board ..... | 1-5         |
| 9.                                                    | MBX-43 Board Assy (2) .....                                                 | 1-6         |
| 10.                                                   | LCD Section (XG39/XG39K Model) – Made by HI – ...                           | 1-7         |
| 1.                                                    | Flash Panel, Bezel Housing Assy .....                                       | 1-7         |
| 2.                                                    | LCD Unit, Inverter Assy, LCD Flexible Print .....                           | 1-8         |
| 11.                                                   | LCD Section (XG38/XG38K Model) – Made by SA – ...                           | 1-9         |
| 1.                                                    | Flash Panel, Bezel Housing Assy .....                                       | 1-9         |
| 2.                                                    | LCD Unit, Inverter Assy, LCD Cable .....                                    | 1-10        |
|                                                       | (to 1-10)                                                                   |             |
| <b>CHAPTER 2. SELF DIAGNOSTICS</b>                    |                                                                             |             |
| 2-1.                                                  | Required Tools and Peripheral Devices .....                                 | 2-1         |
| 2-2.                                                  | Tools and Peripheral Device Connection .....                                | 2-3         |
| 2-3.                                                  | Starting up the Service Diagnostics .....                                   | 2-4         |
| 2-4.                                                  | Outline of Service Diagnostics Functions .....                              | 2-4         |
| 2-5.                                                  | Inspecting Windows .....                                                    | 2-8         |
|                                                       | (to 2-8)                                                                    |             |
| <b>CHAPTER 3. BLOCK DIAGRAM</b> .....                 |                                                                             |             |
|                                                       | (to 3-2)                                                                    |             |
| <b>CHAPTER 4. FRAME HARNESS DIAGRAM</b> .....         |                                                                             |             |
|                                                       | (to 4-2)                                                                    |             |
| <b>CHAPTER 5. EXPLODED VIEWS AND PARTS LIST</b> ..... |                                                                             |             |
| 5-1.                                                  | Main Section (XG39/XG39K Model) .....                                       | 5-1         |
| 5-2.                                                  | Main Section (XG38/XG38K Model) .....                                       | 5-2         |
| 5-3.                                                  | LCD Section<br>(XG39/XG39K Model) – Made by HI – .....                      | 5-9         |
| 5-4.                                                  | LCD Section<br>(XG38/XG38K Model) – Made by SA – .....                      | 5-11        |
|                                                       | (to 5-12)                                                                   |             |

- Abbreviations
- UC : US model / Canadian model

**Confidential**

**SONY®**

***VAIO® Notebook  
User Guide***

**PCG-XG38/PCG-XG38K/  
PCG-XG39/PCG-XG39K**



## Notice to Users

© 2000 Sony Electronics Inc. All rights reserved. This manual and the software described herein, in whole or in part, may not be reproduced, translated, or reduced to any machine-readable form without prior written approval.

SONY ELECTRONICS INC. PROVIDES NO WARRANTY WITH REGARD TO THIS MANUAL, THE SOFTWARE, OR OTHER INFORMATION CONTAINED HEREIN AND HEREBY EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH REGARD TO THIS MANUAL, THE SOFTWARE, OR SUCH OTHER INFORMATION. IN NO EVENT SHALL SONY ELECTRONICS INC. BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES, WHETHER BASED ON TORT, CONTRACT, OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL, THE SOFTWARE, OR OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

Sony Electronics Inc. reserves the right to make any modification to this manual or the information contained herein at any time without notice. The software described herein is governed by the terms of a separate user license agreement.

This product contains software owned by Sony and licensed by third parties. Use of such software is subject to the terms and conditions of license agreements enclosed with this product. Some of the software may not be transported or used outside the United States. Software specifications are subject to change without notice and may not necessarily be identical to current retail versions.

Updates and additions to software may require an additional charge. Subscriptions to online service providers may require a fee and credit card information. Financial services may require prior arrangements with participating financial institutions.



As an ENERGY STAR Partner, Sony Corporation has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

The International ENERGY STAR Office Equipment Program is an international program that promotes energy saving through the use of computers and other office equipment. The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which business proprietors can participate voluntarily. The targeted products are office equipment such as computers, displays, printers, facsimiles and copiers. Their standards and logos are uniform among participating nations. ENERGY STAR is a U.S. registered mark.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Sony, i.LINK, MovieShaker, PictureGear, DVgate, Mavica, Handycam, Jog Dial, Media Bar, VAIO and the VAIO logo are trademarks of Sony Corporation. Microsoft, Windows Me,

Windows Media, Windows, Windows NT, and the Windows logo are registered trademarks of Microsoft Corporation. Intel, SpeedStep, and Pentium are trademarks of Intel Corporation. PS/2 is registered trademark of IBM.

All other trademarks are trademarks of their respective owners.

## Safety Information

### Owner's Record

The model number and serial number are located on the bottom of your Sony VAIO Notebook. Record the serial number in the space provided here. Refer to the model and serial number when you call your Sony Service Center.

Model Number: PCG-851A, PCG-8512, PCG-852A, PCG-8522

Serial Number: \_\_\_\_\_

### WARNING

- ☐ To prevent fire or shock hazard, do not expose your notebook to rain or moisture.
- ☐ To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.
- ☐ Never install modem or telephone wiring during a lightning storm.
- ☐ Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- ☐ Never touch uninsulated telephone wire or terminals unless the telephone line has been disconnected at the network interface.

- ☐ Use caution when installing or modifying telephone lines.
- ☐ Avoid using the modem during an electrical storm.
- ☐ Do not use the modem or a telephone to report a gas leak in the vicinity of the leak.
- ☐ A socket outlet should be as close as possible to the unit and easily accessible.



**To change backup battery.**  
**Please contact your nearest Sony Service Center.**



**The use of optical instruments with this product will increase eye hazard. As the laser beam used in this product is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.**

**For DVD-ROM: Danger - Visible and invisible laser radiation when open. Avoid direct exposure to beam.**

**DANGER: Visible and invisible laser radiation when open. Avoid direct exposure to beam.**

**Caution: To reduce the risk of fire, use only No. 26 AWG or larger telecommunication line cord**

## AVERTISSEMENT

- ❑ Pour prévenir tout risque d'incendie ou d'électrocution, garder cet appareil à l'abri de la pluie et de l'humidité.
- ❑ Pour prévenir tout risque d'électrocution, ne pas ouvrir le châssis de cet appareil et ne confier son entretien qu'à une personne qualifiée
- ❑ Ne jamais effectuer l'installation de fil modem ou téléphone durant un orage électrique.
- ❑ Ne jamais effectuer l'installation d'une prise téléphonique dans un endroit mouillé à moins que la prise soit conçue à cet effet.
- ❑ Ne jamais toucher un fil téléphonique à découvert ou un terminal à moins que la ligne téléphonique n'ait été débranché de l'interface réseau.
- ❑ Soyez très prudent lorsque vous installez ou modifiez les lignes téléphoniques.
- ❑ Évitez d'utiliser le modem durant un orage électrique.
- ❑ N'utilisez pas le modem ni le téléphone pour prévenir d'une fuite de gaz vous êtes près de la fuite.
- ❑ L'appareil doit être le plus près possible d'une prise murale pour en faciliter l'accès.



**Pour changer la pile de recharge, veuillez contacter votre centre de service Sony le plus près.**

**Comme le faisceau laser utilisé par cet appareil est dangereux pour les yeux, ne tentez pas de démonter le boîtier. Confiez l'entretien de cet appareil exclusivement au personnel qualifié. Adressez-vous à un agent de service qualifié.**

**Pour les DVD-ROM : DANGER : Radiation laser visible et invisible si ouvert. Évitez l'exposition directe au faisceau.**

**Attention : Afin de réduire les risques d'incendie, n'utilisez qu'un cordon de communication NO. 26 AWG ou plus gros.**

If you have questions about this product, you can reach the Sony Customer Information Service Center at 1-888-4SONYPC; or write to the Sony Customer Information Service Center at 12451 Gateway Blvd., Ft. Myers, FL 33913 or find Sony Customer Service on the web at: <http://www.sony.com/pcsupport>

---

## Regulatory Information

### Declaration of Conformity

|                                                                                                                   |                                        |
|-------------------------------------------------------------------------------------------------------------------|----------------------------------------|
| Trade Name:                                                                                                       | SONY                                   |
| Model No.:                                                                                                        | PCG-851A, PCG-8512, PCG-852A, PCG-8522 |
| Responsible Party:                                                                                                | Sony Electronics Inc.                  |
| Address:                                                                                                          | 1 Sony Drive<br>Park Ridge, NJ 07656   |
| Telephone:                                                                                                        | 201-930-6972                           |
| This phone number is for FCC-related matters only.                                                                |                                        |
| This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:         |                                        |
| (1) This device may not cause harmful interference, and                                                           |                                        |
| (2) this device must accept any interference received, including interference that may cause undesired operation. |                                        |

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and the receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Only peripherals (computer input/output devices, terminals, printers, etc.) that comply with FCC Class B limits may be attached to this computer product. Operation with non-compliant peripherals is likely to result in interference to radio and television reception.

All cables used to connect peripherals must be shielded and grounded. Operation with cables, connected to peripherals, that are not shielded and grounded, may result in interference to radio and television reception.

### FCC Part 68

This equipment complies with Part 68 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

This modem uses the USOC RJ-11 telephone jack.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

If the terminal equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operations of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, you can reach the Sony Customer Information Service Center at 1-888-4SONYPC; or write to the Sony Customer Information Service Center at 12451 Gateway Blvd., Ft. Myers, FL 33913 or find Sony Customer Service on the web at: <http://www.sony.com/pcsupport>

Repair of this equipment should be made only by a Sony Service Center or Sony authorized agent. For the Sony Service Center nearest you, call 1-888-4SONYPC (1-888-476-6972).

This equipment cannot be used on public coin service provided by the telephone company. Connection to Party Line Service is subject to state and possible provincial tariffs. (Contact the state or provincial utility service

commission, public service commission or corporation commission for information.)

## **Telephone Consumer Protection Act of 1991 (United States)**

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone facsimile machine unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business, other entity, or individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual.

In order to program this information into your facsimile machine, see your fax software documentation.

## **Telephone Consumer Guidelines (Canada)**

Please refer to your telephone directory under 'Privacy Issues' and/or 'Terms of Service.' For more detailed information please contact:

### **CRTC**

Terrasses de la Chaudière, Tour centrale 1  
promenade du Portage, 5ième étage Hull PQ  
K1A 0N2.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## DISPOSAL OF LITHIUM ION BATTERY

You can return your unwanted lithium ion batteries to your nearest Sony Service Center or Factory Service Center.



In some areas the disposal of lithium ion batteries in household or business trash may be prohibited.

For the Sony Service Center nearest you call 1-888-476-6972 in the United States or 1-800-961-7669 in Canada.



**Do not handle damaged or leaking lithium ion batteries.**

**Ne pas manipuler les batteries au lithium-ion qui fuient ou sont endommagées.**



**Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.**

**Une batterie non conforme présente un danger d'explosion. La remplacer seulement par une batterie identique ou de type équivalent recommandé par le fabricant. Évacuer les batteries usées selon les directives du fabricant.**



**The battery pack used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 212°F (100°C) or incinerate. Dispose of used battery promptly. Keep away from children.**

**La manutention incorrecte du module de batterie de cet appareil présente un risque d'incendie ou de brûlures chimiques. Ne pas démonter, incinérer ou exposer à une température de plus de 100°C. Évacuer promptement la batterie usée. Garder hors de portée des enfants.**

## INDUSTRY CANADA NOTICE

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational, and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection.

The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Equipment malfunctions or any repairs or alterations made by the user to this equipment may give the telecommunications company cause to request that the user disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTICE: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5. The Ringer Equivalence Number for this equipment is 0.3.

## AVIS DE L'INDUSTRIE CANADA

AVIS: L'étiquette d'Industrie Canada identifie le matériel homologué.

Cette étiquette certifie que le matériel est conforme aux normes de protection, d'exploitation et de sécurité des réseaux de télécommunications, comme le prescrivent les documents concernant les exigences techniques relatives au matériel terminal. Le Ministère n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux

installations de l'entreprise locale de télécommunication. Le matériel doit également être installé en suivant une méthode acceptée de raccordement.

L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêche pas la dégradation du service dans certaines situations.

Les réparations de matériel homologué doivent être coordonnées par un représentant désigné par le fournisseur. L'entreprise de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

Avertissement: L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

AVIS: L'indice d'équivalence de la sonnerie (IES) assigné à chaque dispositif terminal indique le nombre maximal de terminaux qui peuvent être raccordés à une interface. La terminaison d'une interface téléphonique peut consister en une combinaison de quelques dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5. L'indice d'équivalence de la sonnerie de ce matériel est de 0.3.

# Contents

|                                             |           |
|---------------------------------------------|-----------|
| <b>Welcome .....</b>                        | <b>11</b> |
| Features .....                              | 11        |
| Unpacking Your VAIO® Notebook .....         | 12        |
| Ergonomic Considerations .....              | 14        |
| <b>Setting Up Your VAIO® Notebook .....</b> | <b>19</b> |
| Locating the Controls and Connectors .....  | 19        |
| Connecting a Power Source .....             | 23        |
| Starting Your Computer .....                | 29        |
| Shutting Down Your Computer .....           | 30        |
| <b>Using Your VAIO® Notebook .....</b>      | <b>33</b> |
| Using the Keyboard .....                    | 33        |
| Replacing a Keycap .....                    | 38        |
| Using the Touchpad .....                    | 40        |
| Using the Floppy Disk Drive .....           | 41        |
| Using the DVD-ROM Drive .....               | 46        |
| Using PC cards .....                        | 51        |
| Using Infrared Communication Devices .....  | 54        |
| Using a Second Battery Pack .....           | 56        |
| Using the Weight Saver .....                | 59        |
| Removing the                                |           |
| Optional Hard Drive (PCGA-HDX10) .....      | 60        |
| Using Smart Connect .....                   | 61        |

|                                                                             |            |
|-----------------------------------------------------------------------------|------------|
| Connecting an i.LINK®-compatible Device .....                               | 62         |
| VAIO® Action Setup .....                                                    | 65         |
| Using Power Saving Modes .....                                              | 69         |
| <b>Connecting Peripheral Devices .....</b>                                  | <b>71</b>  |
| Connecting a Phone Line .....                                               | 72         |
| Using the Mini Docking Station .....                                        | 73         |
| Connecting a Printer to Your Computer .....                                 | 86         |
| Connecting an External Display .....                                        | 87         |
| Connecting External Speakers .....                                          | 90         |
| Connecting an External Microphone .....                                     | 91         |
| Connecting a Universal Serial Bus (USB) Device<br>(Mouse or Keyboard) ..... | 92         |
| Adding Memory .....                                                         | 93         |
| About the Software on Your Computer .....                                   | 98         |
| About Your Recovery CDs .....                                               | 102        |
| For Answers to Your Software Questions .....                                | 102        |
| <b>Software Information .....</b>                                           | <b>105</b> |
| MovieShaker™ .....                                                          | 105        |
| PictureGear™ .....                                                          | 108        |
| <b>Troubleshooting .....</b>                                                | <b>111</b> |
| Using the System and Application Recovery CDs .....                         | 122        |
| Supplemental Information .....                                              | 125        |
| Getting Help .....                                                          | 126        |
| <b>Specifications .....</b>                                                 | <b>127</b> |
| <b>Index .....</b>                                                          | <b>131</b> |

# Welcome

Congratulations on your purchase of the Sony VAIO® Notebook . Sony has combined leading-edge technology in audio, video, computing, and communications to provide you with state-of-the-art personal computing.

## Features



For a complete description of the specifications of your VAIO® notebook, “Specifications” on page 127.

- ❑ **Exceptional performance** — Your computer includes a Mobile Intel® Pentium® III Processor featuring Intel® SpeedStep™ technology and a V.90 compatible K56flex modem.\*
- ❑ **Portability** — The rechargeable battery pack provides hours of use without AC power.
- ❑ **Sony audio and video quality** — A high-resolution LCD screen enables you to take advantage of today’s advanced multimedia applications, games, and entertainment software.
- ❑ **Microsoft® Windows® operating system** — Your system includes Windows® Millennium Edition or Windows® 2000 Professional.
- ❑ **Communications** — Access popular online services, send and receive e-mails, browse the Internet, and use the dialing and fax features.


---

\* Actual upload and download speeds may vary due to line conditions, ISP support, and government regulations.


## Unpacking Your VAIO® Notebook

Remove the following hardware items from the box:


*Main unit*

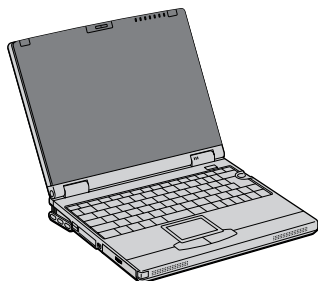


*Power cord*

 


*AC adapter*

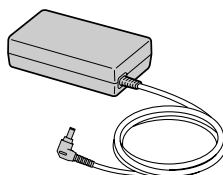

*FDD cable*

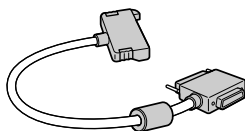

*Rechargeable  
battery pack*

 


*Weight saver*



*Floppy disk drive (FDD)*



 *DVD-ROM drive*



### Manuals

- ❑ **VAIO® User Guide** — Contains information on setting up your notebook, supplementary updates and software information. This manual describes the features and specifications of your notebook, the applications included with your system, how to contact software vendors, and solve common problems.
- ❑ **Microsoft® Windows® Millennium Edition Getting Started manual** or **Microsoft® Windows® 2000 Professional Getting Started manual** — Explains how to use the basic features of this latest Windows operating system.

### **Software CDs**

- ❑ **Microsoft® Word 2000** — Allows you to reinstall Microsoft Word to the Sony computer you purchased.

### **Recovery CDs**

- ❑ **System Recovery CD(s)** — Allows you to restore the software titles that shipped with your computer if they become corrupted or are erased. It can be used only to restore the hard disk of the Sony computer you purchased.
- ❑ **Application Recovery CD(s)** — Allows you to reinstall individual applications or device drivers if they are corrupted or erased.


### **Other**

- ❑ Setting up your VAIO® Notebook (poster)
- ❑ Packet containing special product offers

## Ergonomic Considerations

You will be using your notebook computer as a portable device in a variety of environments. Whenever possible, you should attempt to apply the following ergonomic considerations to both stationary and portable environments.

### Ergonomic Position

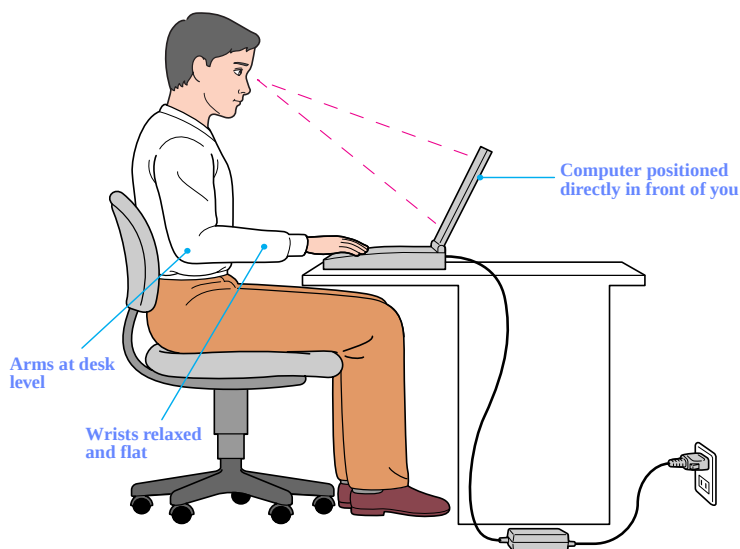

- ❑ **Position of your computer** — Place the computer directly in front of you as you work. Keep your forearms horizontal, with your wrists in a neutral, comfortable position while using the keyboard, touchpad, or external mouse. Let your upper arms hang naturally at your sides. Take breaks during sessions with your computer. Excessive use of the computer may strain muscles or tendons.
- ❑ **Furniture and posture** — Sit in a chair with good back support and armrests. Adjust the level of the chair so your feet are flat on the floor. A footrest may make you more comfortable. Sit in a relaxed, upright posture and avoid slouching forward or leaning far backward.

- ❑ **Viewing angle of the computer's display** — Use the display's tilting feature to find the best position. You can reduce eye strain and muscle fatigue by adjusting the tilt of the display to the proper position. Adjust the brightness setting of the display also.
- ❑ **Lighting** — Choose a location where windows and lights do not create glare and reflection on the display. Use indirect lighting to avoid bright spots on the display. You can also purchase accessories for your display that help reduce glare. Proper lighting adds to your comfort and work effectiveness.
- ❑ **Placement of an external display** — When using an external display, set the display at a comfortable viewing distance. Make sure the display screen is at eye level or slightly lower when you are sitting in front of the monitor.

### *Notes on setup*

- ❑ Do not place your computer in a location subject to:
  - ❑ Heat sources, such as radiators or air ducts
  - ❑ Direct sunlight
  - ❑ Excessive dust
  - ❑ Moisture or rain
  - ❑ Mechanical vibration or shock
  - ❑ Strong magnets or speakers that are not magnetically shielded
  - ❑ Ambient temperature of more than 95° F (35° C) or less than 18° F (10° C)
  - ❑ High humidity
- ❑ Do not place electronic equipment near your computer. The computer's electromagnetic field may cause a malfunction.
- ❑ Provide adequate air circulation to prevent internal heat buildup. Do not place your computer on porous surfaces such as rugs or blankets, or near materials such as curtains or draperies that may block its ventilation slots. Leave a space of at least 8 inches (20 cm) behind the back panel of the computer.
- ❑ If the computer is brought directly from a cold location to a warm one, moisture may condense inside your computer. In this case, allow at least an hour before turning on your computer. If any problems occur, unplug your computer, and contact your Sony Service Center.

- ❑ The computer uses high-frequency radio signals and may cause interference to radio or TV reception. Should this occur, relocate the computer a suitable distance away from the set.
- ❑ Use only specified peripheral equipment and interface cables; otherwise, problems may result.
- ❑ Do not use cut or damaged connection cables.
- ❑ If the telephone company makes a service call to your home or office and determines that your computer is responsible for a problem, the telephone company may bill you for the service call. Also, if you do not disconnect your computer when it is adversely affecting the telephone line, the telephone company has the right to disconnect your service until you correct the problem.

### ***Handling your notebook***

- ❑ Clean the cabinet with a soft, dry cloth or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine, as these may damage the finish of your computer.
- ❑ Should any solid object or liquid fall into the computer, shut down your computer and then unplug it. You may want to have the computer checked by qualified personnel before operating it any further.
- ❑ Do not drop the computer or place heavy objects on top of the computer.
- ❑ Make sure to disconnect the power cord before cleaning the computer.
- ❑ Avoid rubbing the LCD screen as this can damage the screen. Use a soft, dry cloth to wipe the LCD screen.

### ***Handling the LCD screen***


- ❑ Do not leave the LCD facing the sun as it can damage the LCD. Be careful when using the computer near a window.
- ❑ Do not scratch the LCD or exert pressure on it. This could cause malfunction.
- ❑ Using the computer in low temperature conditions may produce a residual image on the screen. This is not a malfunction. When the computer returns to normal temperature, the screen returns to normal.

- ❑ The screen becomes warm during operation. This is normal and does not indicate a malfunction.
- ❑ The LCD is manufactured using high-precision technology. You may, however, see tiny black points and/or bright points (red, blue, or green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

### *Cleaning the display filter*

- 1 Remove the clips on the top of the display before removing the optional display filter as illustrated below.

#### *Display Filter Clips*

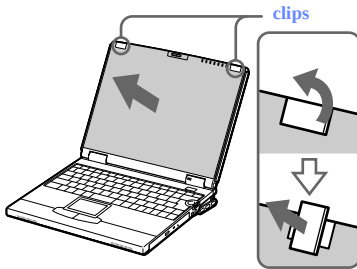


- 2 Hold the display filter by its sides to avoid leaving fingerprints on the display filter.
- 3 Wipe off the fingerprints left on the display filter with the filter cleaner. You can use commercially available cleaners.



Do not use solvents such as alcohol or thinner, as they may cause damage to the surface of the display filter. When using other chemical solvents, read the instructions thoroughly.

- 4 Insert the bottom of the display filter into the groove at the bottom of the display as illustrated below. Insert the display filter so that the clips' protruding parts face left.
- 5 Turn 90° to lock it in place.

## Installing Display Filter

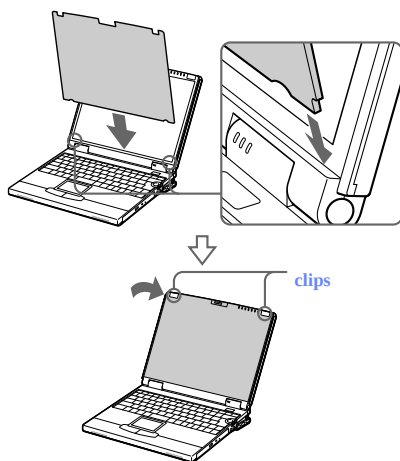


Sony computer supplies, accessories, and peripherals can be purchased from your local retailer or by accessing the Sony VAIO Direct Website (<http://vaio.sonymstyle.com/>), or by calling 1-888-315-7669 (toll free).

# Setting Up Your VAIO® Notebook

This section describes how to start using your computer and how to use your computer's internal and external devices, such as the touchpad, floppy disk drive, and DVD-ROM drive.

## Locating the Controls and Connectors


### Front

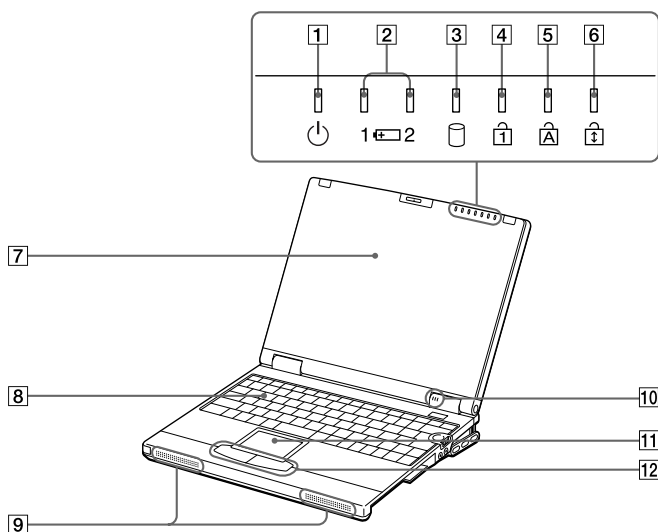

- |   |                            |
|---|----------------------------|
| 1 | Power indicator            |
| 2 | Battery 1 and 2 indicators |
| 3 | Hard disk drive indicator  |
| 4 | Num Lock indicator         |
| 5 | Caps Lock indicator        |


- |    |                                     |
|----|-------------------------------------|
| 6  | Scroll Lock indicator               |
| 7  | LCD (Liquid Crystal Display) screen |
| 8  | Keyboard                            |
| 9  | Speakers                            |
| 10 | Internal microphone                 |
| 11 | Touchpad                            |
| 12 | Left/right buttons                  |

Back

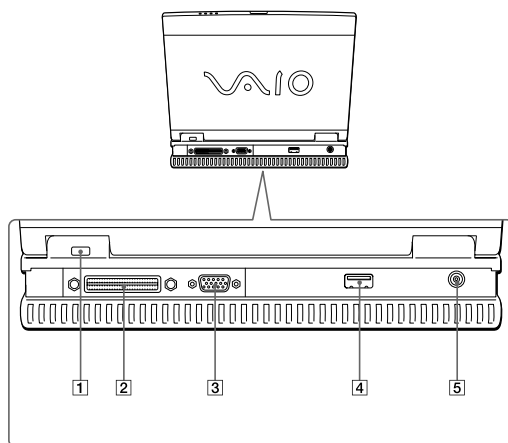

- |   |                                                                                                       |
|---|-------------------------------------------------------------------------------------------------------|
| 1 | Infrared port connector                                                                               |
| 2 | Docking /Floppy disk drive connector                                                                  |
| 3 |  Monitor connector |
| 4 |  USB connector     |
| 5 |  DC In connector   |

Left

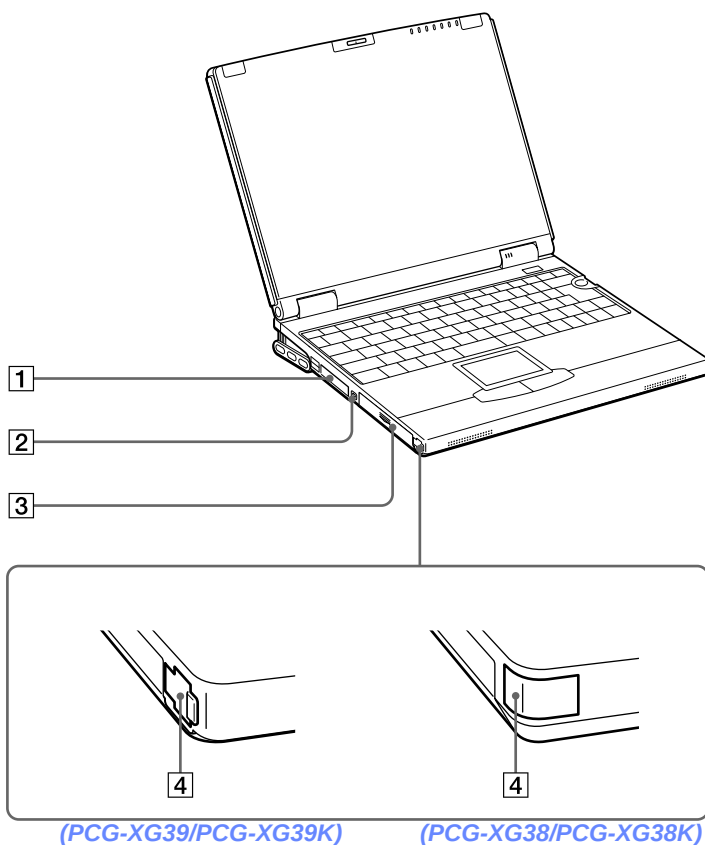

1 PC card slots


2 i.LINK® (IEEE1394) S400 connector\*

3 Battery bay

4 Phone line jack


\* i.LINK is a trademark of SONY used only to designate that the unit contains an IEEE1394 connector. All products with an i.LINK connector may not communicate with each other.

## Right

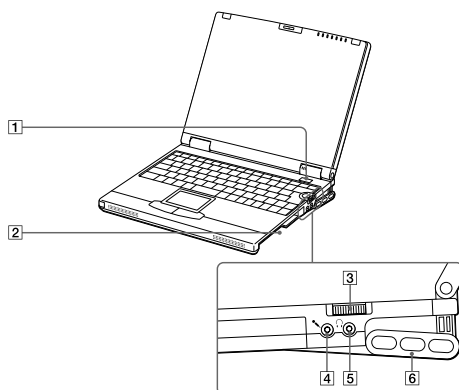

- |   |                      |
|---|----------------------|
| 1 | Power button         |
| 2 | Multipurpose bay     |
| 3 | Jog Dial™ control    |
| 4 | Microphone connector |
| 5 | Headphone connector  |
| 6 | Intercooler flap     |

## Bottom

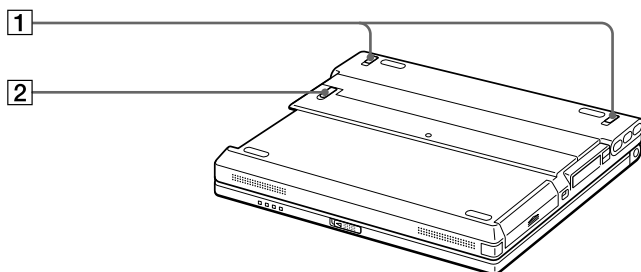

- |   |                                |
|---|--------------------------------|
| 1 | Intercooler flap lever         |
| 2 | Multipurpose bay release lever |


## Connecting a Power Source

You can use either AC power or a rechargeable battery pack as a power source.

### Using the AC Adapter


- 1 Slide the LCD lock lever to your right.
- 2 Open the computer.

### Opening your Computer

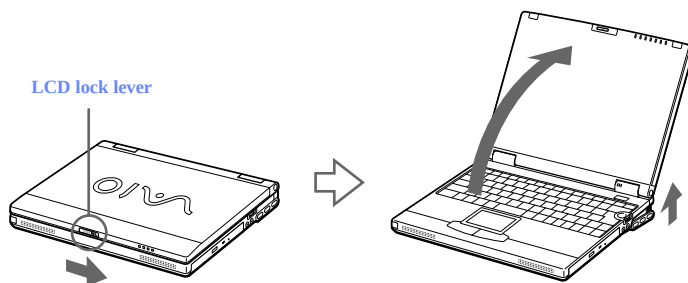

- 3 Plug the cable attached to the AC adapter into the DC In connector on the back of the computer.
- 4 Plug one end of the power cord into the AC adapter.
- 5 Plug the other end of the power cord into an electrical outlet.

## Connecting the AC Adapter

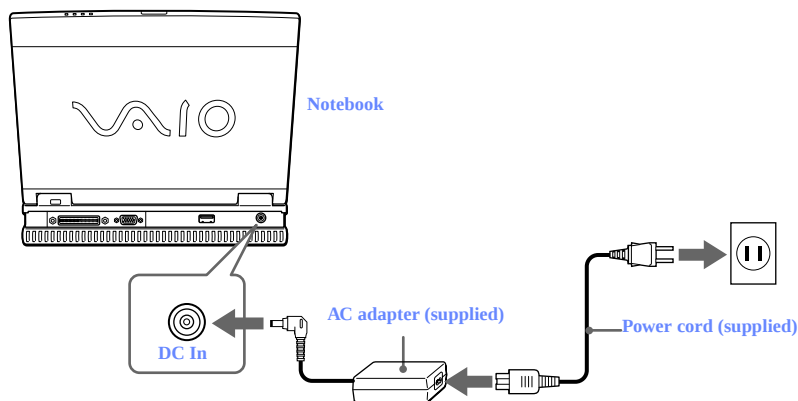

### Notes on the AC Adapter

- ❑ Your computer operates on 100V-240V AC 50/60 Hz.
- ❑ Do not share the AC outlet with other power-consuming equipment, such as a copy machine or shredder.
- ❑ You can purchase a power strip with a surge protector. This device prevents damage to your computer caused by sudden power surges such as those that may occur during an electrical storm.
- ❑ Do not place heavy objects on the power cord.
- ❑ To disconnect the cord, pull it out by the plug. Never pull the cord itself.
- ❑ Unplug your computer from the wall outlet if you will not be using the computer for a long time.
- ❑ When the AC adapter is not used, unplug it from the AC outlet.
- ❑ Use only the AC adapter supplied. Do not use any other AC adapter.

## Using Battery Power


You can use one or two battery packs as a source of power. The second battery pack inserts into the drive bay on the right side of the computer. (See “Using a Second Battery Pack” on page 56.) Additional battery packs are available as a separate option.

The battery pack that comes with your computer is not fully charged at the time of purchase. Follow the steps below to insert and charge the battery pack.

### *To insert the battery pack*


- 1 Open the cover of the battery bay on the left side of the computer.

### *Battery Bay*

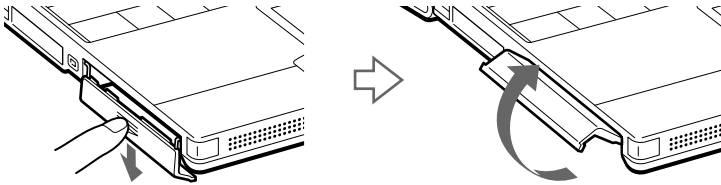

- 2 Insert the battery pack into the battery bay.

### *Inserting Battery Pack*

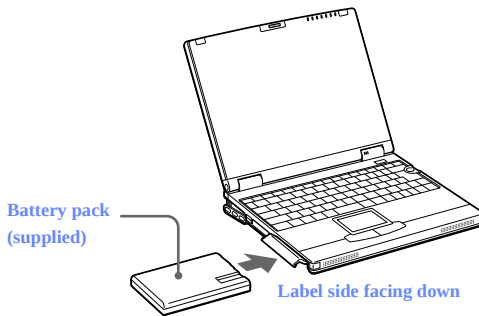

- 3 Close the cover of the battery bay until it clicks.



**If the Mini Docking Station is attached to your computer, do not insert or remove the battery pack. Lifting and turning the computer with the Mini Docking Station attached may cause the Mini Docking Station to disconnect from the computer.**

### To charge the battery pack

- 1 Connect the AC adapter to the computer.
- 2 Insert the battery pack.




The computer automatically charges the battery (the battery indicator light flashes in a double blink pattern as the battery charges).

- 3 When the battery is 85% full, the battery indicator light turns off. This process takes approximately two hours.



To charge the battery completely, continue charging for an additional hour. See "Displaying Detailed Battery Information" in the online manual *Customizing Your VAIO® Notebook*.

### Battery Indicator Lights (2)

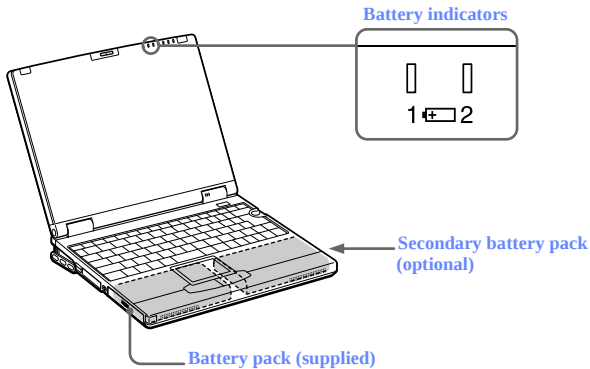


| Battery Indicator | Meaning                                                                                       |
|-------------------|-----------------------------------------------------------------------------------------------|
| 1                 | Indicates the status of the battery pack in the battery bay on the left side of the computer. |
| 2                 | Indicates the status of the battery pack in the drive bay on the right side of the computer.  |

**Battery Indicator****Light Status****Meaning**

|              |                                                                                                        |
|--------------|--------------------------------------------------------------------------------------------------------|
| On           | The computer is using battery power.                                                                   |
| Single blink | When BOTH the Battery indicator and Power indicator single-blink, the battery is running out of power. |
| Double blink | The battery is charging.                                                                               |
| Off          | The computer is using AC power.                                                                        |

**To remove the battery pack**

- 1 Open the cover of the battery bay.
- 2 Pull out the battery pack.

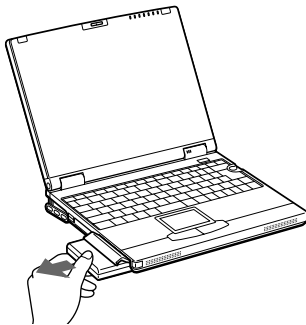**Removing the Battery Pack**

- 3 Close the cover of the battery bay.



**You will lose data if you remove the battery pack while the computer is on and not connected to the AC adapter or if you remove the battery while the computer is in power saving mode.**

**Notes on battery**


- ❑ To determine the remaining battery charge, see “Displaying Battery Information” in the online manual *Customizing Your VAIO® Notebook*.
- ❑ When the battery is running out of power, both the battery indicator light and power indicator light blink.

- ❑ When the computer is directly connected to AC power and a battery pack is in the battery bay, it uses power from the AC outlet.
- ❑ Keep the battery pack in the computer while it is directly connected to AC power. The battery pack continues to charge while you are using the computer.
- ❑ If the battery level falls below 10%, you should either attach the AC adapter to recharge the battery or shut down your computer and insert a fully-charged battery.
- ❑ You can extend battery life by changing the power management modes in the Power Management utility. See “Using Power Saving Modes” on page 69.
- ❑ The battery pack supplied with your computer is a lithium-ion battery and can be recharged at any time. Charging a partially discharged battery does not affect battery life.
- ❑ For some software applications and some peripheral devices, your computer may not enter System Hibernation mode when the battery life is low. To avoid loss of data when using battery power, you should save your data frequently and manually activate a power management mode, such as System Suspend or System Hibernation.
- ❑ Never leave the battery pack in temperatures above 140° F (60° C), such as under direct sunlight or in a car parked in the sun.
- ❑ Battery life is shorter in a cold environment. This is due to decreased battery efficiency at low temperatures.
- ❑ Charge the batteries at temperatures between 50° F and 80° F (10° C to 30 °C). Lower temperatures require a longer charging time.
- ❑ While the battery is in use or being discharged, the battery pack heats up. This is normal and is not cause for concern.
- ❑ Keep the battery pack away from all sources of heat.
- ❑ Keep the battery pack dry.
- ❑ Do not open or try to disassemble the battery pack.
- ❑ Do not expose the battery pack to any mechanical shock.
- ❑ If you are not using the computer for an extended period of time, remove the battery pack from the computer to prevent damage to the battery.
- ❑ If, after fully charging the battery pack, the battery power is still low, the battery pack may be reaching the end of its life and should be replaced.
- ❑ If you have not used the battery pack for a considerable amount of time, recharge the battery.

## Starting Your Computer

- 1 Slide the LCD lock lever in the direction of the arrow, and lift the cover.

### Opening the Computer

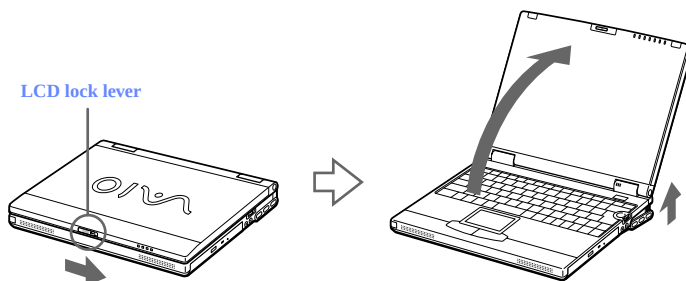


- 2 Press the power button of the computer until the green power indicator light turns on.



**(Windows Me only)** When starting your notebook for the first time, the VAIO InitManager dialog box will appear. Please select “OK” to begin initial setup. If you do not execute the initial setup, you cannot use part of VAIO original hardware functions such as Jog Dial, Power Management tool, scroll function of touchpad, and keyboard shortcut key function combined with the Fn key.

### Power Button

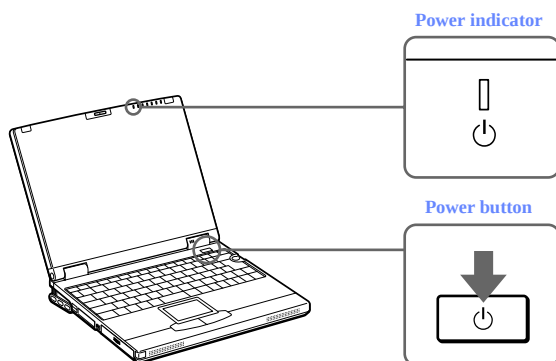

If you press the power button for more than four seconds, the computer turns off.

- 3 If necessary, adjust the brightness controls for the LCD display:
  - ☐ Decrease brightness, press Fn+F5 and then the down or left arrow key.
  - ☐ Increase brightness, press Fn+F5 and then the up or right arrow key.



**When connecting the supplied AC adapter to an AC outlet that has more than two outlets, do not plug the AC adapter into an outlet that is obstructed by another adapter. To prevent fire or electrical shock, the adapter must be firmly plugged into the outlet. If necessary, use a separate AC outlet.**

## Shutting Down Your Computer



**To avoid potential loss of data, follow these steps to shut down your computer.**

- 1 Click the Start button on the Windows taskbar.
- 2 Click Shut Down at the bottom of the Start menu to display the Shut Down Windows dialog box.
- 3 Select Shut down.
- 4 Click OK.



Respond to all prompts that warn you to save your documents..

- 5 Wait for your computer to turn off automatically. The power indicator (green) turns off.
- 6 Turn off any peripherals connected to your computer.



During a period of inactivity, you can conserve battery life by using System Suspend mode. See "System Suspend Mode" on page 69.

***If you are unable to shut down your computer:***

- 1 Close or end all operations by:
  - ☐ Closing all applications.
  - ☐ Removing the PC cards.
  - ☐ Disconnecting USB devices.
  - ☐ Ending Infrared Communication.
- 2 Restart the computer. You can restart your computer by pressing Ctrl+Alt+Delete keys (at the same time).



**If you are still unable to shut down the computer, you can press the power button and hold it for four seconds. This operation may result in data loss.**

***Closing your computer***

***Close the front panel***


- 1 Hold the clip on the left top of the front panel.



If you touch the LCD screen, you will leave fingerprints on the LCD screen.

- 2 Move the panel in direction of arrow. Completely close the front panel and locked in place.

***Front Panel***

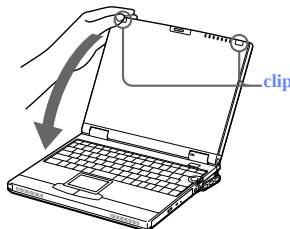


## Close the intercooler flap



The intercooler flap does not close automatically. You must disconnect all devices, such as the AC adapter or monitor, which are connected to the back of the computer before closing the intercooler flap.

- 1 Grasp both sides of the flap while sliding the levers with your thumbs.

### Intercooler Flap

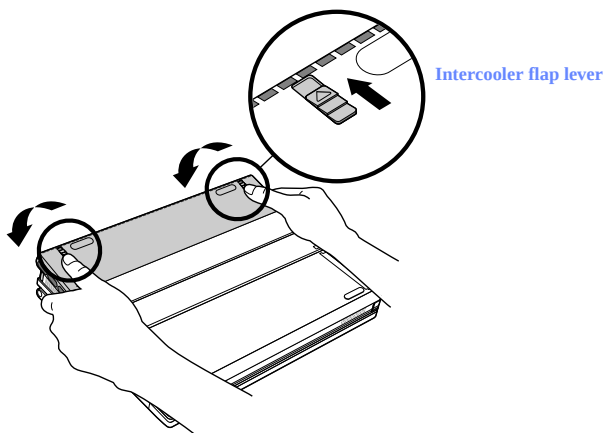


# Using Your VAIO® Notebook

## Using the Keyboard

Your keyboard is very similar to a typewriter's, but the keyboard has additional keys that perform specific computer-related tasks.

### Keyboard

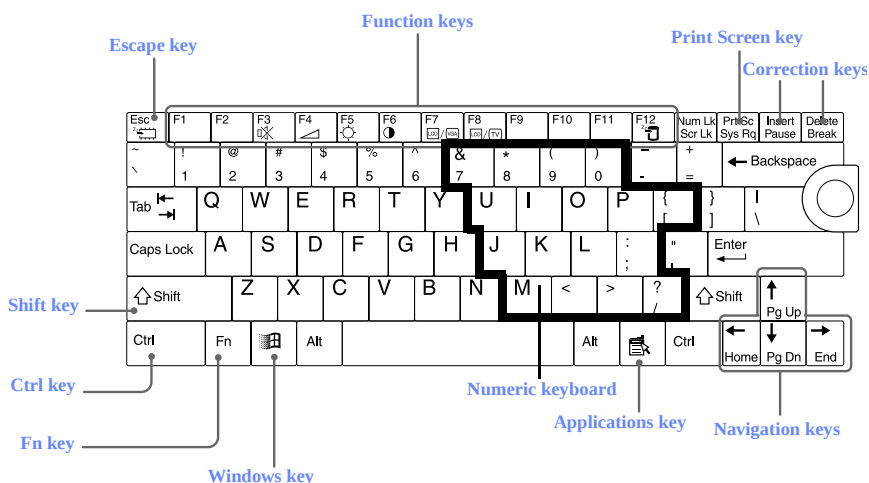

If the keycap comes off, put it back in its place and push down gently until it clicks into place. If the Enter key, Space key or Shift key comes off, see "Replacing a Keycap" on page 38. Do not take off the keycaps intentionally or push excessively when replacing them, as this may cause the unit to malfunction.

| Key                                                                                                     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Numeric keypad area                                                                                     | Contains the keys found on a typical calculator. Use the numeric keypad area to type numbers or to perform mathematical calculations such as addition and subtraction. Note: you must press the Num Lock key to activate the numeric keypad. (When you do so, the Num Lock light will be on.)                                                                                                                                                                                        |
| Navigation keys                                                                                         | Several keys are devoted to moving the cursor on the screen.                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Correction keys                                                                                         | The Insert, BackSpace, and Delete keys enable you to make corrections in your documents.                                                                                                                                                                                                                                                                                                                                                                                             |
| Function keys                                                                                           | The twelve function keys along the top of the keyboard are used to perform designated tasks. For example, in many applications, F1 is the Help key. The task associated with each function key may vary from one application to the next.                                                                                                                                                                                                                                            |
| Escape key                                                                                              | The Esc (Escape) key is used to cancel commands.                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Print Screen key                                                                                        | The Print Screen key takes an electronic snapshot of the screen and places it in the Windows Clipboard. You can then paste the screen shot into a document and print it.                                                                                                                                                                                                                                                                                                             |
| Operator keys                                                                                           | Several keys are always used with at least one other key: Ctrl, Alt, and Shift. When held down with another key, the Ctrl (Control) and Alt (Alternate) keys offer another way to give commands. For example, in many applications, instead of choosing the Save command from a menu, you can hold down Ctrl and press S (referred to as Ctrl+S). The Shift key operates the same way as on a typewriter; it is used to produce capital letters or special symbols such as @ and \$. |
| Windows key<br>      | The key with the Windows logo displays the Windows Start menu; it is the equivalent of clicking the Start button on the taskbar. See “Combinations and Functions with the Windows Key” on page 35.                                                                                                                                                                                                                                                                                   |
| Fn key                                                                                                  | The Fn key is used in combination with other keys to issue commands. See “Combinations and Functions with the Fn Key” on page 37.                                                                                                                                                                                                                                                                                                                                                    |
| Applications key<br> | The Applications key displays a shortcut menu of context-sensitive choices. Pressing this key is the equivalent of clicking the right mouse button.                                                                                                                                                                                                                                                                                                                                  |


## Combinations and Functions with the Windows Key
 
| <i>Combination</i>                                                                              | <i>Function</i>                                                                                                                                                  |
|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  + F1          | Displays Windows Help.                                                                                                                                           |
|  + Tab         | Switches the selected button on the taskbar.                                                                                                                     |
|  + E           | Displays Windows Explorer.                                                                                                                                       |
|  + F           | Displays the Windows Find: All Files window to find a file or folder. This is the equivalent of selecting Find and then Files or Folders from the Start menu.    |
|  + Ctrl + F    | Displays the Windows Find: Computer window where you can locate other computers. This is the equivalent of selecting Find and then Computer from the Start menu. |
|  + M           | Minimizes all displayed windows.                                                                                                                                 |
| Shift +  + M   | Returns all minimized windows to their previous size.                                                                                                            |
|  + R           | Displays the Run window. This is the equivalent of selecting Run from the Start menu.                                                                            |
| Fn +  + Insert | Displays the Properties window. This is the equivalent of double-clicking the System icon in the Control Panel.                                                  |

## Indicators

| Indicator                                                                                            | Function                                                                                                                                                                                                        |                                                                                |
|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| Power<br>           | Light is green when the power to the computer is turned on. Light is red in System Idle mode, and flashes red in System Suspend mode. Turns off when the computer is in System Hibernation mode or powered off. |                                                                                |
| Battery 1<br><br>1  | Indicates the status of the battery inserted in the battery bay on the left side of the computer.                                                                                                               |                                                                                |
| Battery 2<br><br> 2 | Indicates the status of the battery inserted in the drive bay on the right side of the computer.                                                                                                                |                                                                                |
| Hard disk<br><br>   | Lights when data is being read from or written to the hard drive. Do not enter System Suspend mode or turn off the computer when this indicator light is on.                                                    |                                                                                |
| Light                                                                                                | On                                                                                                                                                                                                              | Off                                                                            |
| Num Lock                                                                                             | The number keys in the numeric keypad are active.                                                                                                                                                               | The alphanumeric character keys in the keypad area are active.                 |
| Caps Lock                                                                                            | The letters appear in uppercase as you type. The Shift key lowers the case of typed letters when Caps Lock is on.                                                                                               | Letters appear in lower case as you type (unless you hold down the Shift key). |
| Scroll Lock                                                                                          | The screen scrolls differently. (Exactly how it scrolls depends on the specific application. It has no effect in many applications.)                                                                            | Information moves across the display normally.                                 |

## Combinations and Functions with the Fn Key

| Combinations/Feature                                                                                                                                                                                                 | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Fn+  (ESC)<br>System Suspend                                                                                                        | Puts the system into System Suspend mode, a power management state. To return the system to the active state, press any key or press the power switch on your computer.                                                                                                                                                                                                                                                                                                                        |
| Fn+  (F3)<br>Mute On/Off                                                                                                            | Toggles the built-in speaker off and on.                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Fn+  (F4)<br>Speaker volume                                                                                                         | Adjusts the built-in speaker volume.<br>To increase volume, press Fn+F4, then  or  .<br>To decrease volume, press Fn+F4, then  or  .                       |
| Fn+  (F5)<br>Brightness control                                                                                                     | Adjusts the brightness of the LCD.<br>To increase light intensity, press Fn+F5 and then  or  .<br>To decrease light intensity, press Fn+F5 and then  or  . |
| Fn+  /  (F7)<br>Switch to the external display/LCD | Toggles through the LCD, external display (connected to the  Monitor connector) and both LCD and external display.<br><div style="text-align: center;"></div>                                                                                                                                                                |
| Fn+  /  (F8)                                       | Toggles through the external display connected to an optional Mini Docking Station (PCGA-PSX1) and the LCD.<br><div style="text-align: center;"></div>                                                                                                                                                                                                                                                        |
| Fn+  (F12)<br>System Hibernation                                                                                                   | Provides for the lowest level of power consumption. When you execute this command, the state of the system and state of the peripheral devices are written to the hard disk and the system power is turned off. To return the system to the original state, use the power button to turn on power.                                                                                                                                                                                             |

| <i>Combinations/Feature</i> | <i>Function</i>                                                                                                           |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Fn+D<br>Video Standby       | Turns off the LCD to save power. To turn the LCD back on, press any key (Windows Me™ only).                               |
| Fn+E<br>Eject               | Ejects the CD or DVD media.                                                                                               |
| Fn+S<br>System Idle         | Puts the system into System Idle mode, a power management state. To return the system to the active state, press any key. |



You can carry out these functions using the Jog Dial control. See “Using the Jog Dial Control” on page 66 for more information.


Some functions are not available until Windows launches.

## *Replacing a Keycap*


Replace the Enter keycap, Shift keycap and Space keycap as described below. For other keys, place the keycaps in their original place and gently push down until they click.

### *To replace the enter key*

#### *Enter Key Back*

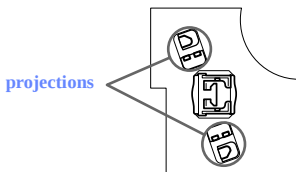


#### *Attaching Enter Key*

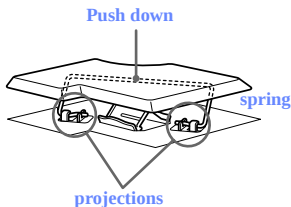


## *To replace the shift or space key*

### *Back*

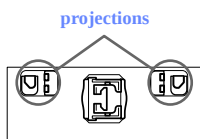

### *Attaching the Shift or Space Key*

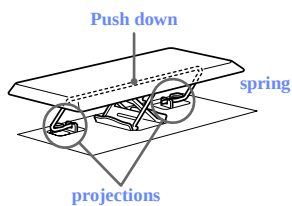


Do not use force to remove the keycaps as this may result in a malfunction.

Do not push too hard on the keycaps when placing them.

## Using the Touchpad

The keyboard contains a cursor-pointing device called a touchpad. You can point to, select, drag, and scroll objects on the screen using the built-in touchpad.

### Using the Touchpad

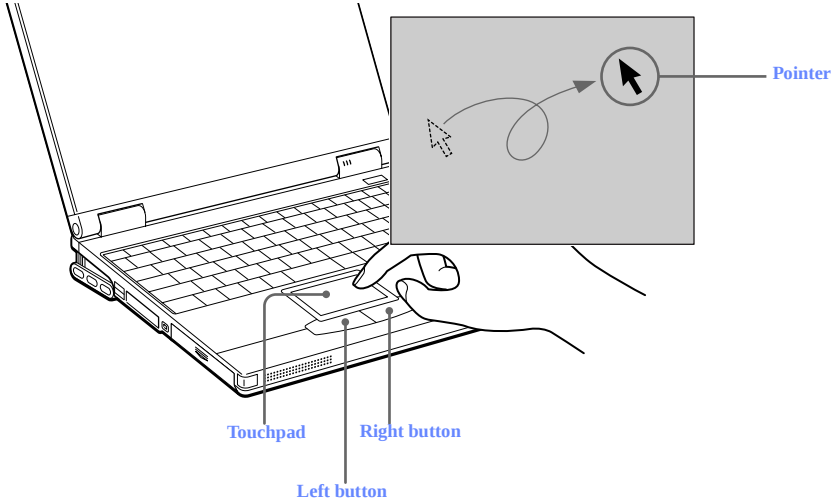

| Action       | Description                                                                                                                                                                                                                             |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Point        | Slide one finger on the touchpad to place the pointer on an item or object.                                                                                                                                                             |
| Click        | Press the left button once.                                                                                                                                                                                                             |
| Double-click | Press the left button twice.                                                                                                                                                                                                            |
| Right-click  | Press the right button once. In many applications, this action displays a shortcut menu of context-sensitive choices.                                                                                                                   |
| Drag         | Slide one finger while pressing the left button.                                                                                                                                                                                        |
| Scroll       | Move your finger along the right edge of the touchpad to scroll vertically. Move your finger along the bottom to scroll horizontally. (The scroll function is available only with applications that support a touchpad scroll feature.) |



See Mouse Properties for information on touchpad features, such as clicking both buttons simultaneously, adjusting touchpad speed, and Easy Launcher functions. To access Mouse Properties, click the Start button, point to Settings, point to Control Panel, and then click the Mouse icon in the Control Panel.

## Using the Floppy Disk Drive


You can use the supplied floppy disk drive either as an external drive or as an internal drive in the drive bay.

To ensure proper operation, do not insert or remove the disk drive when the computer is in power saving mode.

### To use as an external drive

Connect the floppy disk drive to the computer using the floppy disk drive cable (supplied) with the VAIO logo facing up.

#### Connecting Floppy Disk Drive

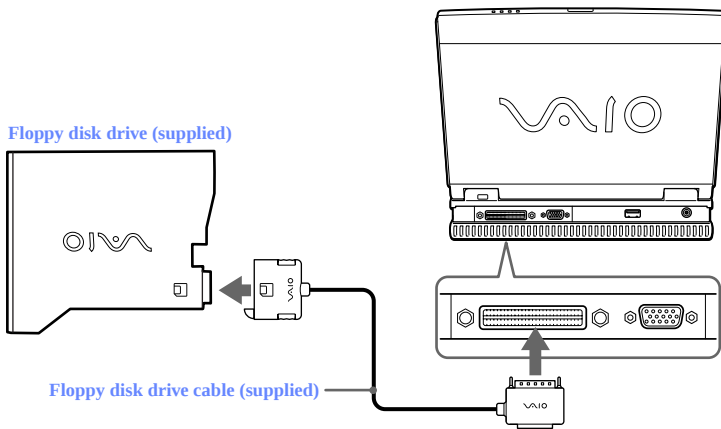

Align the logo on the cable with the slot connection and insert the connector straight into the slot.




While using the floppy disk drive, do not put the system into Power Saving Mode. Power saving mode may not work properly and unsaved data may be lost.

### *To use as an internal drive*

- 1 If another device is in the multipurpose bay, remove the device. See “To remove the DVD-ROM drive (Windows Me only)” or “To remove the DVD-ROM drive (Windows 2000 models)” .
- 2 Insert the floppy disk drive into the multipurpose bay with the VAIO logo facing up. Continue pushing the drive into the bay until the RELEASE lever locks into place.

### *Inserting Floppy Disk Drive*

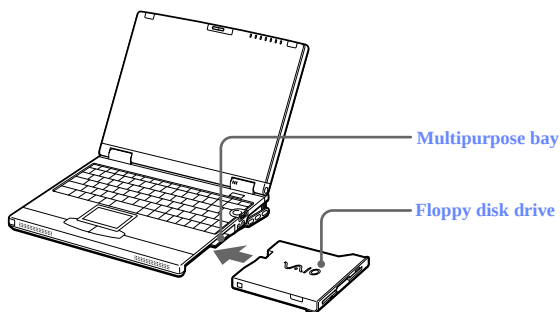


### To insert a diskette



You can insert a floppy disk, even if the LED indicator is on.

- 1 Hold the diskette with the label side facing up.
- 2 Gently push the diskette into the drive until it clicks into place.


### Inserting Diskette

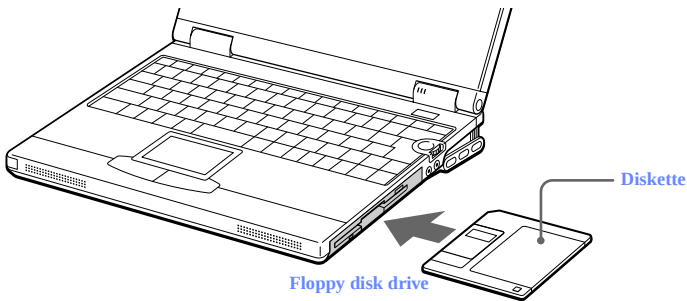

### To remove a diskette

- ☐ When you finish using the diskette, wait until the LED indicator turns off and then press the Eject button to remove the diskette.

### Ejecting Diskette

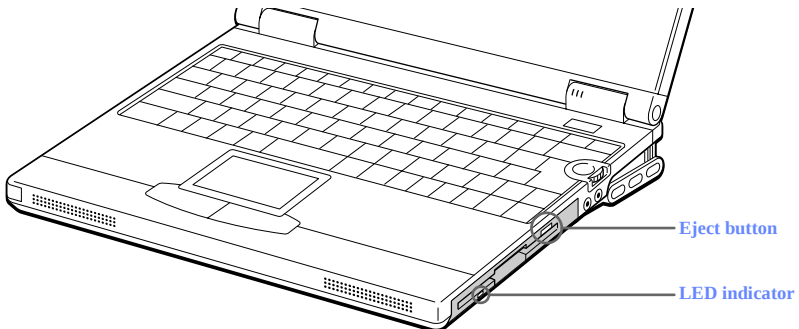

Do not press the Eject button when the LED indicator is turned on, as data may be lost.

### **Handling Diskettes**

- ❑ Do not open the shutter manually and touch the surface of the diskette.
- ❑ Keep diskettes away from magnets.
- ❑ Keep diskettes away from direct sunlight and other heat sources.

### **Removing the floppy disk drive (Windows Me models)**

When the computer is off, skip steps 1 and 3.

- 1 Right-click the Power Management icon in the task tray and choose “Remove multi-purpose bay device” [FDD] when using an internal drive. When using an external drive, choose “Remove external FDD” instead.
- 2 Slide the RELEASE lever on the bottom of the computer in the direction of the arrow and slide the drive out of the multipurpose bay.
- 3 Click OK on the message screen.

### **Removing the floppy disk drive using the Jog Dial™ control**

To remove the floppy disk drive from the multipurpose bay using the Jog Dial control:

- 1 Rotate the Jog Dial control to Power Management, and then press the Jog Dial control. The Power Management window appears.
- 2 Rotate the Jog Dial control to Multipurpose bay, and then press the Jog Dial control.


To remove an external floppy disk drive, select External floppy disk drive, and then press the Jog Dial control.

The Device Swapping window appears. Remove the drive, and click OK.



Note: If your computer is turned off, you do not have to follow these instructions.

### Removing Floppy Disk Drive

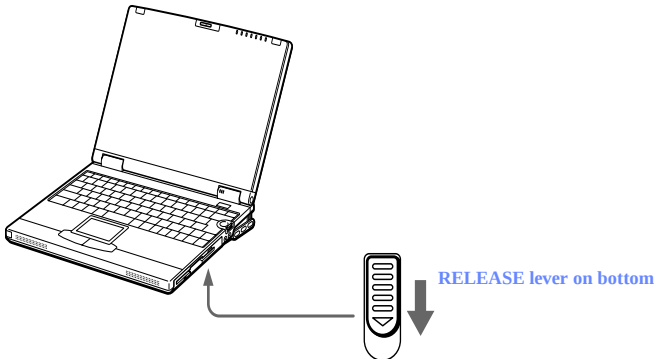

When the multipurpose bay is empty, attach the weight saver to it. See “Using a Second Battery Pack” on page 56 for details on attaching the weight saver.

### Removing the floppy disk drive (Windows 2000 models)



If your computer is turned off, you do not have to follow these instructions.

- 1 Double-click  in the system task tray.
- 2 The “Unplug or Eject” dialog box appears.
- 3 In the Unplug or Eject Hardware dialog box, select the appropriate option, and then click Stop.
- 4 Confirm the device and click OK.
- 5 A message appears informing you that the device can now be safely removed from the system.
- 6 Slide the RELEASE lever on the bottom of the computer in the direction of the arrow, and then unplug the floppy disk drive from the computer.

## Using the DVD-ROM Drive

Your computer comes with a DVD-ROM drive. You can play both DVDs and CDs.




When the computer is in Power Saving mode, you cannot insert a disc. See “Controlling Power Management” in the online manual *Customizing Your VAIO® Notebook* for more information on Power Saving modes.

### To insert a Disc

- 1 Turn on the computer.
- 2 Press the Eject button to open the DVD-ROM drive.


The tray slides out.

### DVD Eject

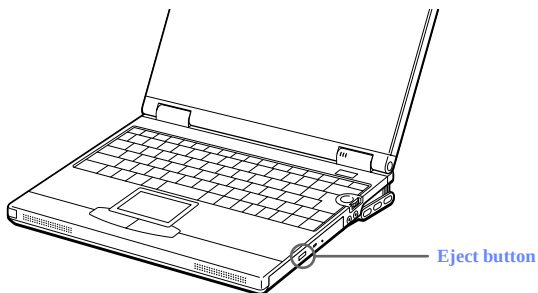

- 3 Place a DVD or CD in the tray with the label side facing up. For DVDs, which can be played on both sides, the side of the disc facing up is the side that plays. Push the disc onto the hub until the disc clicks into place.

#### Inserting a DVD/CD

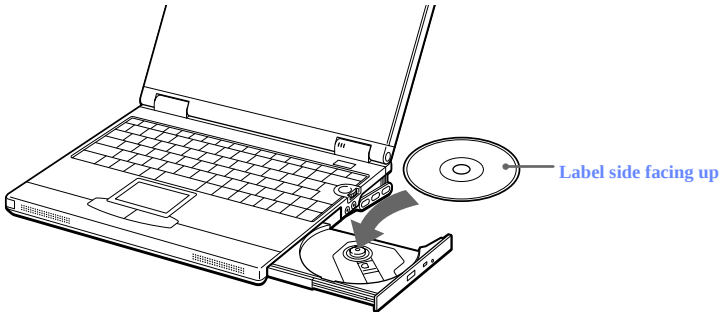

- 4 Close the tray by pushing it gently.



While using the DVD-ROM drive in the multipurpose bay, do not put the system into Power Saving Mode. Power saving mode may not work properly and unsaved data may be lost.




Be sure to seat the disc firmly over the DVD-ROM drive hub fingers. If you do not seat the disc firmly, you could damage your DVD-ROM drive and you may not be able to open the tray.

When you finish using a disc, wait until the LED indicator light turns off, then press the Eject button to remove the disc.

When the computer is in Power saving mode, you cannot remove a disc. See “Controlling Power Management” in the online manual *Customizing Your VAIO® Notebook* for more information about Power Saving modes.

If the disc does not come out when you press the Eject button, turn off the computer and insert a thin, pointed object into the manual eject hole.

## Manual Eject Hole

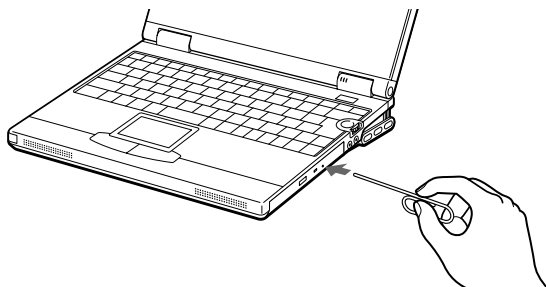

## To play DVDs

When you play DVDs on a television connected to the optional mini docking station (PCGA-PSX1), a part of the video screen will not appear with the factory setting. Adjust the display resolution to 640 x 480 as described in “Selecting the Display Mode” in the online manual *Customizing Your VAIO® Notebook*.

 When playing DVD movies on battery power, set the power management profile to DVD profile. With other profiles, the movies are choppy. As an alternative, you can set the power management profile to Automatic Profile Selection, which will cause the DVD profile to be selected automatically whenever you insert a DVD. See “Controlling Power Management” in the online manual *Customizing Your VAIO® Notebook* for information on how to set the power management profile.

You cannot insert or remove the DVD-ROM drive while the computer is in power saving mode, as a malfunction may result.



**Some discs recorded at 20 or 24 bits may produce noise while playing. If you have audio devices connected, this may cause damage to your hearing and the speakers. Reduce the volume before playing such discs.**

**You cannot switch between LCD and TV if you press Fn+F8 when a DVD is inserted in the DVD-ROM drive.**

### **To remove the DVD-ROM drive (Windows Me only)**

When the computer is off, skip steps 1 and 3.

- 1 Right-click the AC Power icon in the task tray and choose “Remove multipurpose bay device [IDE].” The message screen appears.
- 2 Slide the RELEASE lever on the bottom of the computer in the direction of the arrow and slide the DVD-ROM drive out of the multipurpose bay.
- 3 Click OK on the message screen.



Be sure to insert the weight saver into the multipurpose bay when the bay is empty. See “To insert a second battery pack” on page 56 for details on inserting the weight saver.

### **To remove the DVD-ROM drive (Windows 2000 models)**



If your computer is turned off, you do not have to follow these instructions.

- 1 Double-click  in the system task tray.
- 2 The “Unplug or Eject” dialog box appears.
- 3 In the Unplug or Eject Hardware dialog box, select the appropriate option, and then click Stop.
- 4 Confirm the device and click OK.
- 5 A message appears informing you that the device can now be safely removed from the system.
- 6 Slide the RELEASE lever on the bottom of the computer in the direction of the arrow, and then unplug the DVD-ROM drive from the computer.



If your computer is turned off, you do not have to follow these instructions.


### **To insert the DVD drive**

You do not need to shut down the computer to insert the DVD-ROM drive into the multipurpose bay.



Do not insert the floppy disk drive while the notebook is in power saving mode.

## Inserting DVD Drive

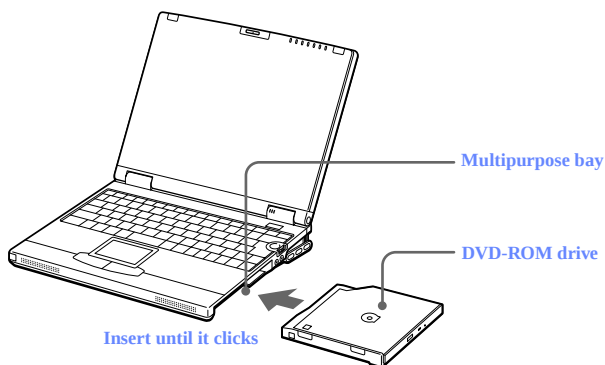

## Notes on CD and DVD media

### Handling CD and DVD media

- ❑ Do not touch the surface of the disc.
- ❑ Do not drop or bend the disc.

### Cleaning CD and DVD media

- ❑ Fingerprints and dust on the surface of a disc may cause read errors. Proper care of the disc is essential to maintain its reliability. Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray, as they may cause damage to the disc.
- ❑ For normal cleaning, hold the disc by its edge and use a soft cloth to wipe the surface from the center out.
- ❑ If the disc is badly soiled, moisten a soft cloth with water, wring it out well, and use it to wipe the surface of the disc from the center out. Wipe off any remaining moisture with a dry, soft cloth.

## Using PC cards

Your computer includes two PC card slots. PC cards allow you to connect portable external devices, such as another hard disk drive, or to connect a network.




The PC card slots can accommodate two Type II PC cards, or one Type III PC card. These slots are compatible with Card Bus. Use the lower slot for Type III PC cards. You do not need to shut down your notebook before inserting or removing a PC card.

### To insert a PC Card

Use the lower slot for Type III PC cards.

- 1 Pull the PC card RELEASE button away from the computer, and then push it in toward the computer.


### PC Card Release Button

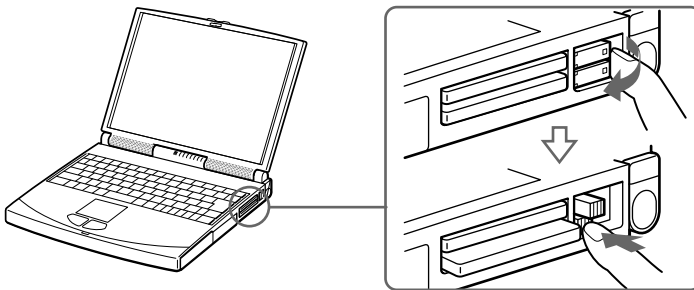

**2** Remove the PC card slot protector.


When you use a Type III PC card, you need to remove both the top and bottom PC card slot protectors.

*Removing PC Card Slot Protector*

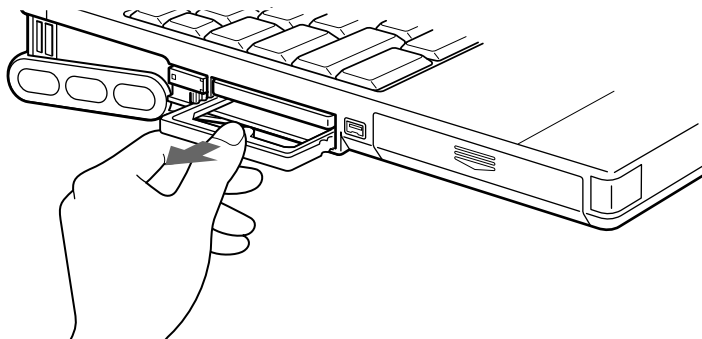

**3** Insert the PC card into the PC card slot with the front label facing up. Gently push the card into the slot until the card is fixed into the connector. The RELEASE button comes out. Push down the RELEASE button toward the display panel.

*Inserting PC Card*

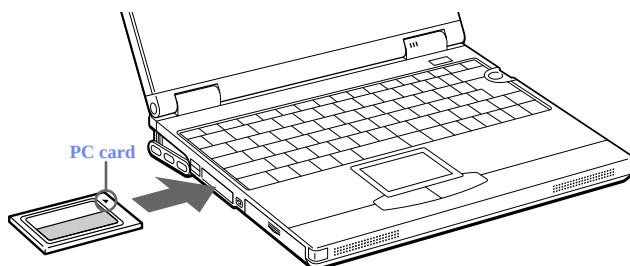




Do not force a card into the slot, as this may damage the connector pins. If you have difficulty inserting a card, check that you are inserting the card with the correct orientation. See the manual that came with your PC card for more information on use.

For some PC cards, if you alternate between normal power operation and the System Suspend or System Hibernation power management modes while the card is inserted, you may find that a device connected to your system is not recognized. Restart your system to correct the problem.

### Removing PC card

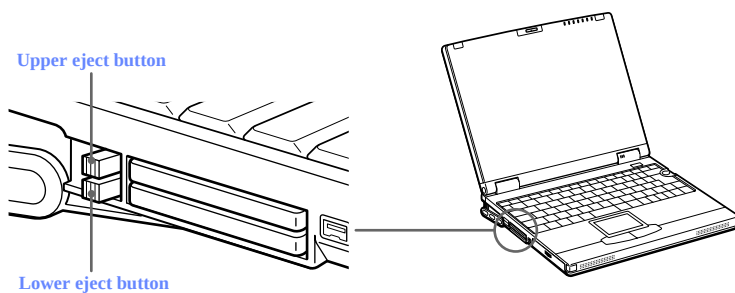

Insert the PC card slot protector back into the empty slot.

### Removing a PC card



If your computer is turned off, you do not have to follow these instructions.

- 1 Double-click  in the system task tray.
- 2 The “Unplug or Eject hardware” dialog box appears.
- 3 In the Unplug or Eject Hardware dialog box, select the appropriate option, and then click Stop.
- 4 Confirm the device and click OK.

- 5 A message appears informing you that the device can now be safely removed from the system.
- 6 Press the PC card RELEASE button to remove the PC card.



**When using longer PC cards (Wireless LAN card, etc.) do not move your computer while a PC card is inserted. If the PC card gets a strong shock, your computer may be damaged.**

**Do not use force to insert your PC card as it may damage your computer.**


## Using Infrared Communication Devices

Your computer includes an infrared port, located on the left side. You can use this port to communicate with other infrared-equipped devices with compatible protocols, such as a digital still camera or other computers.

### *To use infrared communication with another computer*

Align the infrared ports on the two computers so that they are in a direct line.

### *Connecting with Infrared*

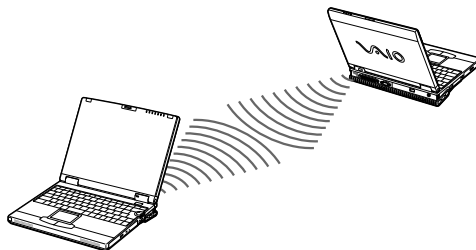



Infrared communication capability can be turned on and off. By default, it is disabled when your system is shipped. To enable infrared use, click the infrared icon in the Windows Control Panel and select the Enable infrared communication checkbox on the Options tab.

You can disable infrared communication when you are not using it to conserve battery life.

Use the infrared icon in the Windows Control Panel to enable and disable infrared communication. Do not use the icon in the taskbar.

Check the Status tag of the Infrared Monitor in the Windows Control Panel to determine if the infrared device is detected.

If the two devices are too far apart or too close together, data transfer may be interrupted or there may be noise in the transmission.


Do not cover the infrared ports with your hand or any other object.

Avoid direct sunlight, fluorescent light, or flashing incandescent light near the infrared ports.

See the manual that came with your digital still camera or other infrared communication device for more information on installation and use.

The active area of infrared transmission extends about  $39\frac{3}{8}$  inches (1 meter) with an approximate radius of 15 degrees.

### Infrared Range

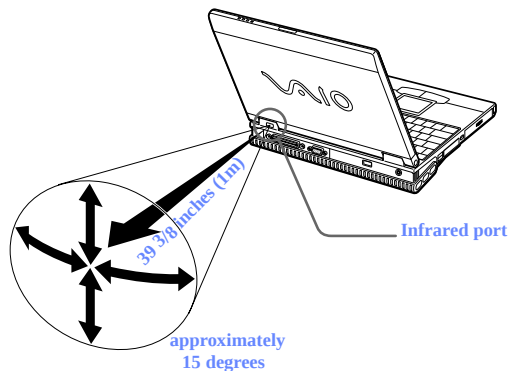

## Using a Second Battery Pack


You can purchase a second rechargeable battery pack. With two battery packs, you can extend the time that you use your computer with battery power. When using two battery packs, the battery pack you insert first charges first. The battery pack you insert second charges when the first battery pack is 85% full. You can monitor which battery pack is charging by observing the battery indicator lights.

### To insert a second battery pack

- 1 If another device is in the multipurpose bay, remove the device. See “To remove the DVD-ROM drive (Windows Me only)” on page 49
- 2 Insert the battery pack into the multipurpose bay.


If the battery is being used, the battery 2 indicator light turns on.

### Inserting Second Battery Pack

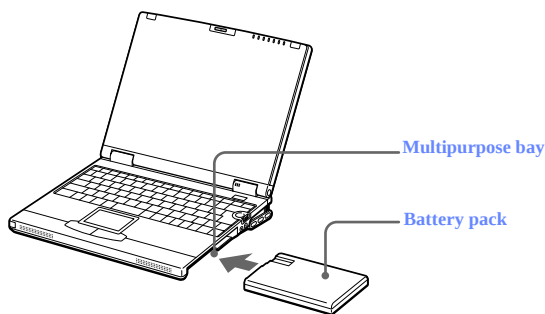

- 3 Attach the weight saver to the computer to stabilize the battery pack.  
Insert the tab of the weight saver into the hollow of the multipurpose bay slot, and then push the weight saver into the multipurpose bay until it clicks.


### Attaching Weight Saver

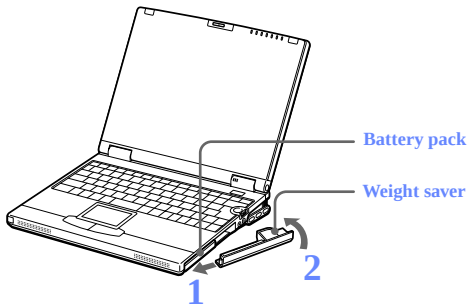

### To charge the second battery pack

Keep the battery pack in the computer while it is connected to AC power. The battery indicator flashes while the battery is charging. See “To charge the second battery pack” on page 57 for more information.

### Charging Second Battery Pack

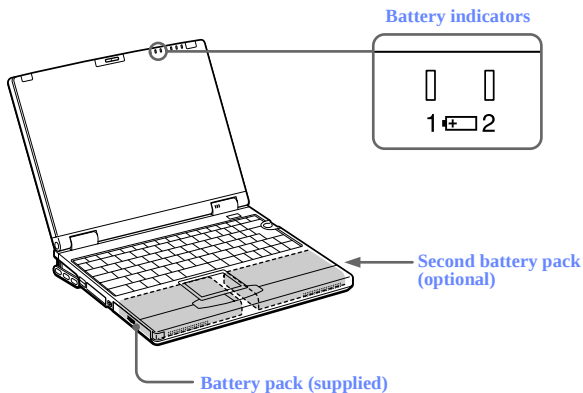


### To remove the second battery pack

- 1 There is a RELEASE lever on the bottom of the weight saver. To remove the battery pack, slide the RELEASE lever on the bottom of the computer in the

direction of the arrow. See also “Removing the floppy disk drive (Windows Me models)” on page 44.

### Removing Second Battery Pack

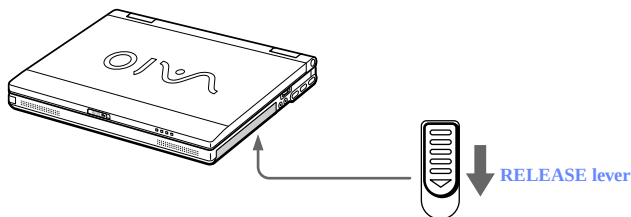

- 2 Remove the weight saver, and then pull out the battery pack.
- 3 Reinsert the weight saver.



If you attach two battery packs, you can remove either of them without shutting down the computer. When removing one battery pack, make sure that the other battery pack's indicator is on. If the indicator of the battery pack you are going to remove is on, right-click  in the task tray and switch it in the Select the battery pack in use window.


## Using the Weight Saver

The weight saver protects the multipurpose bay when it is empty.

### To attach the weight saver

- 1 If another device is in the multipurpose bay, remove the device.

### Inserting the Weight Saver

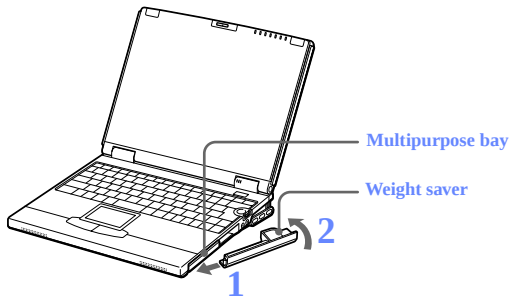


- 2 Slide the weight saver in the direction of the arrow until it clicks.

### To remove the Weight Saver

To remove the weight saver, slide the RELEASE lever on the bottom of the computer in the direction of the arrow.

### Release Lever

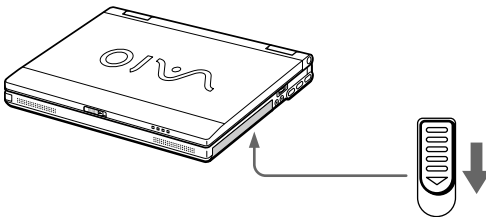

## Removing the Optional Hard Drive (PCGA-HDX10)

### Windows Me models

- 1 Click the Remove multipurpose bay device icon on Power Management. The Device Swapping message appears.
- 2 Slide the Release lever on the bottom of the unit in the direction of the arrow and hold while sliding the device out of the multipurpose bay.
- 3 Click OK.

### Windows 2000 models

- 1 Double-click  in the system task tray.
- 2 The “Unplug or Eject” dialog box appears.
- 3 In the Unplug or Eject Hardware dialog box, select the appropriate device, and then click Stop.
- 4 Confirm the device and click OK.
- 5 A message appears informing you that the device can now be safely removed from the system.
- 6 Slide the RELEASE lever on the bottom of the computer in the direction of the arrow and then unplug the drive from the computer.



When the computer is in power saving mode, you cannot remove the hardware device




While using the optional hard drive (PCGA-HDX10) in the multipurpose bay, do not put the system into Power Saving Mode. Power saving mode may not work properly and unsaved data may be lost.

## Using Smart Connect

### Windows Me

You can connect your VAIO® notebook to another VAIO computer that has the preinstalled Windows Me operating system or the Sony Smart Connect 3.0 software preinstalled. You may use an i.LINK® cable (optional) to connect the two systems and then use one computer to edit, copy, or delete files on the other computer. You can also print from a printer that is attached to either computer. Select the STD mode in Smart Connect 3.0 software to connect with another VAIO computer that has Windows Me preinstalled.

### Connecting with an i.Link Cable

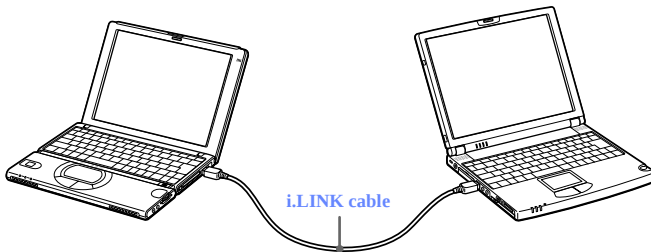

### Windows 2000

The preinstalled Smart Connect software allows you to use an i.LINK® cable (optional) to connect your VAIO notebook to another VAIO computer that also has Smart Connect or preinstalled Windows Me. You can then use one computer to edit, copy or delete files on the other computer. You can also print from a printer attached to either computer.

See Smart Connect online help for more information.



When you connect two VAIO computers, you must assign each computer a unique name. The computers can be identified by this unique name when the two computers are networked together.




If you have previously purchased a VAIO computer or notebook that does not have the Windows Me operating system or Smart Connect 3.0 software preinstalled, consult the Sony website for support options (<http://www.sony.com/pcsupport>).

## Connecting an i.LINK®-compatible Device

You can connect an i.LINK-compatible device such as a digital video camera recorder to the  S400 connector. You can then download digital pictures from the i.LINK-compatible digital video camera recorder.

 i.LINK cables compatible with your VAIO notebook include cables with the following part numbers: VMC-IL4415 (a 1.5-meter cable with a 4-pin connector at each end), VMC-IL4615 (a 1.5 meter-cable with a 4-pin connector at one end and a 6-pin connector at the other), and VMC-IL4408A (a 0.8-meter cable with a 4-pin connector at each end). You can purchase these cables from your local retailer, through the Sony VAIO® Direct Web site (<http://vaio.sonymstyle.com>), or by calling 1-888-315-7669 (toll free).

### i.LINK Port

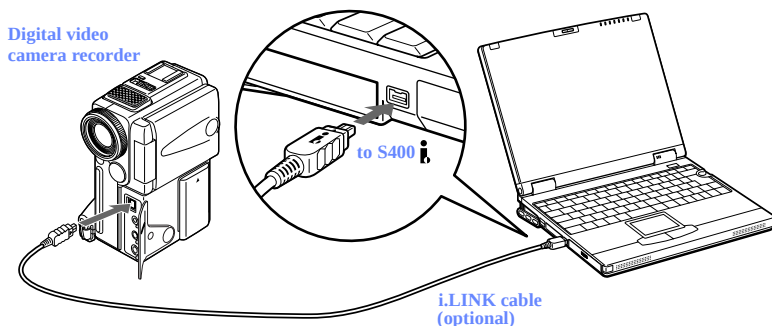



The Sony digital video camera recorder is pictured; you may need to connect your camera differently.

On Sony digital video cameras, connectors labeled “DV In/Out” or “i.LINK” are i.LINK-compatible.

See the manual that came with your i.LINK-compatible device for more information on installation and use.

Do not connect more than one digital video camera at a time. The software supplied with your computer will not recognize multiple cameras.

The i.LINK connector on the computer does not supply power to external devices. If the external device requires power from the i.LINK connector, you cannot use the device with the computer.

The computer supports transfer rates up to 400 Mbps; however, the actual transfer rate depends on the external device.

The i.LINK features available may vary depending on the software applications you use. See the documentation that came with your software for more information.

The connections and features may vary depending on the i.LINK-compatible devices.

You can connect the digital video camera recorder to your notebook or to the optional i.LINK port replicator. While the digital video camera recorder is connected to your notebook or to an i.LINK port replicator, do not connect any other device to the other i.LINK connector on your notebook.

## DVgate™

### Digital Video Captures

If your system displays the message, “Failed to record to DV deck, please check deck’s power status, cable connection....”, while you are recording images to a digital video device using DVgate software, close all open applications, and restart your computer. Frequent recording of images to a digital video device while using DVgate may cause this situation to occur.

For more information on DVgate software, see the DVgate online help.

### ***Adjusting Image Resolution***

If the images on the LCD do not display smoothly, the resolution may not be set correctly. To check the resolution, click the Setup button in the DVgate Motion-Monitor window. Point to Settings, and then select Low Resolution. The settings you change in this menu affect the images in the monitor window only. Movie data imported to your hard drive and images recorded to DV devices will not be affected.

### ***Hard Drive Partition***

In order to improve the performance of your computer's DVgate™ Motion software, the hard disk drive on your computer has been formatted with two partitions, C and D. The size of the D partition is approximately 12 GB on PCG-XG38/PCG-XG38K and 18 GB on PCG-XG39/PCG-XG39K. DVgate saves files to the D partition. This prevents large video captures from consuming the available space on your C partition. To maintain optimum performance of DVgate, you should defragment or format the D partition regularly.


## VAIO® Action Setup

VAIO Action Setup manages the settings for your computer's Jog Dial control, internal timer, and i.LINK interface. An overview of each of these functions is provided in the next few pages. For more information on changing the settings using VAIO Action Setup, right-click the Jog Dial control icon  or , in the task tray and click Help Topics.

### Jog Dial™ Control

Your computer is equipped with a Jog Dial control on the right side of the unit. The Jog Dial control enables you to open an application, folder, or document from a predefined list by rotating and pressing the Jog Dial control. In addition, when you press the Jog Dial control, you can turn on your computer automatically and start the selected application or document. If the document you select is a script file, you can execute a complex task, such as connecting to the Internet and downloading your e-mail to your computer by simply pressing the Jog Dial control.

#### Jog Dial Control

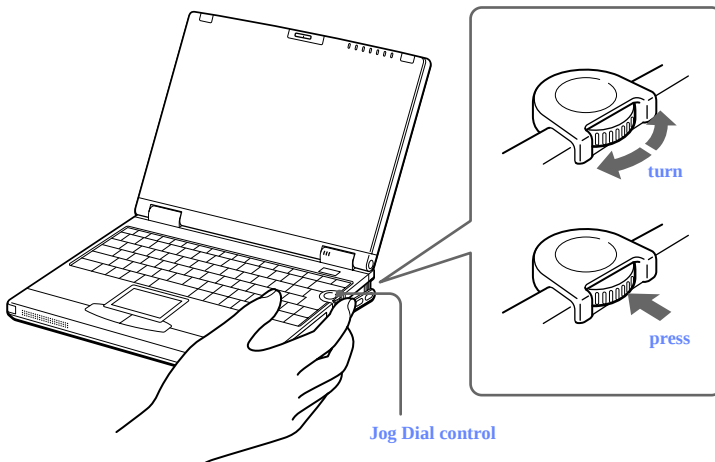

## Using the Jog Dial Control

This section explains how to use the Jog Dial control. For information on how to change the Jog Dial control's settings, right-click the Jog Dial control icon in the task tray and click Help Topics.

### Launcher mode

The Jog Dial control window is in launcher mode until a software application is launched or the Jog Dial control window becomes active. When an arrow is displayed next to an item in the Jog Dial control window, you can display a submenu of that item by selecting it and pressing the Jog Dial control button.

### Using Launcher mode

To use the Jog Dial control, click the Jog Dial control window or the Jog Dial control icon in the task tray. Alternatively, you can press the Jog Dial control while pressing the Ctrl key on the keyboard to switch to the launcher mode.

- 1 Turn the Jog Dial control to select the item you want, then press the Jog Dial control. The window switches to the guide mode, and shows the Jog Dial's function.

### JOG Guide Dialog Box



- 2 Turn or press the Jog Dial control to use the desired function.
- 3 To select another item, switch to the launcher mode and repeat from step 1.

### Guide mode

The Jog Dial control window is in the guide mode when software is in use and the software window is active. Depending on the software you are using, you can select items from the displayed list using the Jog Dial control. Some Sony

software applications have two modes in List View: Simple Menu and Full Menu. You can switch the mode by pressing the shift key while turning the Jog Dial control.

### *Guide mode*

The Jog Dial control window displays the Jog Dial's function.

### *Software that supports the Jog Dial Control*

If Sony software that supports the Jog Dial control is active, you can use the Jog Dial's functions that are allocated to that software. For more information on functions allocated to software, see the software application's online Help.

### *Software that does not support the Jog Dial Control*

If the software you are using does not support the Jog Dial control, you can scroll the window or adjust the window size as described below:

| <i>Action</i>     | <i>Description</i>                                                                                                        |
|-------------------|---------------------------------------------------------------------------------------------------------------------------|
| Maximize Window*  | Press the Jog Dial control button to maximize the size of the active window. Press again to return to normal window size. |
| Minimize Window*  | Press the Jog Dial control button to minimize the size of the active window. Press again to return to normal window size. |
| Finish Window*    | Press the Jog Dial control button to close the active application.                                                        |
| Scroll*           | Press the Jog Dial control button to begin scrolling within the active window.                                            |
| Jog Dial Launcher | Press the Jog Dial control button to return the Jog Dial control to Jog Launcher mode.                                    |
| Menu Bar          | Press the Jog Dial control button, then use the Jog Dial control to scroll through the active window's toolbar.           |

\* Some software does not support these functions.

### **Dialog box**

When a window such as Screen properties is active, Dialog is displayed in the Jog Dial control window. You can select an item in the window by rotating the Jog Dial control. Pressing the Jog Dial control is equivalent to pressing Enter.

#### **JOG Guide Dialog Box**



### **Internal Timer**

You can use the internal timer to start an application at a specific time. The timer can start applications even when the computer is in System Hibernation mode.

### **i.LINK® Interface**

Your computer comes equipped with an i.LINK port. The port is a digital interface (IEEE1394) for high-speed communication. By using your computer, a Sony Digital Handycam® Camcorder or other compatible camera that supports the i.LINK interface, you can easily create and edit your own home videos. For more information on connecting an i.LINK device, see “Connecting an i.LINK®-compatible Device” on page 62 of this manual.

## **Using Power Saving Modes**

When you use a battery as the source of power for your computer, you can take advantage of power management settings to conserve battery life. In addition to the normal operating mode, which allows you to turn off specific devices, your computer has three distinct power saving modes: System Idle, System Suspend, and System Hibernation. When using battery power, you should be aware that the computer automatically enters System Hibernation mode when the remaining battery charge drops below 5%, regardless of the power management setting you select.



If the battery level falls below 10%, you should either attach the AC adapter to recharge the battery or shut down your computer and insert a fully charged battery.

### **Normal Mode**

This is the normal state of your computer when it is in use. The green power indicator light is on in this mode. To save power, you can turn off a specific device such as the LCD.

### **System Idle Mode**

This mode is convenient if you do not need to use your computer for a brief period. The hard disk and video display enter a low power state, and the CPU clock and processor stop. The power indicator light is red in this mode.

#### **To activate System Idle mode**

Press Fn+S, the Power Management utility, or the Jog Dial™ control.

#### **To return to normal mode**

Press any key or touch the touchpad.

### **System Suspend Mode**

The computer saves the current state of the system in RAM and switches off power to the CPU. The red power indicator light flashes in this mode.

### **To activate System Suspend mode**

Press Fn+Esc, or press the power button and release it immediately. You can also use the Power Management utility or the Jog Dial control to enter System Suspend mode.

### **To return to normal mode**

Press any key or the Power button for less than four seconds.

## **System Hibernation Mode**

The state of the system is saved on the hard drive and power is turned off. The power indicator light is off in this mode.

### **To activate System Hibernation mode**

To activate System Hibernation mode, press the key combination Fn+F12.



(Windows 2000) The “Save to Disk Manager” screen appears, and then the computer enters System Hibernation mode.



Do not move the notebook until its power indicator light turns off.

### **To return to normal mode**

Turn on the computer by pressing the power button. The computer returns to its previous state.



When returning from System Hibernation mode, the system status stored on the hard disk is erased and the computer starts normally if you press the power button and hold for more than four seconds.

#### ☐ Time to return to normal mode

System Idle requires less time than System Suspend, and System Suspend requires less time than System Hibernation.

#### ☐ Power consumption

System Idle uses more power than System Suspend, and System Suspend uses more power than System Hibernation.

# Connecting Peripheral Devices

You can add functionality to your computer by connecting any of these peripheral devices:

- ☐ Phone line (page 72)
- ☐ Mini Docking Station (page 74)
  - ☐ Printer (page 78)
  - ☐ External mouse or keyboard (page 78)
  - ☐ Floppy disk drive (page 80)
  - ☐ AV devices (page 81)
- ☐ Printer (page 86)
- ☐ External display (page 87)
- ☐ External speakers (page 90)
- ☐ External microphone (page 91)
- ☐ Universal Serial Bus (USB) device (page 92)



Connect the power cord only after connecting all cables.

Turn on the computer only after turning on all peripheral devices.

You can select a country mode from the modem property window, but you should only use US mode. Using other country modes is an infringement of the Telecommunications Business Laws.

## Connecting a Phone Line


You need to connect a phone line to take advantage of online services and the Internet.



In order to register your Sony VAIO notebook, register your software online, and use Sony Customer Support, you must connect to a phone line.

- 1 Plug one end of the phone cable into the phone line jack on the computer.

### Connecting a Phone Line

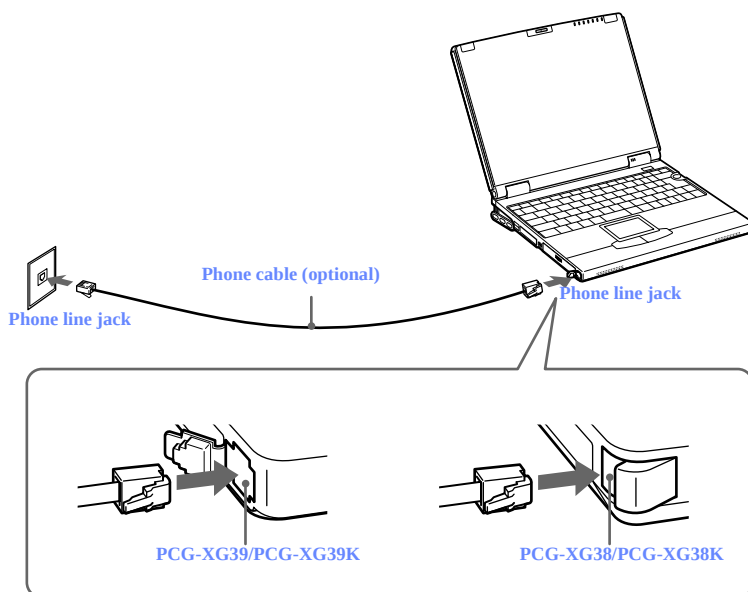

- 2 Plug the other end into the wall jack.



Your computer does not work with party lines, cannot be connected to a coin-operated telephone, and may not work with multiple phone lines or a private branch exchange (PBX). Some of these connections might result in excess electrical current and could cause a malfunction in the internal modem.

If you connect a phone line coming through a splitter, the modem or connected device may not work properly.


## Using the Mini Docking Station

You can use the PCGA-PSX1 Mini Docking Station (optional) to connect peripheral devices such as a printer or external display.




In Windows 2000 models, you must wait for the IN USE indicator to light before using a connected peripheral device.

### Front

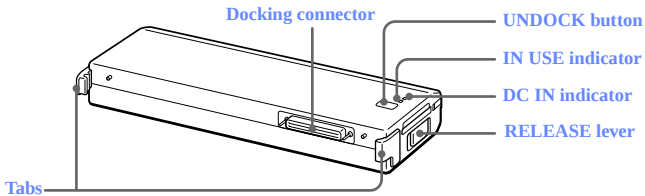


### Back

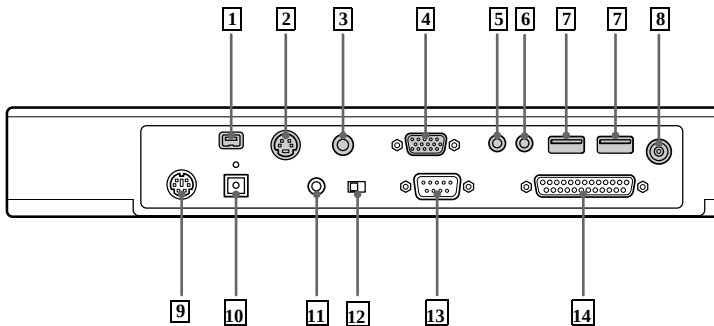


|   |          |    |                             |
|---|----------|----|-----------------------------|
| 1 | S400     | 8  | DC IN                       |
| 2 | S VIDEO  | 9  | Mouse/Keyboard              |
| 3 | VIDEO    | 10 | OPTICAL OUT                 |
| 4 | Monitor  | 11 | CONTROL A1 II               |
| 5 | LINE OUT | 12 | SERIAL/CONTROL A1 II switch |
| 6 | LINE IN  | 13 | Serial                      |
| 7 | USB      | 14 | Parallel (printer)          |

## Left/Right

Floppy disk drive connector

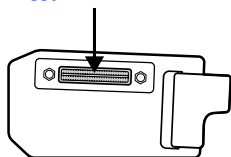

PC card slot

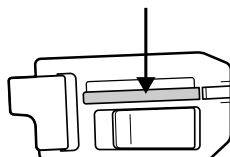


## Connecting the Mini Docking Station

### Before connecting the Mini Docking Station

You must plug the cable attached to the AC adapter into the DC IN connector on the Mini Docking Station. Plug the power cord into the AC adapter and an electrical outlet.

The DC IN indicator lights on.

### Connecting AC Adapter to Docking Station

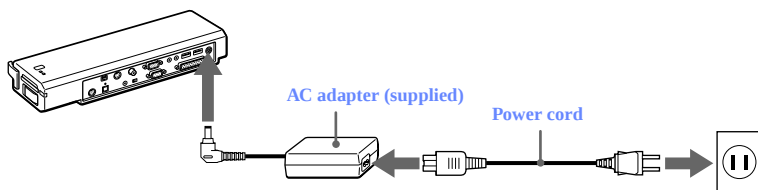

Use the specified AC adapter for the power rating of the Mini Docking Station.

### To connect the Mini Docking Station to your computer


When a charged battery is inserted in your computer, you can attach and detach the Mini Docking Station without turning off the computer.



If your notebook is in power saving mode, switch to normal mode before attaching or detaching the Mini Docking Station.

- 1 Open the cover of your computer.


*Docking Station/FDD Connector*

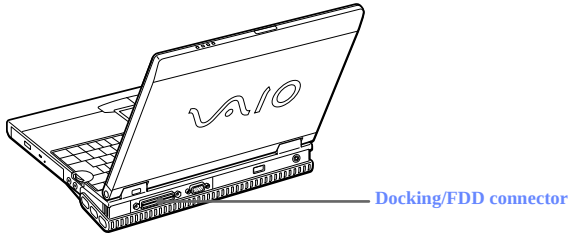

- 2 Attach the left side tab of the Mini Docking Station to the left side hollow of your computer.

Push the tab into the hollow firmly until it clicks.

*Left Tab Hollow*

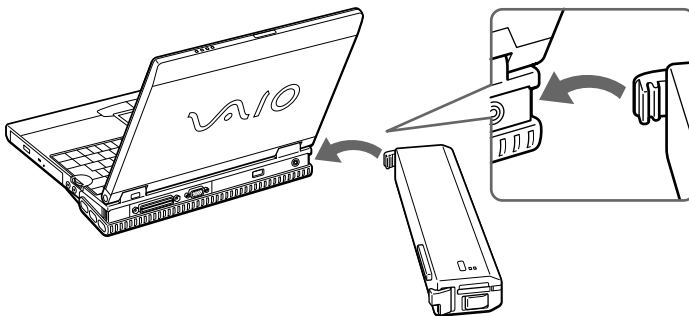


- 3 Align the connector on the Mini Docking Station with the docking/floppy disk drive connector on the back of your computer.
- 4 Firmly press the Mini Docking Station into place.

- 5 Attach the right side tab of the Mini Docking Station to the right side hollow of your computer.

Push the tab into the hollow firmly until it clicks.

### *Right Tab Hollow*

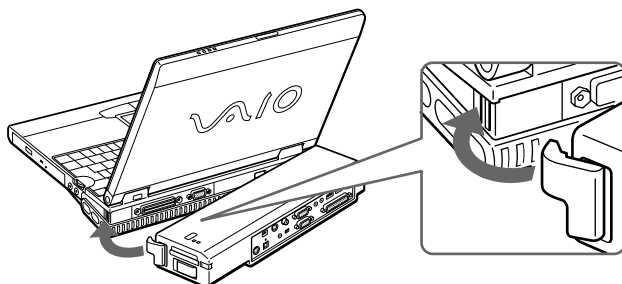


Do not lift or move the computer by holding only the Mini Docking Station as the Mini Docking Station may separate from the computer.

### *Removing the Mini Docking Station from your notebook*

When the computer is off, skip step 1. When the computer is in Power saving mode, switch to Normal mode, and then follow the steps below.

- 1 Press the UNDOCK button on the Mini Docking Station or click REMOVE on the Start menu.

### *Undocking Button*

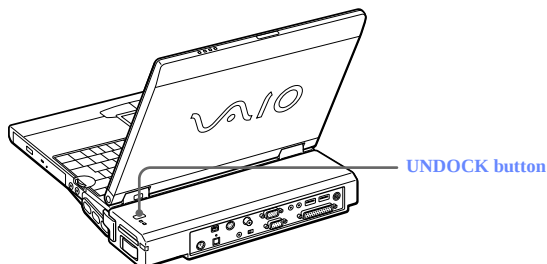


- 2 After the IN USE indicator has turned off, pull the RELEASE lever on the right side of your computer and release the right tab.

#### Release Lever



- 3 Release the left tab.

#### Removing Mini Docking Station

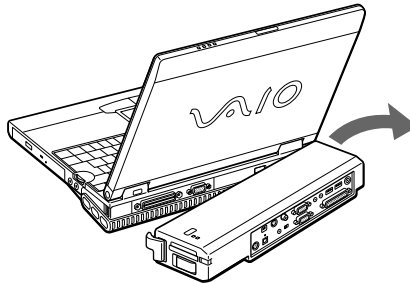

When the Mini Docking Station is attached to your computer, do not insert or remove the battery. The Mini Docking Station may separate from the computer.


Do not remove the Mini Docking Station when the IN USE indicator is lit.

## Connecting an external mouse or keyboard

You can connect a USB or PS/2® style mouse or keyboard.

- 1 Plug the keyboard cable or mouse cable into this connector with  facing up.

### Connecting a Mouse or External Keyboard

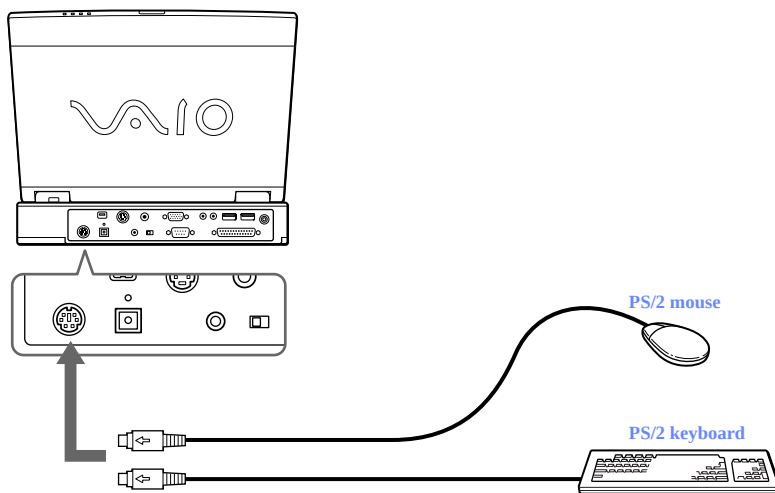

USB devices can be connected and disconnected while the computer is on.

To connect both a mouse and keyboard at the same time, use the optional PS/2 division connector. If the wheel function of the PS/2 mouse does not operate, connect the mouse to the serial port using the PS/2 serial adapter that is supplied with your mouse. You can also use one of both of the USB ports to connect a mouse and keyboard at the same time.


## Connecting a printer to the Mini Docking Station

You can connect the printer to the Mini Docking Station attached to your computer to print documents.

### To connect a printer

Use the  symbol to locate the Printer connector. Plug the printer cable (supplied with the printer) into this port on the computer.

### Connecting a printer

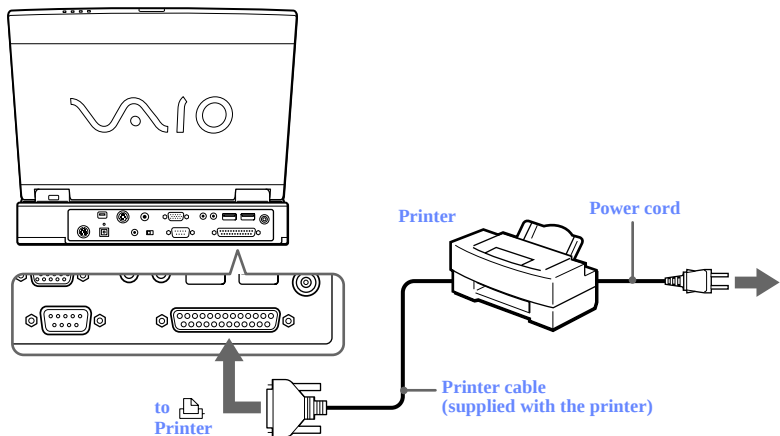

Before you connect the printer, turn off your computer and disconnect the AC adapter and power cord from the electrical outlet.

Plug the power cord into a power outlet after completing all the connections.

Turn on the peripheral devices before turning on your computer.

If you are using a printer that does not support Windows 2000 or Windows Me, it may not function properly.

You can connect a printer while the floppy disk drive is in use.

When using a USB printer, connect it to the USB connector of your computer or the Mini Docking Station.

See the manual that came with your printer for more information on installation and use.

Before using the printer, you may need to change the Printer setting in the Sony Notebook Setup software. See Displaying the Sony Notebook Setup Screen in the online manual, *Customizing Your VAIO® Notebook*.


## Connecting a floppy disk drive to the Mini Docking Station

You can use the floppy disk drive as an external drive by connecting it to the floppy disk drive connector on the left side of the optional Mini Docking Station. You can connect it without turning off your computer.

 If your notebook is in power saving mode, switch to normal mode before connecting a floppy disk drive to the Mini Docking Station.

- 1 With the VAIO logo facing up, plug the cable firmly into the connector and both of the alignment posts in the guide holes.
- 2 With the VAIO logo facing up, plug the FDD into the other end until it locks in place.

### FDD Connecting

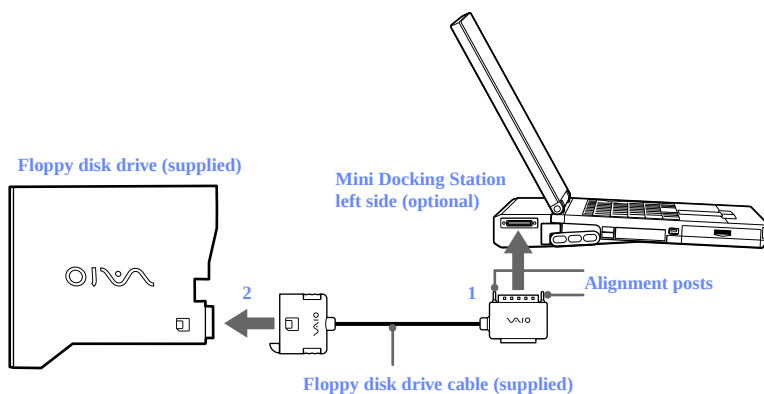


 When you connect the floppy disk drive to the floppy disk drive connector of the Mini Docking Station, you cannot use the PRINTER connector of the floppy disk drive cable.

## Connecting audiovideo (AV) devices

You can use audio/video devices by connecting the AV devices to the Mini Docking Station. See the manuals and online help that came with your AV devices for detailed instructions. By connecting an MD deck or a CD player which has a CONTROL A1 or CONTROL A1 II connector, you can play a CD disc, create your own CD database, or edit an MD disc.

### Connecting an MD Deck or CD Player

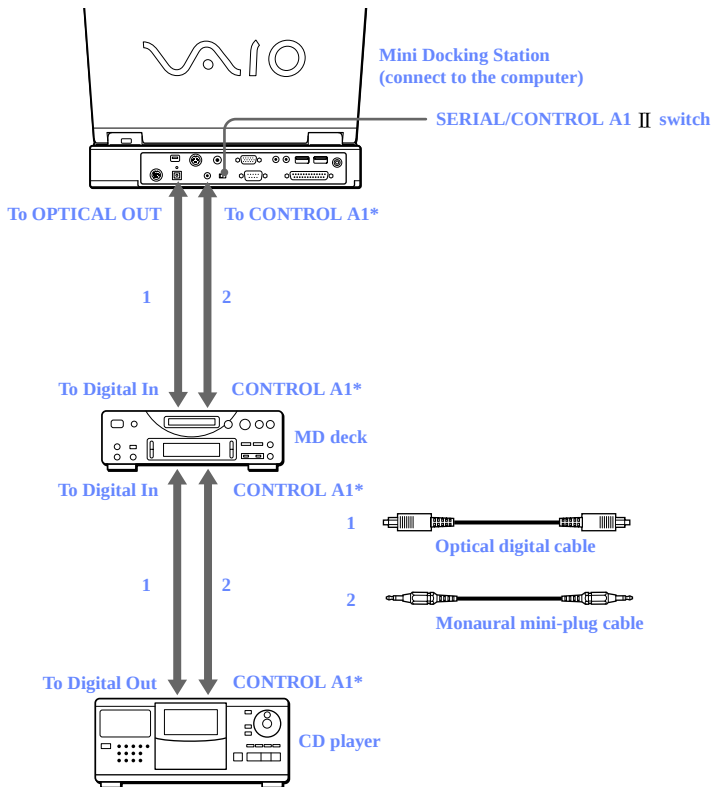

To use the CONTROL A1 II connector on the Mini Docking Station, switch the SERIAL/CONTROL A1 II switch to CONTROL A1 II.



Use monaural mini-plug cables shorter than 2 meters with no resistance.

\*CONTROL A1 or CONTROL A1 II


*To record music to a mini disc from a CD playing on the computer via the OPTICAL OUT, (available by connecting to the Mini Docking Station) follow these steps:*

- 1 Click the Start button, point to Settings, and then click Control Panel.
- 2 Double-click YAMAHA DS-XG Audio Config.
- 3 Select Digital Output and click “ON [All Sources]/Analog out is muted.”
- 4 Click OK.

## Connecting a CD player, an active speaker, or an amplifier

Connect a CD player, an active speaker, or an amplifier to the LINE IN or LINE OUT connector of the Mini Docking Station to play a CD and experience higher quality audio.


### Connecting Devices

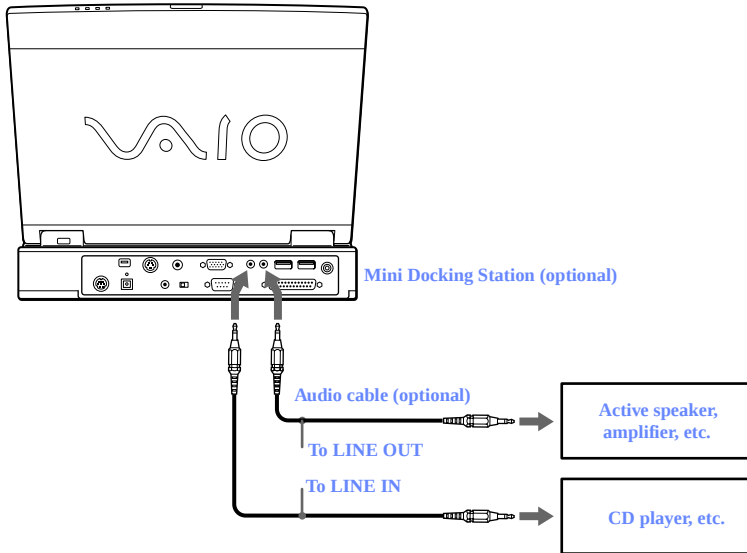

## Connecting a Dolby Digital™ Decoder integrated device

- 1 Insert the DVD-ROM drive into the multipurpose bay
- 2 Connect the OPTICAL OUT connector to a Dolby Digital Decoder integrated device to experience Dolby Digital recorded videos and dynamic sound.

## Connecting Audio and Video Devices

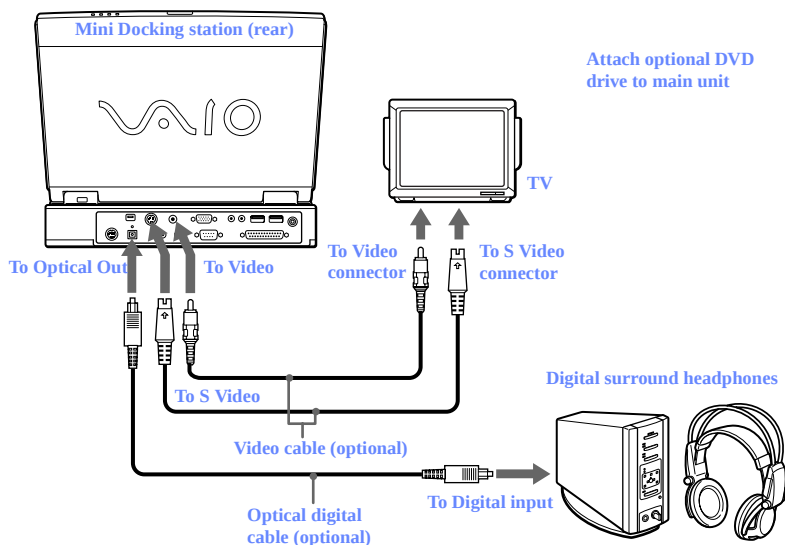

 You can experience Dolby Digital or PCM sound from the OPTICAL OUT connector.

- 3 Switch the Digital output to PCM when you connect a device that does not support Dolby Digital; otherwise, the speakers or your hearing may be damaged by the increased volume.
- 4 Switch the Digital output to PCM when you play DVDs that support linear PCM recording on the Mini Docking Station.


## Connecting a TV or a video deck

Connect the computer to a TV or a video deck using audio/video cables. Switch the input channel of the TV to external input. You also need to set up the TV configuration system. See “To select the display” in the *Customizing Your VAIO® Notebook* manual for more information.



Unplug the connecting cable from the MONITOR connector.

### Connecting a TV

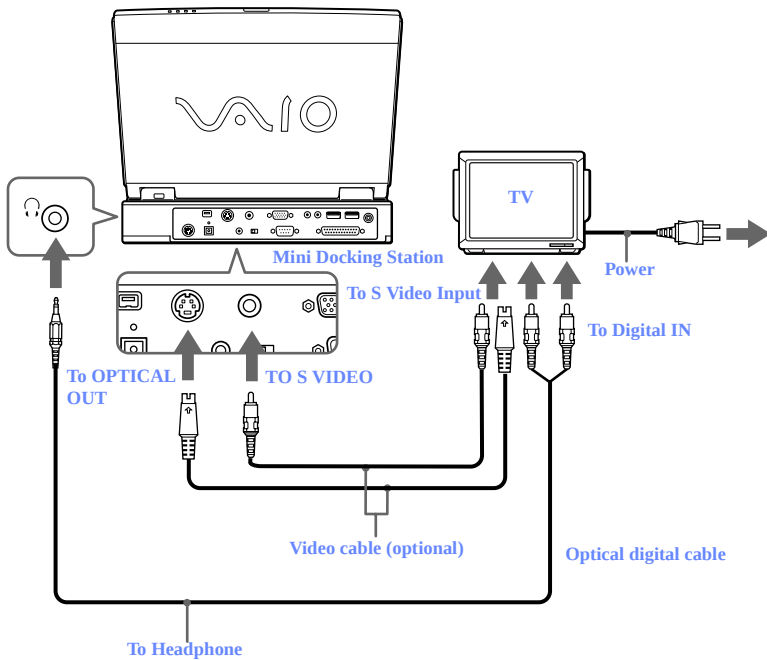

## Connecting a Printer to Your Computer

You can connect the printer to your computer using the printer cable and the supplied floppy disk drive cable to print documents.


### Before using the printer

- ❑ You need to install the software supplied with the printer. See the manual that came with your printer for more information.
- ❑ You need to set up the printer port. See “I cannot print” for more information about setting up the printer port.

### To connect a printer

Plug the floppy disk drive cable to the docking/FDD connector on your computer. Then connect the printer cable (supplied with the printer) to the PRINTER connector of the floppy disk drive cable.

#### Parallel Port

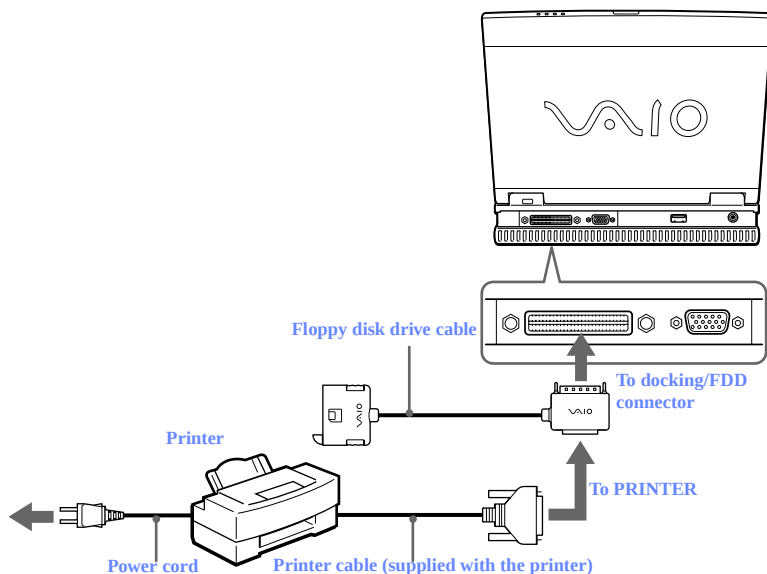



Before you connect the printer, turn off your computer, and disconnect the AC adapter and power cord from the AC outlet.

Plug the power cord into an AC outlet after finishing all the connections.

Turn on the peripheral devices before turning on your computer.

If you are using a printer that does not support Windows Me (PCG-XG38/PCG-XG39) or Windows 2000 (PCG-XG38K/PCG-XG39K) it may not function properly.

You can connect a printer while the floppy disk drive is in use.

When using a USB printer, connect it to the USB connector of your computer or the USB connector of the Mini Docking Station.

## Connecting an External Display

You can connect an external display to your notebook. For example, you can use the computer with any of the following:

- ☐ Computer display (monitor)
- ☐ Projector



Turn off your computer and all peripheral devices, and disconnect the AC adapter and power cord from the AC outlet before making connections.

Connect the power cord after connecting all peripheral devices.


Turn on your computer after turning on the power of all peripheral devices.

When you connect an external display, you may not be able to display both the LCD and external display simultaneously, depending on the external display.

### To connect a computer display

You can enhance the sound quality of your computer by connecting external speakers and an external microphone. See “To connect external speakers” on page 90 and “To connect an external microphone” on page 91 for details on connecting external speakers and an external microphone.

#### Monitor Connector

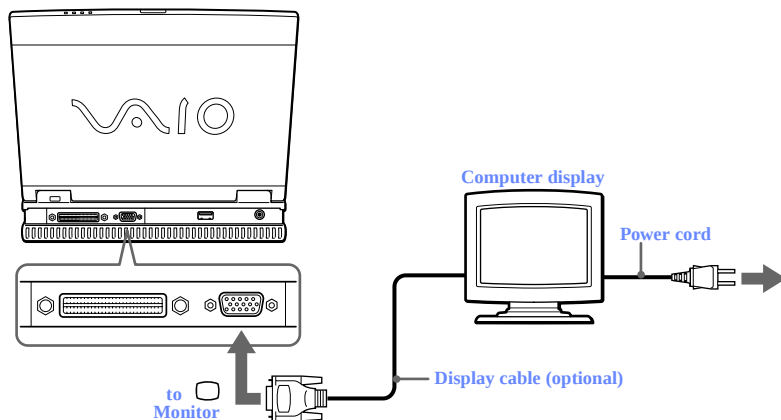


See the manual that came with your computer display for more information on installation and use.

### To connect a projector

Using a projector connected to your computer can be convenient for presentations and slide shows.

#### Connecting a Projector

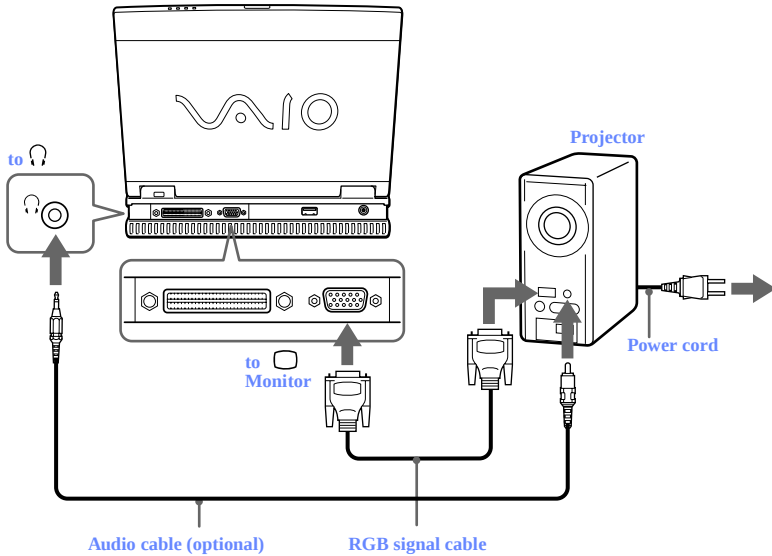

See the manual that came with your projector for more information on installation and use.

### To select a display

When you connect an external display to the monitor connector, you can toggle the output among the LCD, the external monitor, or both devices.

Use the Fn+F7 keys to select a display. See also “Selecting the Display Mode in the *Customizing Your VAIO® Notebook* manual for more information.

| To                            | Press | Result                                                                                                                 |
|-------------------------------|-------|------------------------------------------------------------------------------------------------------------------------|
| Switch to an external display | Fn+F7 | Toggles among the LCD, the external display connected to the Monitor connector, and both the LCD and external display. |

Only LCD → LCD and external display

← Only external display

## Connecting External Speakers

You can enhance the sound quality of your computer by connecting external speakers.



Check that your speakers are designed for computer use.

Shut down the computer and all peripheral devices before connecting the cables.

Connect all the cables before plugging in the power cord.

Turn on the peripheral devices' power, then turn on your computer.


Turn down the volume of the speakers before you turn them on.

Do not place diskettes on the speakers as the speakers' magnetic field may damage the data on the diskettes.

### To connect external speakers

- ❑ Use the  symbol to locate the Headphone connector. Plug the speaker cable into this connector.

### Connecting Speakers

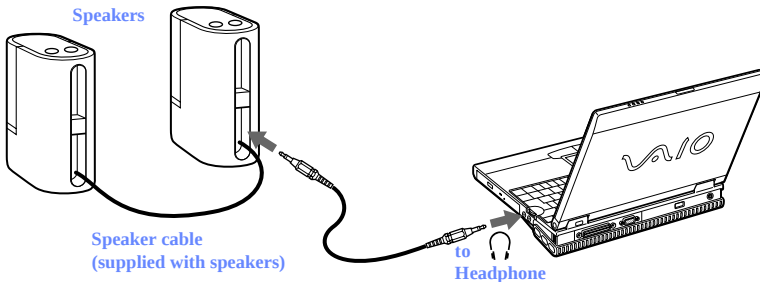

See the manual that came with your speakers for more information on installation and use.

## Connecting an External Microphone

You can enhance the quality of sound input by using an external microphone.



Shut down the computer and all peripheral devices before connecting the cables.

Connect all the cables before plugging in the power cord.

Turn on the peripheral devices' power, then turn on your computer.


Make sure your microphone is designed for computer use. The microphone should be compliant with the plug-in power microphone.

### To connect an external microphone

- Use the  to locate the Microphone connector. Plug the microphone cable into this connector.

### Connecting Microphone

Microphone

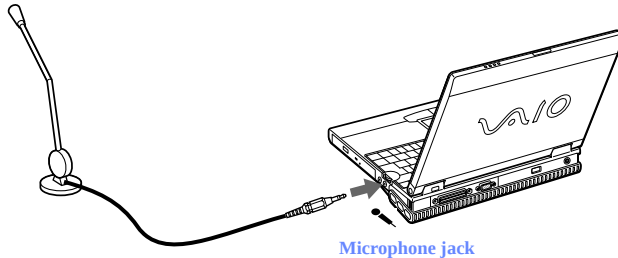

Microphone jack




See the manual that came with your microphone for more information on installation and use.

## Connecting a Universal Serial Bus (USB) Device (Mouse or Keyboard)

You can connect a USB style mouse or keyboard.

Plug the keyboard cable or mouse cable into this connector with the  facing up.

### USB Port

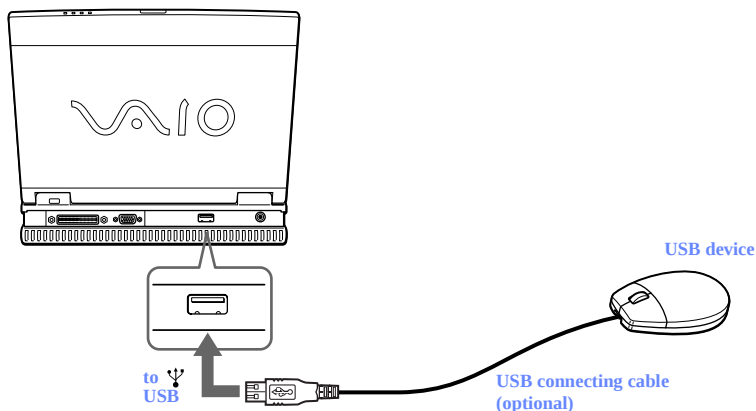

You can use the optional Sony USB mouse PCGA-UMS1 series with this computer. The USB mouse software driver is preinstalled in the computer.



USB devices can be connected and disconnected while the computer is on.

See "Using the Keyboard" on page 33 for more information on using the keyboard.

See the manual that came with your mouse or keyboard for more information on installation and use.

A Sony USB mouse PCGA-UMS1 series (optional) is a USB device. You must connect it to the USB connector.

## Adding Memory

You can increase your system's memory by installing optional memory modules. Your system comes with 128 MB of installed memory, which can be increased up to 256 MB (128 MB x 2). You can add an expansion memory module in a slot. Up to 128 MB expansion memory modules are available as optional memory modules.



Make sure you observe the proper safety precautions when you install a memory module in your computer. See the bulleted list below. Be careful when adding memory. Mistakes when installing or removing a memory module may cause malfunction.


If you are using only one memory module, you must use the slot closest to the front of the computer.

- ❑ Electrostatic discharge (ESD) can damage disk drives and other components. Perform the procedures described below only at an ESD workstation. If such a station is not available, do not work in a carpeted area, and do not handle materials that produce or hold static electricity (cellophane wrappers, for example).
- ❑ Ground yourself by maintaining contact with an unpainted metal portion of the chassis while performing the procedure.
- ❑ Do not open the memory module package until you are ready to install the module. The package protects the module from ESD.
- ❑ Use the special bag for preventing ESD or use aluminum foil when you store the memory module.

### To remove a memory module

- 1 Follow steps 1 to 5 of "To install a memory module."
- 2 Touch a metal object (such as the connector panel on the back of your computer) to discharge static electricity.
- 3 Remove the memory module.

## Memory Module

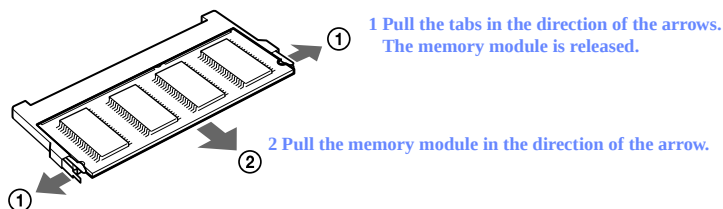


- 4 Follow steps 8 and 9 of “To install a memory module.”

## To install a memory module

- 1 Shut down your computer and disconnect all peripheral devices, such as your printer.
- 2 Unplug the computer and remove the battery packs.
- 3 Wait until the computer cools down. Then remove the screw at the bottom of your computer.


## Removing the Memory Module Cover

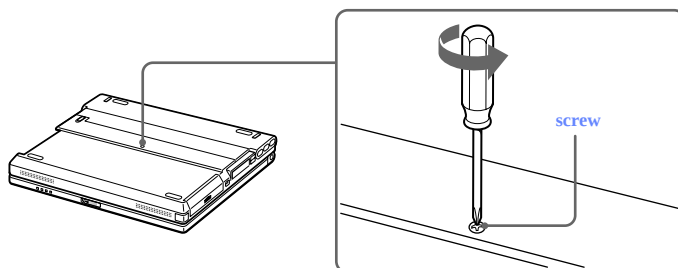

Remove the screw with a screwdriver of a proper size.


- 4 Lift the two stoppers at the bottom of the keyboard and slide the keyboard toward the LCD display, then lift it away slightly.

### Keyboard Stoppers

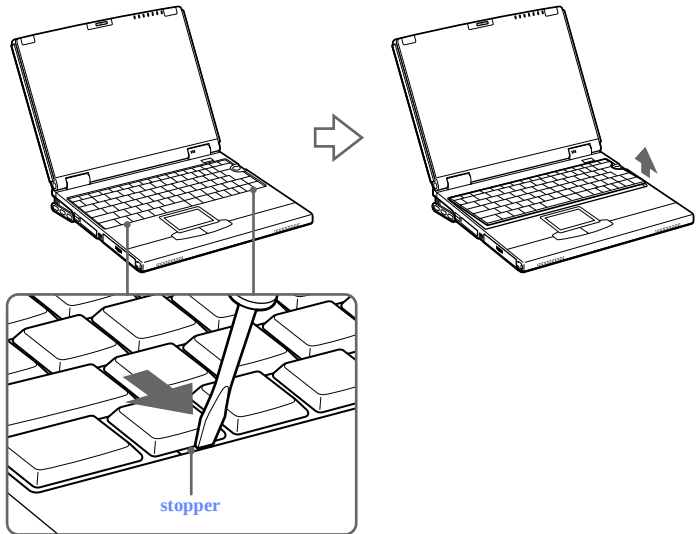

- 5 Lift the keyboard from the LCD display side by releasing the four tabs, then gently lean it over the display. Be careful not to detach the cable when lifting the keyboard.


### Lifting the Keyboard

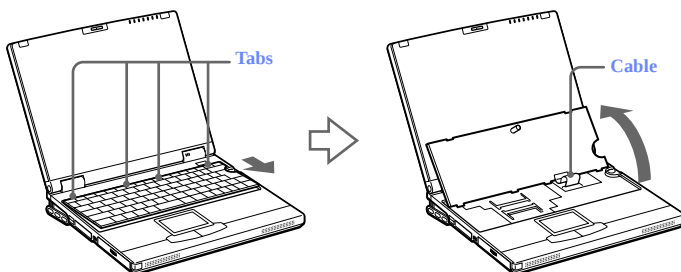

- 6 Remove the new memory module from its packaging.


- 7 Install the memory module as described in the following graphic.

### Installing Memory Module

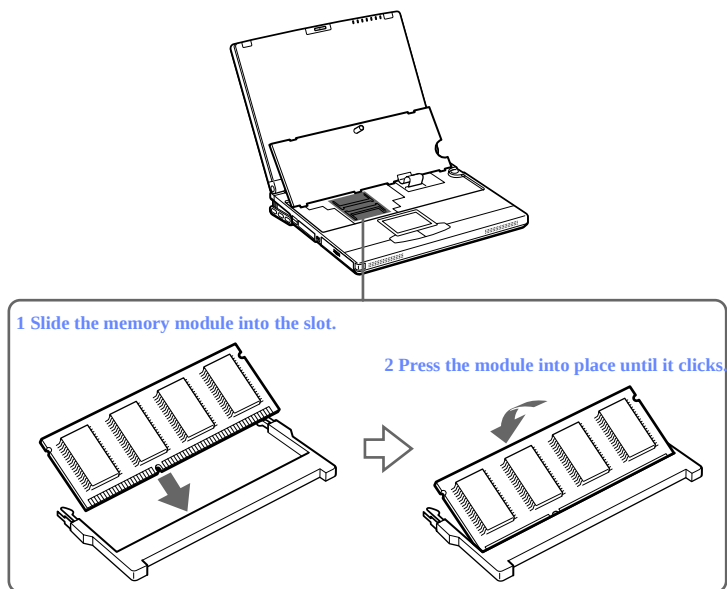

- 8 Gently replace the keyboard, then press it into your computer. Be careful not to detach the cable when replacing the keyboard.

### Replacing the Keyboard

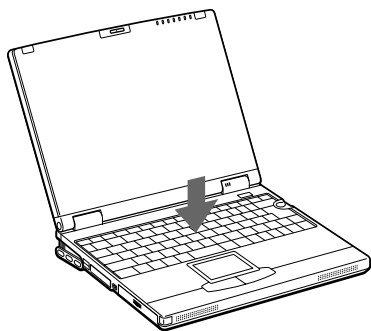

- 9 Close the computer cover, and tighten the screws on the bottom of the computer.

*To view the system memory*

- 1 Turn on the computer.
- 2 Click the Start button, point to VAIO, and click “Sony Notebook Setup.”  
The Sony Notebook Setup screen appears.
- 3 Click the “About This Computer” tab to view the system memory. If the additional memory is not shown, repeat steps 1-9 of “To install a memory module” on page 94.

## About the Software on Your Computer

Your VAIO notebook is ready to help you work, play, learn, and communicate as soon as you turn it on. This section gives you an overview of the activities you can perform with your software titles. For support information, see “For Answers to Your Software Questions” on page 102.

### Adobe Acrobat Reader®

*Adobe Systems Inc.*

Acrobat Reader software allows you to view, navigate, and print electronic documents in Adobe Portable Document Format (PDF), an open file format that is intended to preserve the fidelity of documents created on all major computer platforms.

### Adobe PhotoDeluxe® Home Edition

*Adobe Systems Inc.*

Create amazing photo effects with Adobe PhotoDeluxe. Without learning complex software, you can enhance, restore, and be creative with your photos. Includes built-in guided activities, stock photos, clip art, and templates to assist you.

### Adobe Premiere® LE

*Adobe Systems Incorporated*

Adobe Premiere LE offers an interface and editing tool for producing movies for video, multimedia, or the Web. View source clips and edited footage simultaneously on the monitor window. Create video clips up to three hours long with complete audio-video synchronization.

### America Online® (Windows Me only)

*America Online*

America Online is a popular Internet online service. Stay in touch with family and friends with Easy-to-Use E-mail, manage your personal finances, get the latest news and sports scores, and chat with thousands of others who share your interests.

### ArcSoft PhotoPrinter™ 2000 Pro

*ArcSoft*

ArcSoft PhotoPrinter 2000 Pro is an easy-to-use, advanced printing program that lets you quickly lay out multiple images in multiple sizes on a single sheet of paper. PhotoPrinter Pro offers a wide selection of templates including landscape, portrait, free style, mixed sizes, custom templates, and more. The application includes enhancement tools and special effects for improving photos while giving you the ability to add text to any image.

### **CompuServe® 2000 (Windows Me only)**

*CompuServe, Inc.*

The all new CompuServe 2000 delivers a powerful tool for Internet users who want serious and timely information, in-depth research, and professional communities backed by state-of-the-art technologies, including high-speed access and powerful e-mail messaging.

### **Direct CD™ (Windows Me only)**

*Adaptec, Inc.*

DirectCD allows you to drag and drop files directly to your CD-RW drive. You can save, rename, move or delete files right on your CD-RW.

### **DVgate™**

*Sony Electronics*

Connect a digital video camera recorder to the i.LINK® connector and capture your own video clips and still images. You can edit the clips from your video, add others, and combine clips into new movie segments. You can save your images in a variety of popular file formats.

### **EarthLink Network TotalAccess® (Windows Me only)**

*EarthLink Network, Inc.*

An Internet Service Provider that supplies access, information, and assistance to its customers, introducing them to the Internet. Member benefits include e-mail, a Personal Start Page, a free 6 MB web site, a member newsletter, and 24-hour technical support.

### **Easy CD Creator™ (Windows Me only)**

*Adaptec, Inc.*

Easy CD Creator lets you make your own data, audio and multimedia CDs. You can back up your important files to CD, and read them back on standard CD-ROM drives. Create your own audio CDs right on your desktop, and play them back on your home or car stereo CD player. You can make your own personalized color jewel case inserts with custom text and graphics. You can even make backup copies of your existing CDs. The easy CD Creator Wizard makes creating your own custom CDs a simple process.

### **McAfee® VirusScan®**

*Network Associates, Inc.*

Protect your computer from viruses. VirusScan can detect viruses from floppy disks, Internet downloads, e-mail attachments, intranets, shared files, CD-ROMs, and online services.

## **Media Bar™**

*Sony Electronics*

Media Bar software is your all-in-one solution for audio/video playback. Media Bar software handles all common computer multimedia formats and controls selected Sony devices. In addition to audio/video library cataloging and playlist management, Media Bar software includes digital video quality control and effects features. Media Bar software seamlessly integrates a variety of new media formats with an easy-to-use software interface.

## **Microsoft® Internet Explorer 5.0**

*Microsoft Corporation*

Internet Explorer delivers the web the way you want it. It is safe, easy to use, and you can personalize how you access the web. Outlook Express and other tools in Internet Explorer also help you have a great experience when you are on the web.

## **Microsoft® Word 2000**

*Microsoft Corporation*

Microsoft Word 2000 makes it easy to create shared Web, e-mail, and print documents for use around the world. It embraces HTML as a first-class file format and extends Word's ease-of-use to the Web and e-mail. Word 2000 also extends that ease-of-use to international users, making it simple to create multilingual documents.

## **MovieShaker™**

*Sony Electronics*

Sony's original MovieShaker software creates personal movies that have transitions, background music, and text. Just import your video clips and "shake" with the click of a mouse. Your personal movies are easy to create and fun to share with family and friends.

## **Netscape Communicator®**

*Netscape Communications*

Netscape Communicator is an all-in-one Internet tool that makes it easy to browse the web, send Internet e-mail, chat, read newsgroups and compose great web documents.

## **PictureGear™**

*Sony Electronics*

This image management software displays images from your hard drive, a Sony Digital Still Camera, or a Sony Mavica® Camera. The images appear in a convenient light-table format, so that you can easily view the contents of an entire folder.

### **Prodigy Internet® (Windows Me only)**

*Prodigy Communications Corporation*

An online service that helps you find what you need online faster and smarter. Prodigy delivers powerful online content such as sports scores, stock quotes, news, and easy access to Excite, plus quality customer service, all at a competitive price.

### **Quicken® 2000 Basic**

*Intuit, Inc.*

Quicken is a fast, easy way to organize your finances. Quicken works just like your checkbook, so it is easy to learn and use. Quicken manages all your finances, bank accounts, credit cards, investments, and loans. You can even pay your bills online.

### **Smart Capture**

*Sony Electronics*

Smart Capture is a fun new way to send multimedia messages via e-mail. Smart Capture manages the i.LINK connection between your computer and a Sony Digital Handycam® camcorder that supports the i.LINK interface. It allows you to capture compressed video or still images that you can save or share via e-mail. A smart solution to computer, digital audio/video and network convergence.

### **Smart Connect (Windows 2000)**

*Sony Electronics*

Smart Connect allows you to use an i.LINK cable (not supplied) to connect your VAIO computer to another VAIO computer that supports Smart Connect. You can then use one computer to copy, delete, and edit files on the other computer. You can also print from a printer attached to either computer.

### **Sound Forge® XP**

*Sonic Foundry, Inc.*

Sound Forge® XP allows you to put powerful audio processing tools and effects to work on your desktop. Simply cut, copy, and paste your way to striking multimedia files for use in everything from web pages to desktop presentations.

### **VAIO Action Setup**

*Sony Electronics, Inc.*

VAIO Action Setup manages the settings for your computer's Shortcut keys and i.LINK interface.

### **VAIO Support Agent**

*Sony Electronics, Inc.*

VAIO Support Agent provides immediate, interactive, on-line support.

## About Your Recovery CDs

### Application Recovery CD(s)

#### *Sony Electronics*

This program allows you to reinstall individual applications and device drivers. Use it to restore corrupted or erased files.

### System Recovery CD(s)

#### *Sony Electronics*

This program allows you to restore your computer to the original factory settings, if your hard disk drive is corrupted or erased.

## For Answers to Your Software Questions

### Acrobat Reader®, Adobe PhotoDeluxe® Home Edition (Adobe Systems Incorporated)

---

|          |                                                            |
|----------|------------------------------------------------------------|
| Web site | <a href="http://www.adobe.com/">http://www.adobe.com/</a>  |
| phone    | 206-628-2746 (fee-based support)                           |
| fax      | 206-628-5737                                               |
| e-mail   | <a href="mailto:techdocs@adobe.com">techdocs@adobe.com</a> |
| hours    | M-F, 6 AM-5 PM Pacific Time                                |

---

### America Online® (America Online)

---

|          |                                                       |
|----------|-------------------------------------------------------|
| Web site | <a href="http://www.aol.com/">http://www.aol.com/</a> |
| phone    | 800-827-3338                                          |
| hours    | 7 days a week, 24 hours a day                         |

---

### CompuServe® 2000 (CompuServe, Inc.)

---

|          |                                                                     |
|----------|---------------------------------------------------------------------|
| Web site | <a href="http://www.compuserve.com/">http://www.compuserve.com/</a> |
| phone    | 800-848-8990                                                        |

---

### DirectCD, Easy CD Creator™ (Adaptec, Inc.)

---

|          |                                                               |
|----------|---------------------------------------------------------------|
| Web site | <a href="http://www.adaptec.com/">http://www.adaptec.com/</a> |
| phone    | 408-945-8600                                                  |
| hours    | M - F, 8AM - 5 PM PT                                          |

---

### **EarthLink Network TotalAccess® (EarthLink Network, Inc.)**

---

|          |                                                                                             |
|----------|---------------------------------------------------------------------------------------------|
| Web site | <a href="http://help.earthlink.net/techsupport/">http://help.earthlink.net/techsupport/</a> |
| phone    | 800-395-8410                                                                                |
| e-mail   | <a href="mailto:support@earthlink.net">support@earthlink.net</a>                            |
| hours    | 7 days a week, 24 hours a day                                                               |

---

### **McAfee® VirusScan® (Network Associates, Inc.)**

---

|          |                                                                   |
|----------|-------------------------------------------------------------------|
| Web site | <a href="http://support.mcafee.com">http://support.mcafee.com</a> |
| phone    | 408-988-3832                                                      |
| e-mail   | <a href="mailto:cybr@nai.com">cybr@nai.com</a>                    |
| hours    | M-F 9AM-5PM Central Time                                          |

---

### **Netscape Communicator® (Netscape Communications Corporation)**

---

|          |                                                                 |
|----------|-----------------------------------------------------------------|
| Web site | <a href="http://www.netscape.com/">http://www.netscape.com/</a> |
| phone    | 888-4SONYPC (888-476-6972)*                                     |
| hours    | 7 days a week, 24 hours a day                                   |

---

\* Support from 1-888-4SONYPC is free of charge for 90 days after the original date of purchase.

### **PhotoPrinter™ 2000 Pro (ArcSoft, Inc.)**

---

|          |                                                                                                                                   |
|----------|-----------------------------------------------------------------------------------------------------------------------------------|
| Web site | <a href="http://www.arcsoft.com">http://www.arcsoft.com</a> ; <a href="http://www.photoisland.com">http://www.photoisland.com</a> |
| phone    | 510-440-9901                                                                                                                      |
| e-mail   | <a href="mailto:techsupport@arcsoft.com">techsupport@arcsoft.com</a>                                                              |
| hours    | M - F, 8:30 AM - 5:30 PM PT                                                                                                       |

---

### **Prodigy Internet® (Prodigy Communications Corporation)**

---

|          |                                                               |
|----------|---------------------------------------------------------------|
| Web site | <a href="http://www.prodigy.com/">http://www.prodigy.com/</a> |
| phone    | 800-213-0992                                                  |
| hours    | 7 AM - 3 AM Eastern Time                                      |

---

### **Quicken® 2000 Basic (Intuit Inc.)**

---

|          |                                                                           |
|----------|---------------------------------------------------------------------------|
| Web site | <a href="http://www.intuit.com/support">http://www.intuit.com/support</a> |
| phone    | 900-555-4688                                                              |
| hours    | 7 days a week, 24 hours a day                                             |

---

### **Sony Applications (Sony Electronics, Inc.)**

---

|          |                                                                           |
|----------|---------------------------------------------------------------------------|
| Web site | <a href="http://www.sony.com/pcsupport">http://www.sony.com/pcsupport</a> |
| phone    | 888-4SONYPC (888-476-6972) *                                              |
| hours    | 7 days a week, 24 hours a day                                             |

---

\* Support from 1-888-4SONYPC is free of charge for 90 days after the original date of purchase.

### **Sound Forge® (Sonic Foundry, Inc.)**

---

|          |                                                                                                                             |
|----------|-----------------------------------------------------------------------------------------------------------------------------|
| Web site | <a href="http://www.sonicfoundry.com/">http://www.sonicfoundry.com/</a>                                                     |
| phone    | 608-256-5555                                                                                                                |
| fax      | 608-250-1745                                                                                                                |
| e-mail   | <a href="http://sonicfoundry.com/support/SupportMail.asp">http://sonicfoundry.com/support/SupportMail.asp</a> (online form) |
| hours    | M-F, 7 AM-10 PM Central Time                                                                                                |

---

### **Windows® Millennium Edition, Windows® 2000 Professional, Word 2000, Internet Explorer (Microsoft Corporation)**

---

|          |                                                                                   |
|----------|-----------------------------------------------------------------------------------|
| Web site | <a href="http://www.microsoft.com/support/">http://www.microsoft.com/support/</a> |
| phone    | 888-4SONYPC (888-476-6972) *                                                      |
| hours    | 7 days a week, 24 hours a day                                                     |

---


\* Support from 1-888-4SONYPC is free of charge for 90 days after the original date of purchase.

# Software Information

## MovieShaker™

This application can be used to create fun and innovative movies without any knowledge of film editing. In a few simple steps, motion pictures can be combined with special effects, still images (pictures), and music files and then saved in a format most computers can play.

### Main window

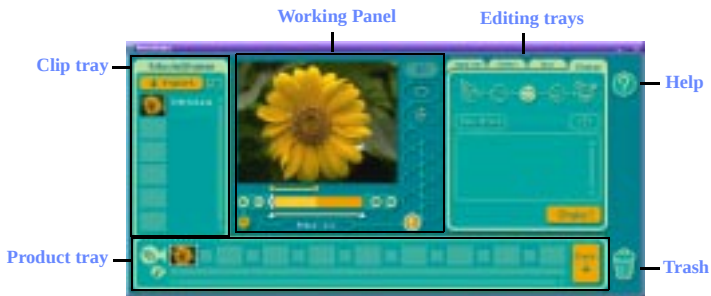

### Importing Images and Sound Clips

- 1 Click  .
- 2 Find the file you want to add.
- 3 Select the file.
- 4 Click Open. The file is added to the Clip tray.



Importing files over 75 seconds in length may cause MovieShaker to stop responding.

## Create a Movie using Shaker

After adding clip(s) to the Clip tray, you can create a short movie using the Shaker feature. Shaker randomly select clips from the Clip tray to create a 30-second scene.

- 1 Click the Shake tab.
- 2 Select a mood by clicking a face in the Shaker tray.

### Shaker Tray



- 3 Click **Shake !**. A thirty second scene is automatically generated and saved to the Product tray.
- 4 To preview, switch the Work Panel to Product tray mode and press play.




Scenes created with Shaker begin with black frame and after processing are placed in the first available slot on the Product tray. Limit the number of scenes placed on the Product tray to 10 or less. MovieShaker may stop responding if too many scenes are placed on the Product tray.

## Editing Clips and Scenes

You can edit your movie by adding effects and text, adjusting the color and contrast, and modifying the length of clips.

### Working Panel

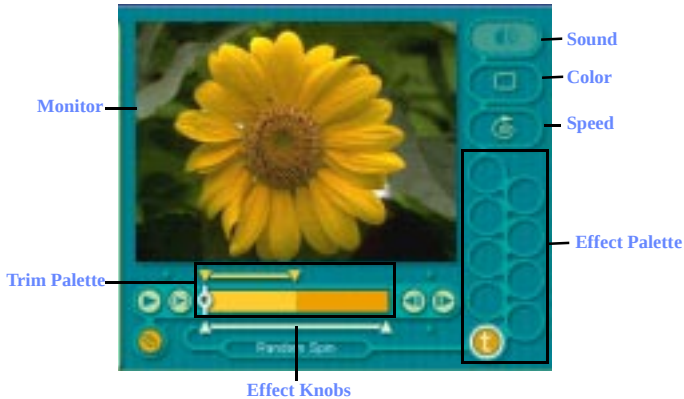

Adding effects to a scene or a clip:

- 1 Double-click the clip or scene to move it to the Working Panel.
- 2 Select the Effects tab from the Editing tray.
- 3 Drag and drop the Effect you want to add from the Effects tray to the Effects palette on the Working Panel.



To preview an Effect, click on the clip in the Working panel monitor. Your clip displays with the new effect on the Effect tray monitor.

- 4 See help for instructions on adjusting effect duration and replaying clips/scenes.

## Saving a Movie

- 1 Verify that the clip(s) you want to save is on the Product tray. See Help for more details on saving movies.
- 2 Click Export.
- 3 Select the format in which you want the document to be saved.

- 4 Click Next.
- 5 Locate the folder to which you want the file saved.
- 6 Name the file.
- 7 Click Save.



**Exporting movies may take a long time to complete—Saving movies as DV (Digital Video) takes the longest and Quick-Save is the fastest. MovieShaker can play video files up to 65 MB in length.**



For DV playback and smooth video playback, we recommend the following resolution/refresh rates: 1024 x 768/75 Hz or lower.

## **PictureGear™**

PictureGear is a digital image management application that allows you to see all the images stored in any directory on your computer. Thumbnail views provide quick reminders of your pictures. Brighten, contrast, enhance, resize, crop, and color-correct your pictures. Create panoramic views, animations, screen savers, wallpaper, still pictures from MPEG, and even html photo albums.

### **Managing Your Pictures**

Use the collection feature to manage your pictures.

- 1 Click the Folder tab and browse to locate your pictures.
- 2 Select the pictures you want to have in a collection.
- 3 From Collection menu, select Create New Collection.
- 4 Enter a name for the collection and then click OK.

### **Creating a Photo Album**

- 1 Select the pictures you want to use to make an album.
- 2 From the Utilities menu, select Album Maker.
- 3 Choose the type of Album you want and click OK.

- 4 Now add more pictures, frames, text, and effects.
- 5 When you are finished, select Create Album in File menu or click the Create Album icon on the toolbar.
- 6 Designate the folder where you want to save the Album.
- 7 Enter the Target Album name, select Thumbnails and click OK.
- 8 The new album can be viewed using most internet browsers.

### *Using Panorama Maker*

Panorama Maker stitches a group of still images into a 360 degree panoramic picture. The source images should be the same size and overlap 20%.

How to stitch a panoramic picture:

- 1 Gather the source images into the same folder or collection.
- 2 Select the images you want to use.



We recommend 12 landscaped or 16 portrait pictures.

- 3 From the Utilities menu select Panorama Maker.
- 4 Select the correct lens and click OK. (If 35mm lens is selected, the prompt does not appear; to select a different lens, click the lens icon.)
- 5 Click the panoramic icon, near the bottom of the window.
- 6 Click Full Stitch.

### *Making Still Images and Panoramic from MPEG*

- 1 Select the MPEG file.
- 2 From the Movie/Sound menu, select Scene break down.
- 3 Then select Movie Stitch, to create a panoramic picture.



# Troubleshooting

This section describes how to solve common problems you may encounter when using your notebook. Many problems have simple solutions, so try these suggestions before you contact Sony PC Support (<http://www.sony.com/pcsupport>).

## *Troubleshooting your notebook*

(Windows Me only) When starting your notebook for the first time, the VAIO InitManager dialog box will appear. Please select “OK” to begin initial setup. If you do not execute the initial setup, you cannot use some of the VAIO original hardware functions such as Jog Dial, Power Management tool, the scroll function of touchpad, and the keyboard shortcut key function combined with the Fn key.

### *My notebook does not start*

- ❑ Check that the notebook is plugged into a power source and that it is turned on. Check that the power indicator on the front panel of the notebook indicates that the power is on.
- ❑ Check that the battery packs are inserted properly and that they are charged.
- ❑ Make sure there is no diskette in the floppy disk drive.
- ❑ Confirm that the power cord and all cables are connected firmly, as described in “Connecting Peripheral Devices” on page 71.
- ❑ If you plugged the notebook into a power strip or UPS, make sure the power strip or UPS is turned on and working.
- ❑ If you are using an external display, check that it is plugged into a power source and turned on. Check that the brightness and contrast controls are adjusted correctly. See the manual that came with your display for details.
- ❑ Moisture condensation may have occurred. Do not use the notebook for at least one hour and then turn on the notebook.
- ❑ Take the battery pack off the notebook, unplug the power cord and plug it again, then turn on the power.

### *My notebook starts, but my system doesn't start properly*

- ❑ When the internal backup battery is low on power, it may not start your system properly. The message “Press <F1> to resume, <F2> to setup” appears at the bottom of the screen. Follow these steps:
  - 1 Press F2. The BIOS Setup menu appears.
  - 2 Set the date (month/day/year). Press Enter.
  - 3 Press ↓ to select System Time, then set the time (hour: minute: second). Press Enter.
  - 4 Press → to select Exit, then press ↓ to select Get Default Values. The message “Load default configuration now?” appears.
  - 5 Select Yes and press Enter.
  - 6 Select Exit (Save Changes), and then press Enter. The message “Save Configuration changes and exit now?” appears.
  - 7 Select Yes, and then press Enter. The notebook restarts.

### *My notebook starts, but the message “Operating system not found” appears and Windows does not start*

- ❑ Make sure there is no diskette in the floppy disk drive (nonbootable).
- ❑ If a nonbootable diskette is in the drive, follow these steps:
  - 1 Turn off the notebook, and then remove the diskette.
  - 2 Restart the notebook and confirm that Windows starts properly.
- ❑ If Windows still does not start, follow the steps below to initialize the BIOS:
  - 1 Remove any diskette from the floppy disk drive.
  - 2 Remove any peripheral devices connected to the notebook.
  - 3 Turn off the notebook and then turn it on.
  - 4 Press the F2 key when the Sony logo appears. The BIOS setup menu screen appears.
  - 5 Press the directional arrow keys to select the Exit menu.
  - 6 Press the arrow keys to select “Get Default Values” and then press Enter. The message “Load default configuration now?” appears.

- 7 Select Yes, then press Enter.
- 8 Use the directional arrow keys to select “Exit” (Save Changes), and then press Enter. The message “Save configuration changes and exit now?” appears.
- 9 Select Yes, then press Enter. The notebook restarts.

If your notebook continues to display the message “Operating system not found,” and Windows does not start, contact Sony Customer Support.

### ***My notebook stops responding or does not shut down***

It is best to shut down your notebook using the Shut Down command on the Windows Start menu. Using other methods, including those listed here, may result in loss of unsaved data.

- ☐ Try restarting the notebook. On the Windows taskbar, click the Start button, click Shut Down, and then click Restart.
- ☐ If you cannot restart as described in the preceding step, you can restart the notebook by pressing Ctrl+Alt+Delete.
- ☐ If the previous step does not work, press and hold the power button for at least four seconds. This turns off the power.
- ☐ If your notebook stops responding while playing a CD or DVD, stop the CD/DVD, and restart the notebook by pressing Ctrl+Alt+Delete.
- ☐ Unplug the notebook from the AC adapter and remove the battery pack from your notebook.



Pressing Ctrl+Alt+Delete or turning off the notebook with the power switch may result in data loss in files that are currently open.

### ***My notebook does not enter the power saving mode I selected (Windows Me only)***

- ☐ Click Start, point to Program, point to Accessories, point to System Tools, and then click System Information.  
The Help and Support window appears.
- ☐ Click System Configuration Utility under the Tools menu.
- ☐ Click the Advanced button on the General tab, and confirm the following information:

- 1 Enable Deep Sleep is selected with a checkmark.
- 2 The message “Standby function is enabled” is displayed. If the message reads “Standby function is disabled,” click the Enable button.
- 3 The message “Hibernation feature is enabled” is displayed. If the message reads “Hibernation feature is disabled,” click the Enable button.
- 4 Click OK and restart your notebook.

### ***My system enters System Idle mode when System Suspend mode has been selected***

- ☐ If you are connecting an optical disc drive with a PC card, disconnect it by stopping the PC card. Use the Sony Notebook Setup utility to disable devices that you are not currently using. See “Removing a PC card” for more information.
- ☐ Make sure the PC Card is compatible with your notebook’s Windows® operating system.



(Windows 2000 only) When the notebook enters and returns from a power saving mode after removing the optical drive, the message “Unsafe Removal of Device” may appear and the device name is shown listed as “Secondary IDE Channel.” Click OK.

### ***The Power Management setting is not responding***

Your notebook’s operating system may become unstable if a lower power state, such as system hibernation is initiated, and then changed before the notebook completely enters the lower power state. To restore the notebook to its normal operating stability:

- ☐ Close all open applications.
- ☐ Push and hold the power button for four seconds or longer to shut down the notebook.

### ***The sound of my notebook’s fan is too loud***

Use the PowerPanel utility to change the Thermal Control Strategy setting to Quiet. This setting slows down the CPU speed. See PowerPanel Help for more information.

## ***Troubleshooting the LCD screen***

### ***My LCD screen is blank***

- ☐ Check that the notebook is plugged into a power source and that it is turned on.
- ☐ Check that the power indicator on the notebook is on.
- ☐ Check that the battery pack(s) is inserted properly and charged.
- ☐ The notebook may be in LCD (Video) Standby mode. Press any key to activate the screen.
- ☐ The display mode may be set to external display mode. Press and hold the Fn key while pressing F7 several times.

### ***My LCD screen continues to show the previous screen (Windows Me only)***

Press the Windows key and D key twice to refresh the screen.

### ***The image on my connected external display is not centered or sized properly***

Use the controls on your external display to adjust the image. See the manual that came with your display for more information.

### ***I want to change the video resolution of my display***

You can use independent controls to change the video resolution of your display.

- ☐ Click Start, point to Settings, point to Control Panel, and then click the Display icon.  
The Display Properties dialog box appears.
- ☐ Click on the Settings tab.
- ☐ Move the Screen Area slider to change your video resolution.

## ***Troubleshooting the mouse and touchpad***

### ***My mouse does not work***

- ☐ If you are using an external mouse, check that the mouse is plugged into the mouse connector. See “Connecting a Universal Serial Bus (USB) Device (Mouse or Keyboard)” on page 92 or “Connecting an external mouse or keyboard” on page 78 for details.

- ❑ If you connected an external mouse while your notebook is on, you must restart your notebook.
- ❑ If you are using an optional Sony USB mouse PCGA-UMS1, check that the mouse is plugged into the USB connector.

### *My touchpad does not work properly*

- ❑ You may have disabled the touchpad without a mouse being connected to the notebook. You must restart the notebook to make the touchpad work again.
- ❑ If your touchpad is interpreting a single tap as a double-click, you must adjust the button assignments. Follow these steps:
  - 1 Click Start, point to Control Panel, and then click on the Mouse icon.
  - 2 Change the button assignments in the Mouse Properties dialog box. (One of the buttons is assigned to the double-click action.)

### *The pointer does not move while using the Touchpad or Mouse*

- ❑ Click the Start button on the Windows taskbar, and select Shut Down to display the Shut Down Windows dialog box, then press Enter.
- ❑ If you cannot turn off your notebook as described in the step above, press Ctrl+Alt+Delete to restart the notebook.
- ❑ If you cannot restart your notebook as described in the step above, press and hold the power button for more than four seconds to turn off the notebook.
- ❑ If the pointer does not move while playing a disc, press Ctrl+Alt+Delete to stop playback and restart the notebook.

### *Troubleshooting drives, PC cards and peripheral devices*

#### *I inserted a compatible device into the multipurpose drive bay, but the icon does not appear in the My Computer window*

- ❑ The device has not been recognized. Put the notebook into System Idle mode by pressing the Fn and S keys and then resume.
- ❑ If the device is still not recognized or does not appear in the My Computer window, remove and reinsert it.

### ***My floppy disk drive can not write to a diskette***

- ❑ If the diskette is write-protected, disable the write-protect feature or use a diskette that is not write-protected.
- ❑ Check that the diskette is properly inserted into the floppy disk drive.

### ***My floppy disk drive icon doesn't appear in the My Computer window, even though it is connected (Windows Me only)***

- ❑ Click Start, point to Settings, point to Control panel, and then click System. The System Properties dialog box appears.
- ❑ Click the Device Manager tab.
- ❑ Double-click Floppy Disk Controller and then click Standard Floppy Disk Controller.
- ❑ Click Delete. The Confirmation window will appear.
- ❑ Verify that Delete From All Settings is selected and press OK.
- ❑ Click Update in the System Properties window.
- ❑ Double click Disk Drive and confirm that GENERIC NEC FLOPPY DISK is shown.

### ***My CD, DVD, or CD-RW drive is not playing my CD or DVD properly***

- ❑ Make sure the optical drive is inserted correctly into the multipurpose bay.
- ❑ Make sure the label of the disc is facing up.
- ❑ If the disc requires software, make sure the software is installed according to the manufacturer's instructions.
- ❑ A dirty or damaged disc may cause the notebook to stop responding while it tries to read the disc. If necessary, restart the notebook, remove the disc, and then check it for dirt or damage.
- ❑ If you see video but can not hear audio, check all of the following:
  - ❑ Check that your DVD-ROM drive does not have the mute setting enabled.
  - ❑ Check the volume setting in the audio mixer.

- ❑ If you are using external speakers, check the volume settings, and then check the connections between your external speakers and the notebook.
- ❑ Click Start > Control Panel > System > Device Manager. Check that the correct drivers are installed properly.
- ❑ Do not use adhesive labels to identify the CD. The label may come off while the disc is in use in the optical drive and cause the drive to malfunction.
- ❑ If a region code warning appears when you try to use your DVD-ROM drive, it may be that the DVD you are trying to play is incompatible with the DVD-ROM drive. Check the region code listing on the DVD packaging.
- ❑ Moisture condensation may have occurred. Leave the notebook idle for at least 1 hour with the notebook turned on.

***My CD, DVD, or CD-RW drive tray does not open***

- ❑ Make sure the notebook is turned on.
- ❑ Press the Eject button on the DVD-ROM drive.
- ❑ If the Eject button does not work, you can open the tray by inserting a sharp, pointed object into the hole to the right of the Eject button.

***I cannot use digital video (DV) devices. The message “DV equipment seems to be disconnected or turned off” appears.***

- ❑ Check that the DV device is turned on and that the cables are properly connected.
- ❑ If you are using multiple i.LINK devices, the combination of the connected devices may cause unstable operation. In this case, turn off your notebook and all connected devices. Disconnect the devices that are not in use. Check the connections for each device, then restart your notebook.

***The i.LINK-compatible devices connected to the Mini Docking Station do not work***

- ❑ Use the i.LINK connector that is located on your notebook.
- ❑ If the message “There are no Digital Video devices connected to this computer, or the power is off” appears, unplug the i.LINK cable and try plugging it in again.

### ***My PC card is not working***

- ❑ Make sure the PC card is compatible with Microsoft® Windows®.
- ❑ Use the Sony Notebook Setup utility to disable devices you are not currently using.
- ❑ If you are using two PC cards, use the Sony Notebook Setup utility to disable the devices you are not currently using.

## ***Troubleshooting software***

### ***My software program stops responding or crashes***

Contact the software publisher or designated provider for technical support. See the “About Software” section of this manual.

### ***When I click an application icon, the message “You must insert the application CD into your CD-ROM (DVD-ROM/CD-RW) drive” appears and the software does not start***

- ❑ Some titles require specific files that are located on the application CD. Insert the disc and try starting the program again.
- ❑ Make sure you place the CD in the tray with the label side facing up.

### ***I hear background “noise” while using Windows Media Player to play my music CDs***

Sony suggests using the preinstalled Media Bar software to play audio CDs.

### ***I can not use the DVgate software***

If your notebook is using the Ultimate Battery Life profile for its power saving mode, you cannot use DVgate or Smart Connect software. Please select another profile.

### ***My voice-related software does not work properly***

- ❑ Disable echo function of the microphone by taking the following steps:
  - 1 Click Start, point to Settings, and then point to Control Panel.
  - 2 Click Yamaha DS-XG.
  - 3 Click the Echo tab and remove the checkmark. Click OK.
- ❑ Contact the software publisher or designated provider for technical support

## ***Troubleshooting the modem***

### ***My modem does not work***

- ❑ Check that the phone line is plugged into the line jack. See “Connecting a Phone Line” on page 72 for details.
- ❑ Check that the phone line is working. You can check the line by plugging in an ordinary phone and listening for a dial tone.
- ❑ Check that the phone number the program is dialing is correct.
- ❑ Check that the software you are using is compatible with the notebook’s modem. (All preinstalled Sony programs are compatible.)

### ***My modem connection is slow***

Your notebook is equipped with a 56K/V.90 compatible modem. Many factors may influence modem connection speed, including telephone line noise or compatibility with telephone equipment (such as fax machines or other modems). If you think your modem is not connecting properly to other PC-based modems, fax machines, or your Internet Service Provider, check the following:

- ❑ Have your phone company check that your phone line is free from any line noise.
- ❑ If your problem is fax-related, check that there are no problems with the fax machine you are calling and that it is compatible with fax modems.
- ❑ If you are having a problem connecting with your Internet Service Provider, check that the ISP is not experiencing technical problems.
- ❑ If you have a second phone line available, try connecting the modem to that line.

## ***Troubleshooting audio***

### ***My speakers have no sound***

- ❑ If the built-in speakers are turned off, press Fn+F3 to turn on the speakers. You can also turn on the speakers using the Jog Dial control.
- ❑ If the speaker volume is turned to the minimum, press Fn+F4, and then press **↑** or **→** to increase the volume or you can use the Jog Dial control to adjust the volume.
- ❑ If nothing is displayed when you press Fn+F3 or Fn+F4.

- 1 Double click System in Control Panel.
  - 2 Set the sound device to enable in Device Manager.
- ❑ If your notebook is powered by batteries, check that the battery packs are inserted properly and that they are charged.
  - ❑ If you are using an application that has its own volume control, check that the volume is turned up.
  - ❑ Check the volume controls in Windows®.
  - ❑ If you connect external speakers, check that the speakers are properly connected and the volume is turned up. If the speakers have a mute button, make sure it is off. If the speakers are powered by batteries, check that the batteries are inserted properly and that they are charged.
  - ❑ If you have connected an audio cable to the Headphone connector, disconnect the cable.

### *My microphone does not work*

If you are using an external microphone, check that the microphone is plugged into the Microphone connector. See “Connecting an External Microphone” on page 91 for details.

## *Troubleshooting the printer*

### *I cannot print*

- ❑ The default setting for the printer port mode is correct for most printers. If you cannot print, try changing the printer port mode. In Sony Notebook Setup, select the Printer tab. If the printer port mode is set to ECP, change it to bi-directional. If the printer port mode is set to bi-directional, change it to ECP. See “Displaying the Sony Notebook Setup Screen” in the *Customizing Your Notebook* manual for details on using Sony Notebook Setup.
- ❑ Your connected printer may not function after the computer resumes from a power saving mode. If this occurs, follow these steps to reset the printer connection:
  - ❑ Right-click the My Computer icon on the desktop, and then select Properties.
  - ❑ Click the Device Manager tab.
  - ❑ Select Refresh, and then click OK. The printer should function properly.

## Using the System and Application Recovery CDs

The following sections describe how to use the System Recovery and Application Recovery utilities.

### Using the System Recovery CD(s)

You can reinstall software titles that shipped with your computer if they are corrupted or erased. You may not need to recover the entire contents of your hard drive. If you experience a problem with your computer, reinstalling an individual device driver or software title may correct the problem. Use the Application Recovery CD(s) to reinstall individual applications or device drivers. See “Using the Application Recovery CD(s)” on page 124.

The System Recovery CD contains a backup copy of all the software originally installed on your hard disk drive. **It can be used only to recover the hard disk of the notebook you purchased.**

The System Recovery utility gives you two options:

- ❑ **Full Restore without Format** — Restores all the software titles that originally came with your computer without formatting the hard disk.



If you recover your operating system using the System Recovery CD, Microsoft Word 2000 will not be recovered. Use the supplied Word 2000 CD to recover this application

- ❑ **Full Restore with Format** — Formats the hard disk drive and then restores all the original software..



**If you choose the Full Restore with Format option, your hard disk will be formatted, which removes all the information on the hard disk drive. You will lose any software you have installed and any other files you have created since you started to use your computer. This means you will have to reinstall any applications that were not included with the computer when you purchased it. If you choose the Full Restore without Format option, you may need to reinstall applications that were not included with the computer when you purchased it. If you have any questions on using the System Recovery CD, contact Sony Customer Support.**

### **To use the System Recovery CD(s)**

- 1 Insert the Sony System Recovery CD in the DVD-ROM drive.
- 2 Shut down your computer as described in “Shutting Down Your Computer” on page 30.
- 3 Wait four seconds and turn on your computer.
- 4 Click OK to signify you have read and accept the Microsoft End-User License Agreement.
- 5 When the System Recovery menu appears, follow the on-screen instructions to complete the recovery process.



Your system may include one or two System Recovery CDs. If you have two System Recovery CDs, insert the first CD to run the System Recovery program. You are prompted to insert the second CD once the information from the first CD has been installed.

The recovery process takes from 30 to 60 minutes to complete.

After recovering your system using the SRCD, you may be prompted to insert your ARCD after restarting Windows. Insert the ARCD to automatically complete recovery of your system.

### **If your computer does not start from the Recovery CD**

- 1 Press the power button and hold it for more than four seconds to turn off the computer.
- 2 Turn on the computer. When the Sony logo is displayed, press the F2 key. The BIOS setup menu screen appears.
- 3 Press the arrow keys to select the Exit menu.
- 4 Press the arrow keys to select “Get Default Values” and then press the Enter key. The message “Load default configuration now?” appears.
- 5 Check that “Yes” is selected, then press the Enter key.
- 6 Press the arrow keys to select “Exit” (Save Changes) and then press the Enter key. The message “Save configuration changes and exit now?” appears.
- 7 Check that “Yes” is selected, then press the Enter key. The computer restarts from the Recovery CD.

## Using the Application Recovery CD(s)

The Application Recovery CD(s) allows you to reinstall individual applications and device drivers if they are corrupted or erased. Reinstalling an individual device driver or software title may correct a problem you are experiencing with your computer, and you may not need to recover the entire contents of your hard drive. If you do need to reinstall all the software titles that shipped with your computer, use the System Recovery CD(s). See “Using the System Recovery CD(s)” on page 122.



You must be in Windows to run the Application Recovery CD. If you have any questions on using the Application Recovery CD, contact Sony Customer Support.

### To use the Application Recovery CD(s)

- 1 Turn on your computer. If your computer is already on, close all applications.
- 2 When the Windows desktop appears, insert the Sony Application Recovery CD in the DVD-ROM drive. The Application Recovery utility loads automatically.
- 3 When the Application Recovery menu appears, select the icon for the application you want to restore and then follow the on-screen instructions to complete the recovery process.



Your system may include one or two Application Recovery CDs. If you have two Application Recovery CDs, insert the first CD to run the Application Recovery program. You may be prompted to insert the second CD, depending on the application you wish to restore.

## Recovering Microsoft® Word 2000

If you recover your operating system using the System Recovery CD, Microsoft Word 2000 will not be recovered. Use the supplied Word 2000 CD to recover this application.

## ***Supplemental Information***

### ***Switching Between NTSC and PAL Standards***

Your computer is designed to allow you to switch between NTSC and PAL standards. For details on switching from one standard to another, go to Ask Sony at <http://www.sony.com/pcsupport>.

### ***Selecting the Printer Port Mode for Your Printer***

The default setting for the printer port mode is correct for most printers. If you cannot print, try changing the printer port mode. In Sony Notebook Setup, select the Printer tab. If the printer port mode is set to ECP, change it to bi-directional. If the printer port mode is set to bi-directional, change it to ECP. See “Displaying the Sony Notebook Setup Screen” in “*Customizing Your VAIO® Notebook*” for details on using Sony Notebook Setup.

### ***Using the Touchpad***

In addition to using the left and right buttons for mouse clicks, you can tap on the touchpad to indicate mouse clicks. By default, the tapping feature is disabled. If you wish to turn on the tapping feature, click the Mouse icon in the Control Panel, select the Tapping tab, and click the check box to enable tapping.

### ***Using Optical Out to Record Onto a MiniDisc***

To ensure proper operation, disable the IrDA feature before using Optical Out (from a Mini Docking Station) to record onto a MiniDisc. To disable this feature, from the Start menu, point to Settings and Control Panel. Select Infrared. Click the Options tab, and uncheck the “Enable infrared communication” checkbox.

### ***Hardware Temperature***

The AC adapter or the bottom panel of your computer may become warm. This is the result of CPU operation and does not indicate a malfunction of the computer. The actual temperature varies depending on the peripherals and software you are using and the length of time that the unit is in use. The AC adapter may also become warm when the computer is off and the battery is charging.

## Getting Help

Sony provides several support options for your Sony computer. When you have questions about your computer and the preinstalled software, check these sources for answers, in the following sequence:

- 
- 1**     ***VAIO® Notebook User Guide***  
The User Guide (this manual) contains information on how to get the most from your computer, find help, and solve common problems. It also contains product specifications.

---

  - 2**     ***Customizing Your VAIO® Notebook***  
The electronic document contains additional information on customizing your computer. You can access this guide from the Windows Start menu by selecting Programs and then VAIO User Manual.

---

  - 3**     ***Manuals and online help files that may accompany your preinstalled software***  
Most of the manuals for preinstalled software are located on your hard disk drive as online help files. You can access the online help files from the Help menu in the specific application. A printed manual is available for some applications.

---

  - 4**     ***VAIO Support Agent***  
VAIO Support Agent can be accessed from the Windows desktop. Using advanced diagnostic technology, Sony's VAIO Support Agent runs scheduled protections of your applications, network settings, and other important software settings. When your software is protected, you can use VAIO Support Agent to repair software problems by restoring your software to any of the previously protected states.

---

  - 5**     ***Sony PC Support***  
Provides instant access to information on commonly encountered problems. Enter a description of your problem and the Knowledge Database searches for the corresponding solutions online. You can access the Sony PC Support at: <http://www.sony.com/pcsupport>

---

  - 6**     ***Sony Fax-on-Demand***  
This service provides you with answers to commonly asked questions. You can use this automated service to request a list of available topics and then select the topics that you want to receive. To contact the Sony fax-on-demand service, call 1-888-4SONYPC (1-888-476-6972). (Requires a fax machine or your fax software.)

---

  - 7**     ***Calling Sony Customer Support***  
You can call and speak with a Sony Customer Support Representative without using your computer by calling 1-888-4SONYPC (1-888-476-6972). Software support is available free of charge for 90 days after the original date of purchase.
-

# Specifications

| <b>Model</b>                          | <b>PCG-XG38/PCG-XG38K</b>                                                                                                                                          | <b>PCG-XG39/PCG-XG39K</b>                                                                           |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| <b>Processor</b>                      | 700 MHz <sup>*</sup> Mobile Intel® Pentium® III featuring Intel® SpeedStep™ technology <sup>†</sup>                                                                | 850 MHz <sup>*</sup> Mobile Intel® Pentium® III featuring Intel® SpeedStep™ technology <sup>†</sup> |
| <b>Hard Disk Drive</b>                | 20 GB <sup>‡</sup>                                                                                                                                                 | 30 GB <sup>‡</sup>                                                                                  |
| <b>Standard RAM</b>                   | 128 MB PC100 SDRAM (One 128 MB module), expandable to 256 MB                                                                                                       |                                                                                                     |
| <b>LCD Screen</b>                     | 13.3" XGA TFT                                                                                                                                                      | 14.1" XGA TFT                                                                                       |
| <b>L2 Cache Memory</b>                | 256 KB (CPU Integrated)                                                                                                                                            |                                                                                                     |
| <b>MPEG</b>                           | MPEG1/MPEG2 Digital Video; supports full-screen playback                                                                                                           |                                                                                                     |
| <b>Graphics</b>                       | 128-bit accelerator with 8 MB Video SGRAM, AGP, 3D acceleration                                                                                                    |                                                                                                     |
| <b>Sound Capabilities</b>             | 16-bit CD-quality stereo sound                                                                                                                                     |                                                                                                     |
| <b>Diskette Drive</b>                 | Removable 3.5" 1.44 MB                                                                                                                                             |                                                                                                     |
| <b>DVD-ROM Drive</b>                  | Reads CD data from 10.3X to 24X variable transfer rate.<br>Reads DVD data from 1.7X to 8X variable transfer rate. <sup>**</sup>                                    |                                                                                                     |
| <b>Laser Diode Properties</b>         | DVD-ROM drive wave length 780 nm and 650 nm<br>laser output 30.2 μW                                                                                                |                                                                                                     |
| <b>Modem</b>                          | V.90/K56flex compatible data/fax modem <sup>††</sup>                                                                                                               |                                                                                                     |
| <b>Infrared</b>                       | Supports 4 Mbps, 1.1 Mbps, and 115 kbps IrDA Standard                                                                                                              |                                                                                                     |
| <b>Hot-swappable Multipurpose Bay</b> | Supports: Floppy disk drive (included)<br>Second rechargeable battery (optional)<br>DVD-ROM drive (included)<br>CD-RW (optional)<br>2nd hard disk drive (optional) |                                                                                                     |
| <b>Expansion Capabilities</b>         | Two type II PC cards<br>One type III PC card Card Bus support                                                                                                      |                                                                                                     |
| <b>Built-in Capabilities</b>          | Microphone<br>Stereo speakers<br>Touchpad                                                                                                                          |                                                                                                     |
| <b>Telecommunication Capabilities</b> | Fax send/receive                                                                                                                                                   |                                                                                                     |

| <b>Model</b>                                                                   | <b>PCG-XG38/PCG-XG38K</b>                                                                                                                                                                                                                                                              | <b>PCG-XG39/PCG-XG39K</b>                                                                                   |
|--------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| <b>Connection Capabilities</b>                                                 | USB Port<br>S400 i.LINK®<br>AC adapter<br>Headphone<br>Mini Docking Station<br>Infrared<br>Microphone<br>Type II (2) & III PC Cards<br>RJ-11 phone jack                                                                                                                                |                                                                                                             |
| <b>Additional Connection Capabilities With Mini Docking Station (optional)</b> | Optical digital audio output<br>VGA monitor<br>S400 i.LINK<br>Mouse (PS/2® style)/keyboard<br>Control A1 II<br>S Video (output)<br>Video (output)<br>Serial port<br>Line in<br>Line out<br>Two USB ports<br>Parallel (printer) port<br>Floppy disk drive<br>Type II (1) & III PC Cards |                                                                                                             |
| <b>Supplied Accessories</b>                                                    | Floppy disk drive<br>Rechargeable battery<br>AC adapter and power cord<br>Weight Saver<br>FDD cable<br>DVD-ROM drive                                                                                                                                                                   |                                                                                                             |
| <b>Power Requirements</b>                                                      | 73.2 watts maximum (19.5V DC/AC 100-240V)                                                                                                                                                                                                                                              |                                                                                                             |
| <b>Power Management</b>                                                        | Energy Star compliant<br>Advanced Configuration and Power Interface (ACPI)                                                                                                                                                                                                             |                                                                                                             |
| <b>Battery</b>                                                                 | Lithium-ion, supports dual battery operation                                                                                                                                                                                                                                           |                                                                                                             |
| <b>Dimensions</b>                                                              | 11.9" (w) x 1.8" (h) <sup>††</sup> x 9.9" (d)<br>(303 x 45 x 250.7 mm)                                                                                                                                                                                                                 | 12.1" (w) x 1.8" (h) <sup>††</sup> x 10.3" (d)<br>(308 x 45 x 261.2mm)                                      |
| <b>Weight</b>                                                                  | 6.0 lbs. (2.7 kg) (with battery and weight saver)<br>6.4 lbs. (2.9 kg) (with battery and floppy disk drive)                                                                                                                                                                            | 6.2 lbs. (2.8 kg) (with battery and weight saver)<br>6.5 lbs. (3.0 kg) (with battery and floppy disk drive) |

| <b>Model</b>                 | <b>PCG-XG38/PCG-XG38K</b>                                                                                                       | <b>PCG-XG39/PCG-XG39K</b> |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------|---------------------------|
| <b>Operating Temperature</b> | 41° F to 95° F (+5° C to 35° C)<br>(Temperature gradient less than 18° F/10° C/hour)                                            |                           |
| <b>Operating Humidity</b>    | 20% to 80% (not condensed) when that humidity is less than 65% at 95° F (35° C) (hygrometer reading of less than 84° F, 29° C)  |                           |
| <b>Storage Temperature</b>   | -4° F to 140° F (-20° C to 60° C)<br>(temperature gradient less than 18° F (10° C)/hour)                                        |                           |
| <b>Storage Humidity</b>      | 10% to 90% (not condensed) when that humidity is less than 20% at 140° F (60° C) (hygrometer reading of less than 95° F, 35° C) |                           |

\* MHz denotes microprocessor internal clock speed; other factors may affect application performance. Processor operating speed may be reduced while operating on battery power.

† The processor may be reduced to a lower operating speed when operating on battery power.

‡ GB means one billion bytes when referring to hard drive capacity. Accessible capacity may vary.

\*\* Data on a DVD-ROM is read at a variable transfer rate, ranging from 1.7X at the innermost track to 8X at the outermost track (the data transfer standard 1X rate is 1392 kbytes/s). The average data transfer standard is approximately 2.85X or 3823 kbytes/s. A DVD-ROM drive reads data on a CD-ROM at a variable transfer rate, ranging from 10.3X at the innermost track to 24X at the outermost track. The average data transfer rate is approximately 17.15X or 2936 kbytes/s or 2576 kbytes/s. If a region code warning appears when you are using the DVD player, it could be that the DVD-ROM you are trying to play is incompatible with the DVD-ROM drive in your VAIO Notebook. Region code indicators such as a “1” or “ALL” are labeled on some DVD to indicate what type of player can play the discs. Unless a “1” or “ALL” is labeled on your DVD or on the packaging, you cannot play the disc on this player.

If a region code warning appears when you are using the DVD player, it could be that the DVD-ROM you are trying to play is incompatible with the DVD-ROM drive in your VAIO Notebook. Region code indicators such as a “1” or “ALL” are labeled on some DVD to indicate what type of player can play the discs. Unless a “1” or “ALL” is labeled on your DVD or on the packaging, you cannot play the disc on this player.

†† Maximum speed for faxing is 14.4 kbps. Your 56K/V.90 compatible modem is capable of downloading at 56 kbps. Your online service or Internet Service Provider, however, may not support this technology or operate at this speed.

‡‡ Height measured at thickest point. Thinnest height is 1.5” (39 mm).

Specifications are subject to change without notice.



# Index

## A

- AC adapter 23
- AC power 23
- adding
  - hardware 71
  - peripherals 71
- adjusting
  - brightness 30, 37
- Alt key 34
- Application Recovery CD 124
- Applications key 34

## B

- batteries 28
  - using 28
- battery packs 24
  - charging 26, 57
  - indicator light status 27
  - indicator lights 36, 56
  - inserting 25
  - inserting into battery bay 25
  - loading 25
  - power status 26
  - rechargeable 23
  - removing 27, 56, 57
- brightness
  - adjusting 30, 37

- built-in speakers
  - See also speakers 37
- buttons
  - Eject 46, 47
  - Start 30
  - Start (Windows Me) 30

## C

- cables
  - power cord 23
- canceling commands 34
- Caps Lock
  - indicator light 36
- CD-ROMs
  - cleaning 50
  - handling 50
- charging battery packs 26, 57
- choosing
  - power source 24
- cleaning
  - CD-ROMs and DVD-ROMs 50
- Closing your computer
  - intercooler flap 32
- coin-operated telephones 72
- computer 126
  - handling 16
  - lithium ion battery 7

- starting 29
- troubleshooting 111, 119
- connecting
  - coin-operated telephones 72
  - external speakers 90
  - hard drives 51
  - microphone 91
  - Mini Docking Station 74
  - monitor 87
  - multiple phone lines 72
  - network 51
  - party phone lines 72
  - PBX 72
  - phone line 72
  - power source 23
- connectors
  - DC In 23
  - i.LINK 21
  - infrared 54
  - monitor
  - printer 78
  - USB 20, 22
- correction keys 34
- Ctrl key 34
- cursor-movement keys 34
- customer assistance
  - support options 126

## D

- DC In 23
- digital still camera 54
- diskettes
  - ejecting 43

- handling 44
- inserting into drive 43
- troubleshooting 117
- display
  - options 89
  - See also monitor
  - selecting 89
- display filter
  - handling 17
- disposal of lithium ion battery 7
- Dolby Digital Decoder 84
- Dolby Digital™ Decoder 84
- drives
  - installing additional
    - hard disk 51
- DVD-ROM discs
  - ejecting 47
  - inserting 46
- DVD-ROM drive
  - closing tray 47
  - opening tray 46
  - using 46
- DVD-ROM drive tray
  - troubleshooting 118
- DVD-ROMs
  - cleaning 50
  - handling 50

## E

- Eject button 43, 46, 47
- ejecting
  - battery packs 57
  - diskettes 43

- DVD-ROM discs 47
- electronic
  - documentation 126
- Energy Star 2
- ergonomic considerations 14
- Escape key 34
- external devices
  - display 89
  - See also monitor
  - speakers 37, 90

## F

- faxes
  - laws governing 6
- floppy disk drive
  - disconnecting 44
  - troubleshooting 117
- Fn 38
- Fn key 34
  - combination commands 37
- function keys 34

## H

- handling 16
  - CD-ROMs and DVD-ROMs 50
  - diskettes 44
- handling the LCD screen 16
- hard drives
  - indicator light 36
  - installing additional 51
- hardware
  - online support 126
- Help

- Mouseware 40
- help 126

## I

- i.LINK 21
- indicator lights 36
  - battery 36, 56
  - Caps Lock 36
  - hard drive 36
  - Num Lock 36
  - Scroll Lock 36
- infrared
  - communication devices 54
    - other computers 54
  - infrared port 54
  - infrared transmission
    - active distance 55
    - troubleshooting 55
- input devices 5
- Insert key 34
- inserting
  - battery pack 25
  - diskettes into drive 43
  - DVD-ROM discs 46
- installation 15
- installing
  - hard drives 51
  - hardware 71
  - peripherals 71
- Intercooler flap
  - closing 32
- interference 5

## J

Jog Dial control 65  
    using 66

## K

keyboard 34

## L

### LCD

    lock lever 29  
    selecting to display output  
        89  
    troubleshooting 115

### LCD screen

    handling 16

### lever

    LCD 29  
    weight saver release 57

### lithium ion battery

    disposal 7  
    safety precautions 7

### loading

    battery pack 25

## M

### MD 81

### Memory

    adding 93

### microphone

    connecting 91  
    troubleshooting 121

Mini Docking Station 73, 74,  
75, 76, 77, 78, 79, 80, 81, 82, 83,  
84

    attaching 74

    Back 73

    Connecting Audio  
    and Video 84

    Left/Right 74

    peripheral device

        audio/video (AV) 81

        CD player 81

        MD player 81

        floppy disk drive (FDD)  
        80

        printer 78, 79

        TV/VCR 85

    removing 76

    Undocking 76

### Mini docking station

    connecting

        printer 78

    Front 73

### modem

    laws governing 6

    troubleshooting 120

### monitor 20

    connecting 87

    selecting 89

    switching among 37

### mouse

    troubleshooting 115

### Mouse Properties screen 40

### Mouseware

    accessing help 40

    features 40

### MovieShaker instructions 105

multiple phone lines 72

## N

navigation keys 34

network

connecting 51

Num Lock

indicator light 36

numeric keypad area 34

## O

online

help 126

opening

DVD-ROM drive tray 46

operator keys 34

output devices 5

## P

party phone lines 72

PBX 72

PC card

inserting 51

release button 51

removing 53

slot protector 52

slots 51

troubleshooting 119

Type III 51

Peripheral device

printer 78

peripheral devices

connecting 71

phone

connecting line 72

jack 72

laws governing 6

Ports

CONTROL A1 73

DC IN 73

i.Link 73

LINE IN 73

LINE OUT 73

Monitor 73

Mouse/Keyboard 73

OPTICAL OUT 73

Parallel (printer) 73

S VIDEO 73

Serial 73

SERIAL/CONTROL

A1 switch 73

USB 73

VIDEO 73

power 36

cord 23

switch 29

power saving modes 69

System Hibernation 37, 70

System Idle 38, 69

System Suspend 69

Video Standby 38

power source 24

power sources 24

connecting 23

Print Screen key 34

printer

connector 78

printer connector 78

## R

radio interference 5

rechargeable battery packs 23, 24

recharging battery packs 26

Recovery CD 124

regulatory information 5

removing

- battery packs 27

- diskettes 43

- floppy disk drive 44

- Mini Docking Station 76

replacing

- battery packs 56

restoring data 124

## S

Scroll Lock

- indicator light 36

second battery pack 24, 56

selecting

- display 89

- LCD 89

- monitor 89

- power source 24

setting up your PC

- support 126

Shift key 34

Shut Down Windows dialog box 30

Shutting Down 30

Sony Fax-on-Demand service

126

speakers

- external 90

- switching 37

- troubleshooting 120

- volume 37

Start button 30

starting

- computer 29

startup problems 30

switching

- display 37

- monitor 37

System Hibernation mode 37, 70

System Idle mode 38, 69

System Suspend mode 37, 69

## T

technical support

- support options 126

touchpad 40

troubleshooting 111

- startup 30, 111

turning on

- computer 29

TV

- interference 5

TV or a video deck 85

## U

USB

- connector 20, 22

## V

VAIO Action Setup 65, 101

Video Standby mode 38

## W

weight saver

    attaching 56

Windows Me

    Control Panel 55

    Explorer 35

    Find window 35

    help 35

    key 34


    key combinations 35

    Start button 30


    taskbar 30, 113



### 1-1. Flowchart

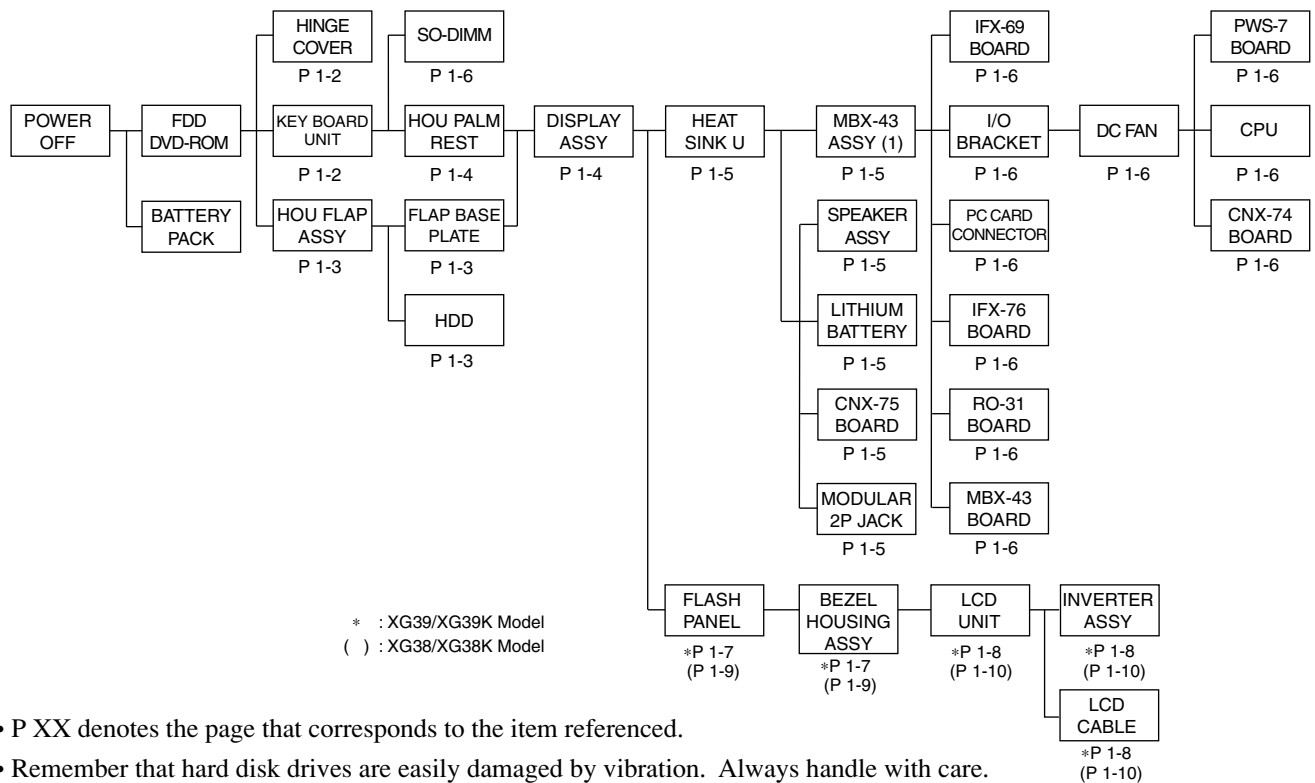


### 1-2. Main Electrical Parts Location Diagram

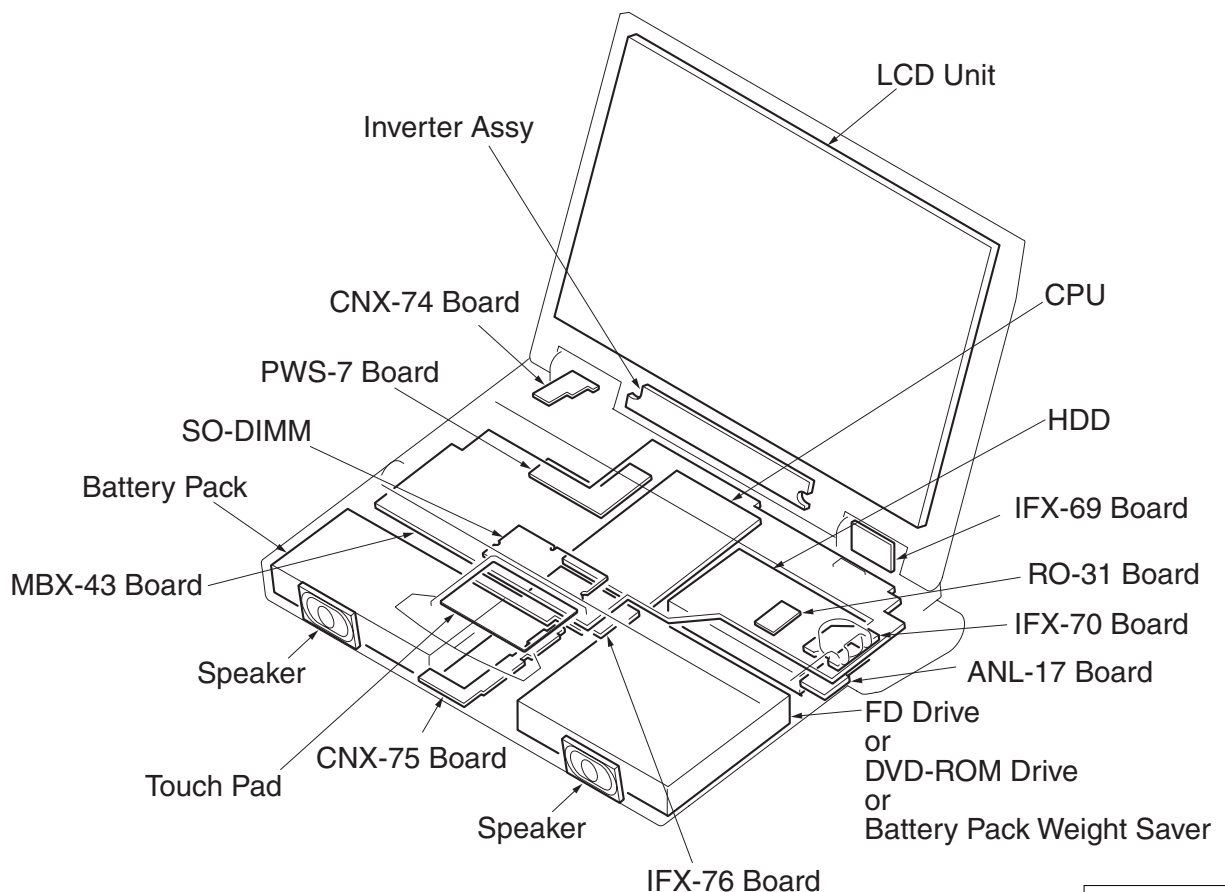


Confidential

# 1-3. Removal

## 1. Hinge Cover

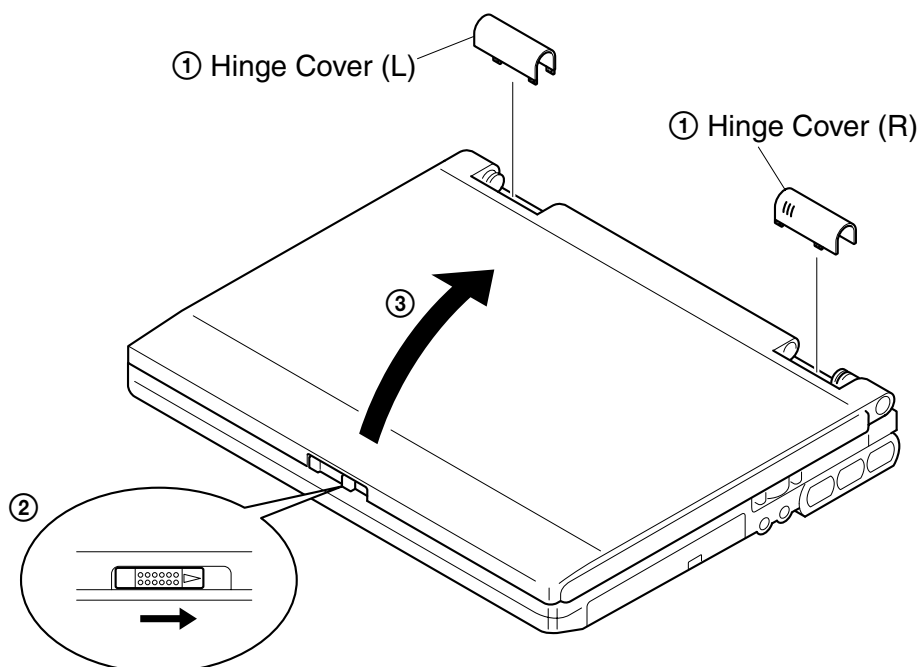


## 2. Keyboard Unit

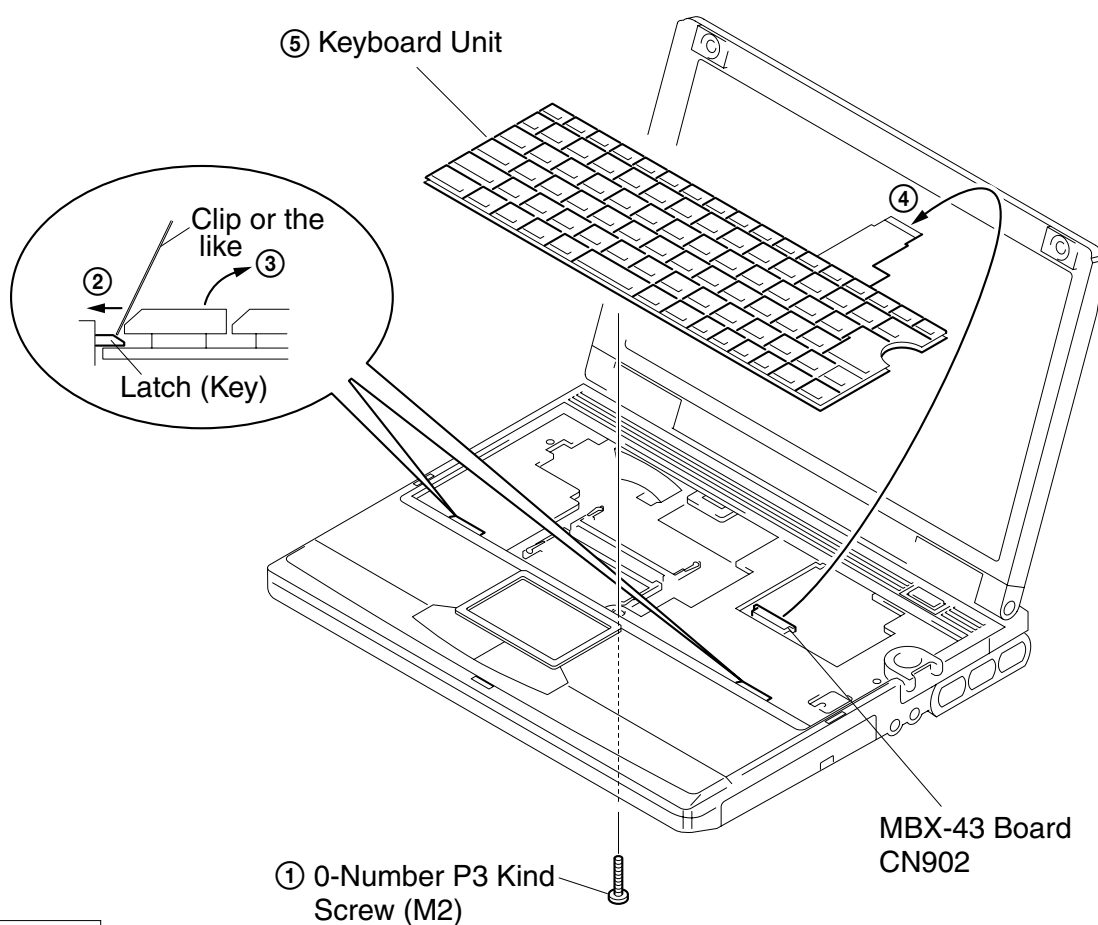


**Confidential**


### 3. HDD Assy

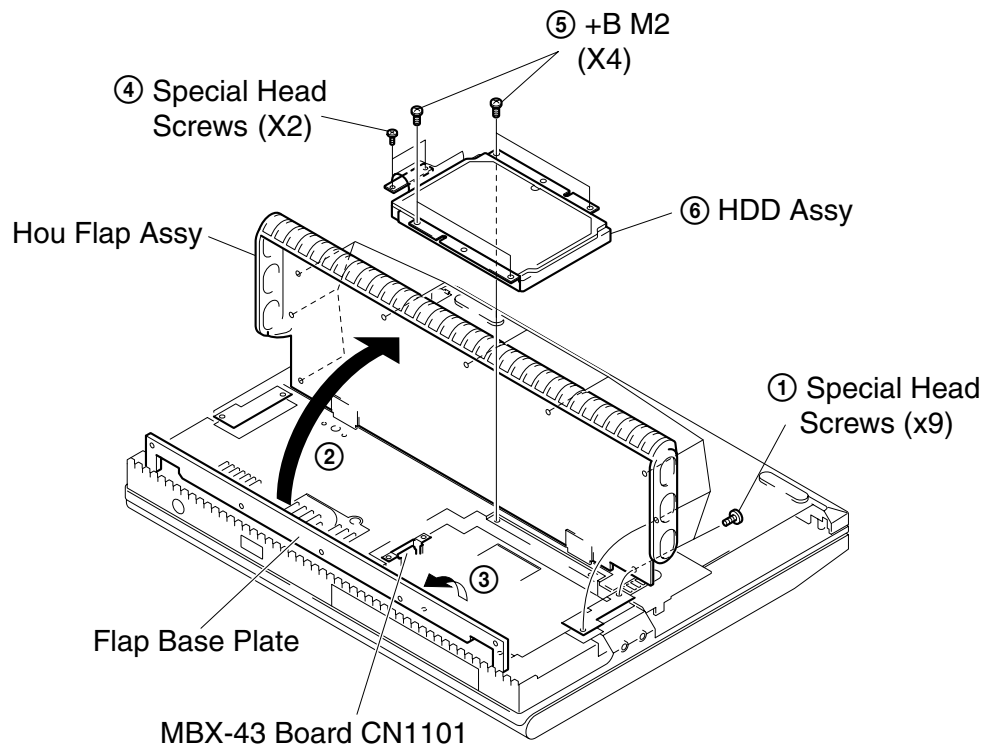


### 4. Hou Flap Assy, Flap Base Plate

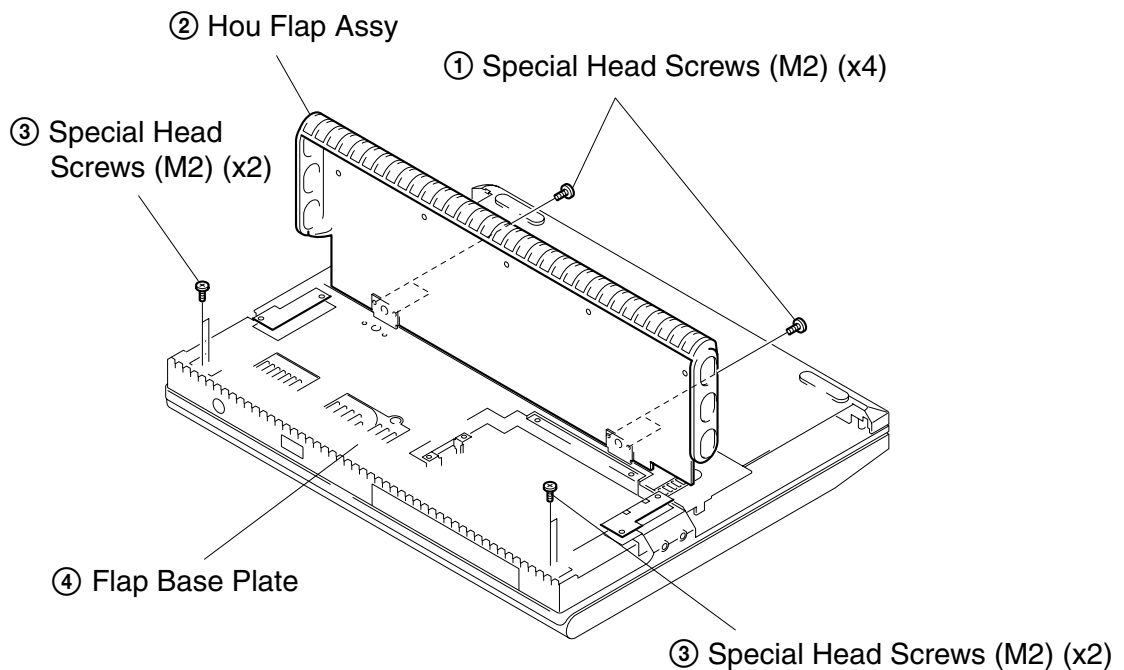

## 5. Hou Palmrest Assy, Display Base, IFX-70 Board

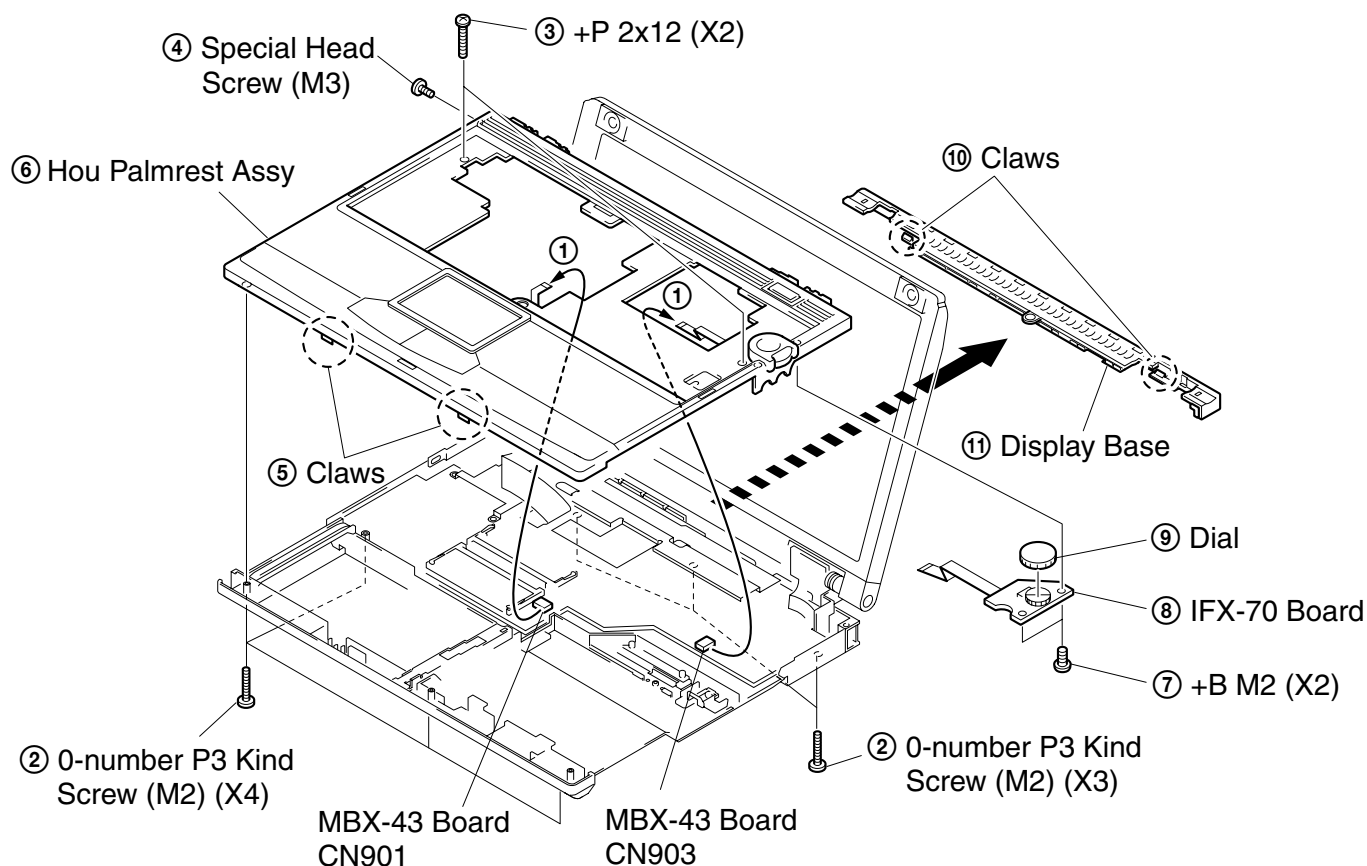


## 6. Display Assy

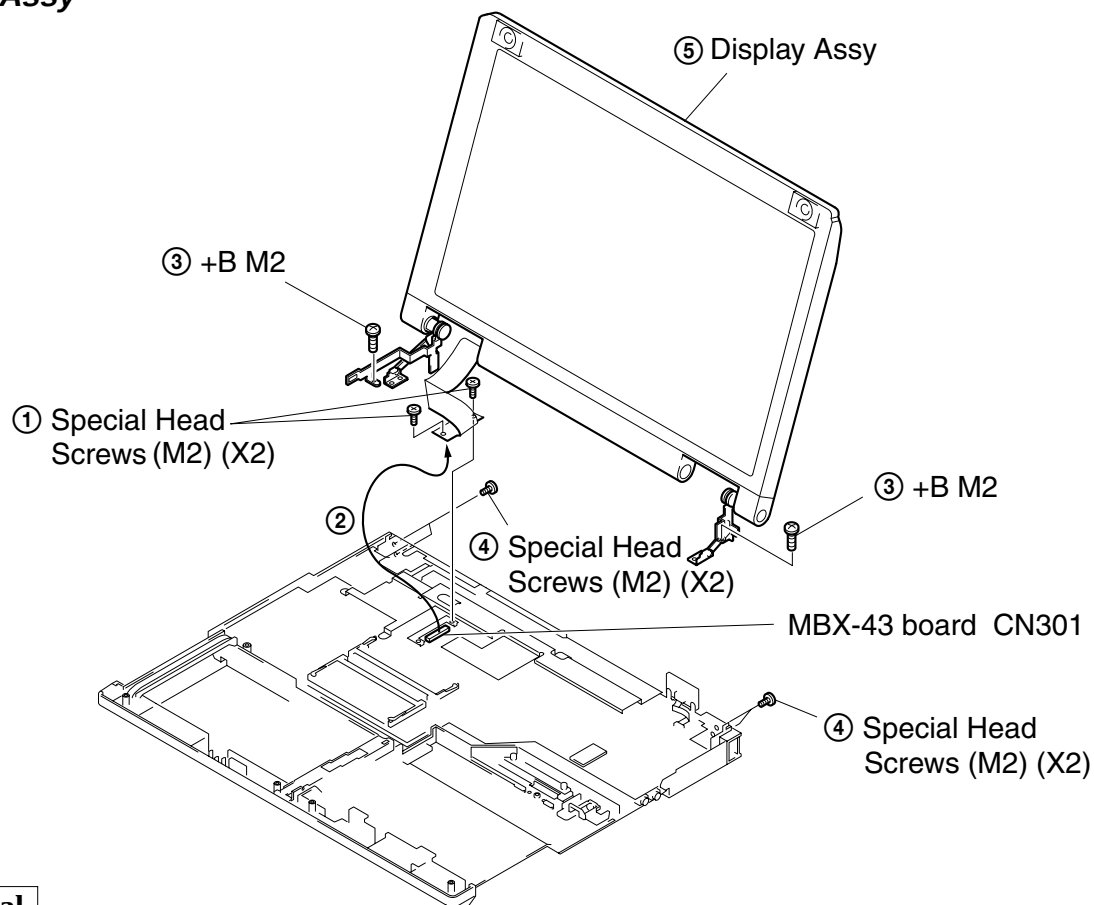


**Confidential**

## 7. MBX-43 Board Assy (1)

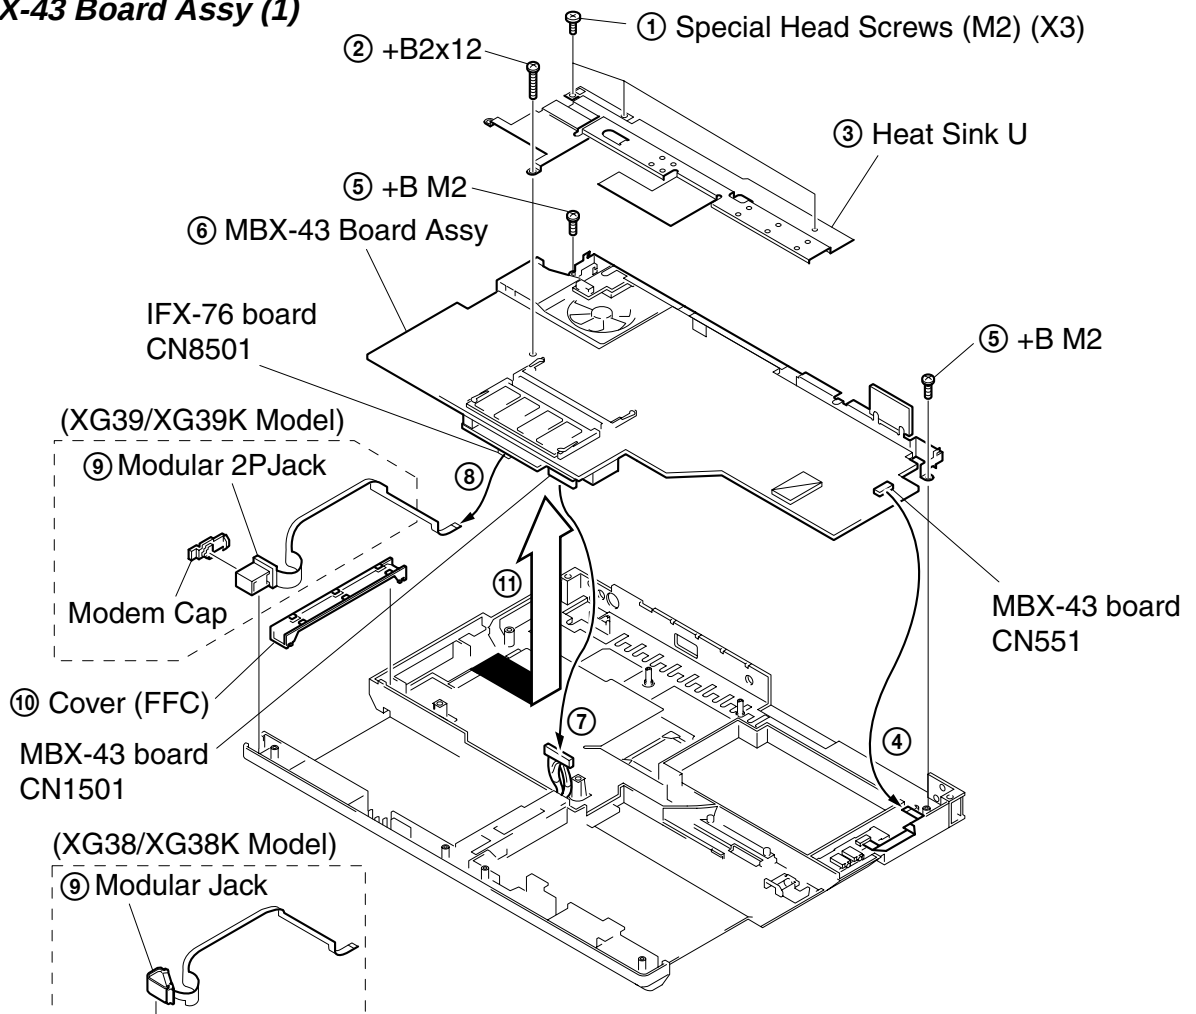


## 8. Speaker Assy, V/L Rechargeable Battery, CNX-75 Board, ANL-17 Board

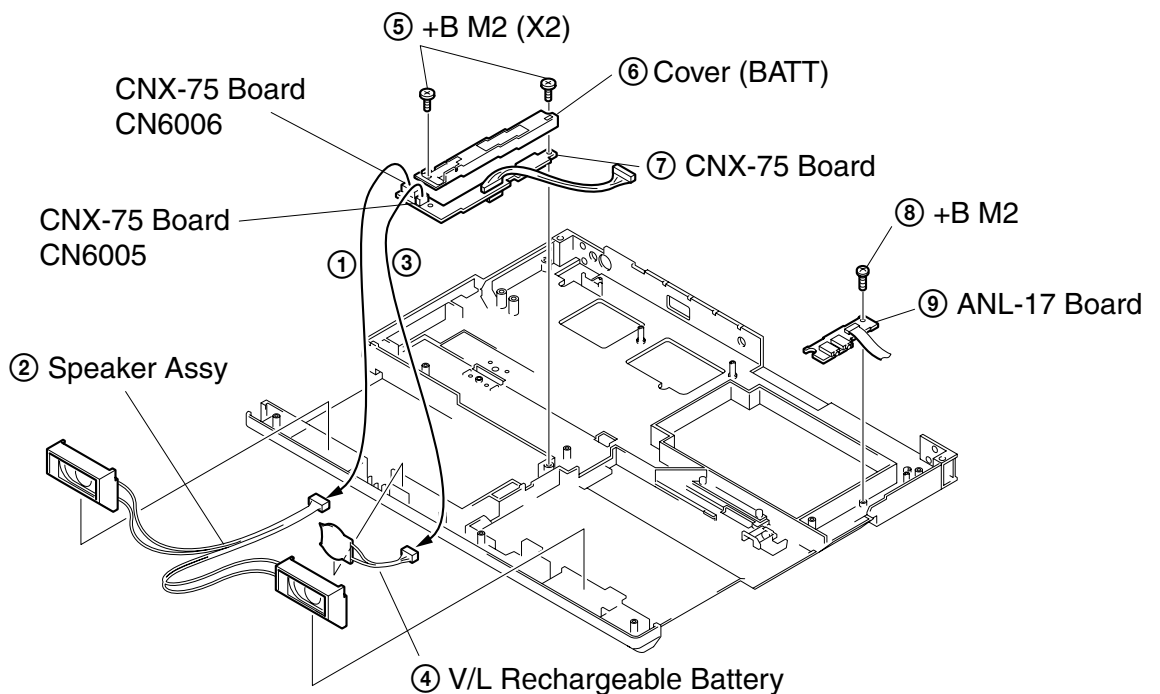


**Confidential**

## 9. MBX-43Board Assy (2)

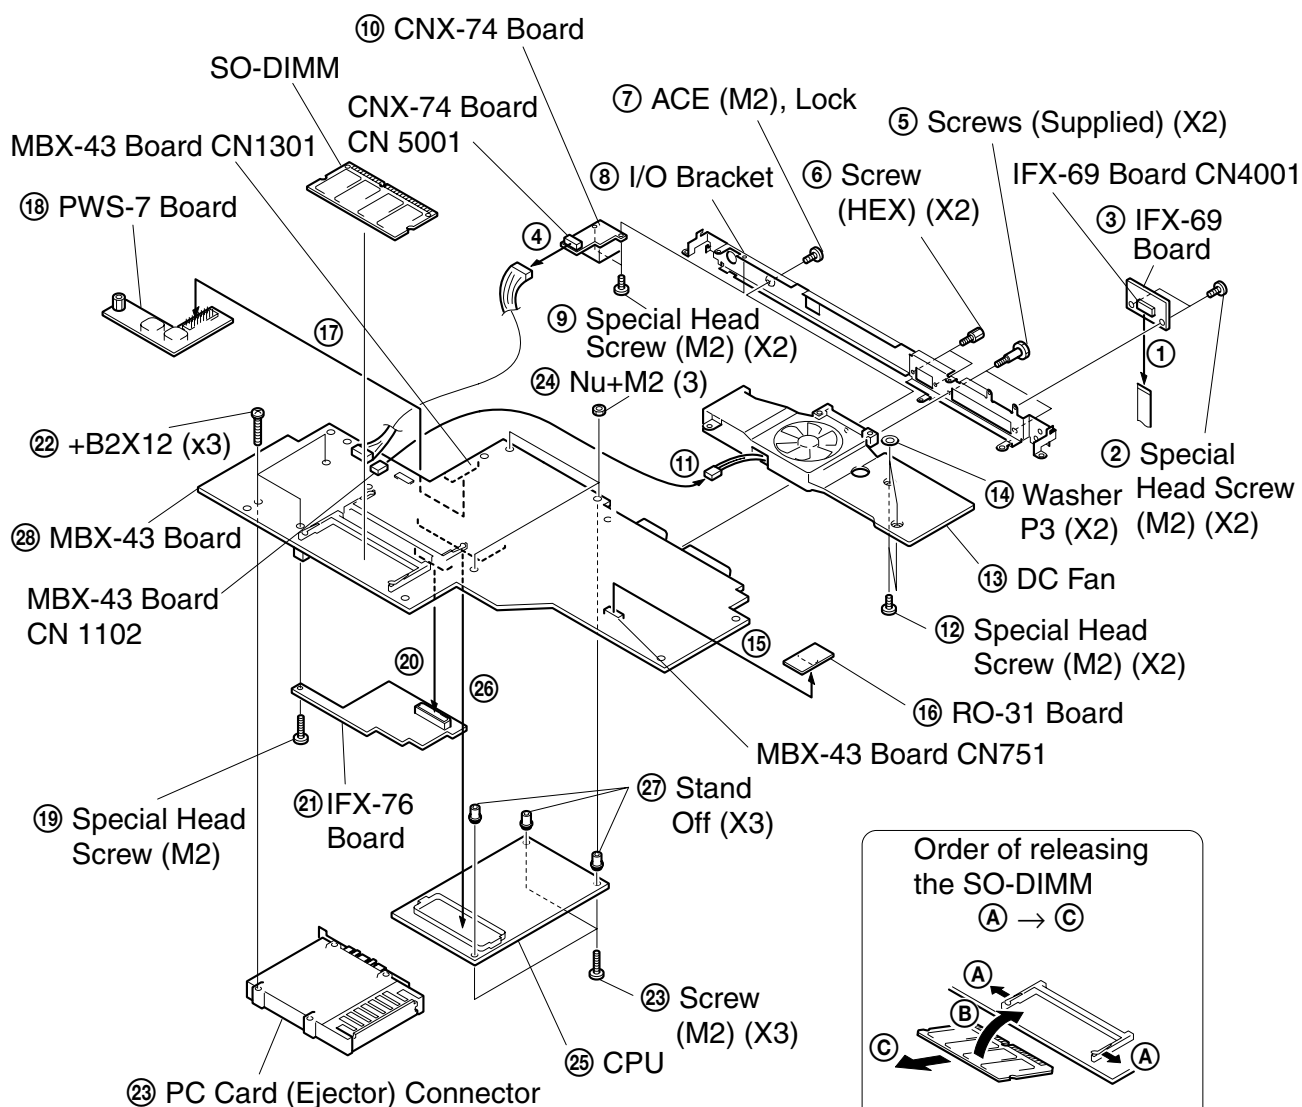


## 10. LCD Section (XG39/XG39K Model) – Made by HI –

### 1. Flash Panel, Bezel Housing Assy

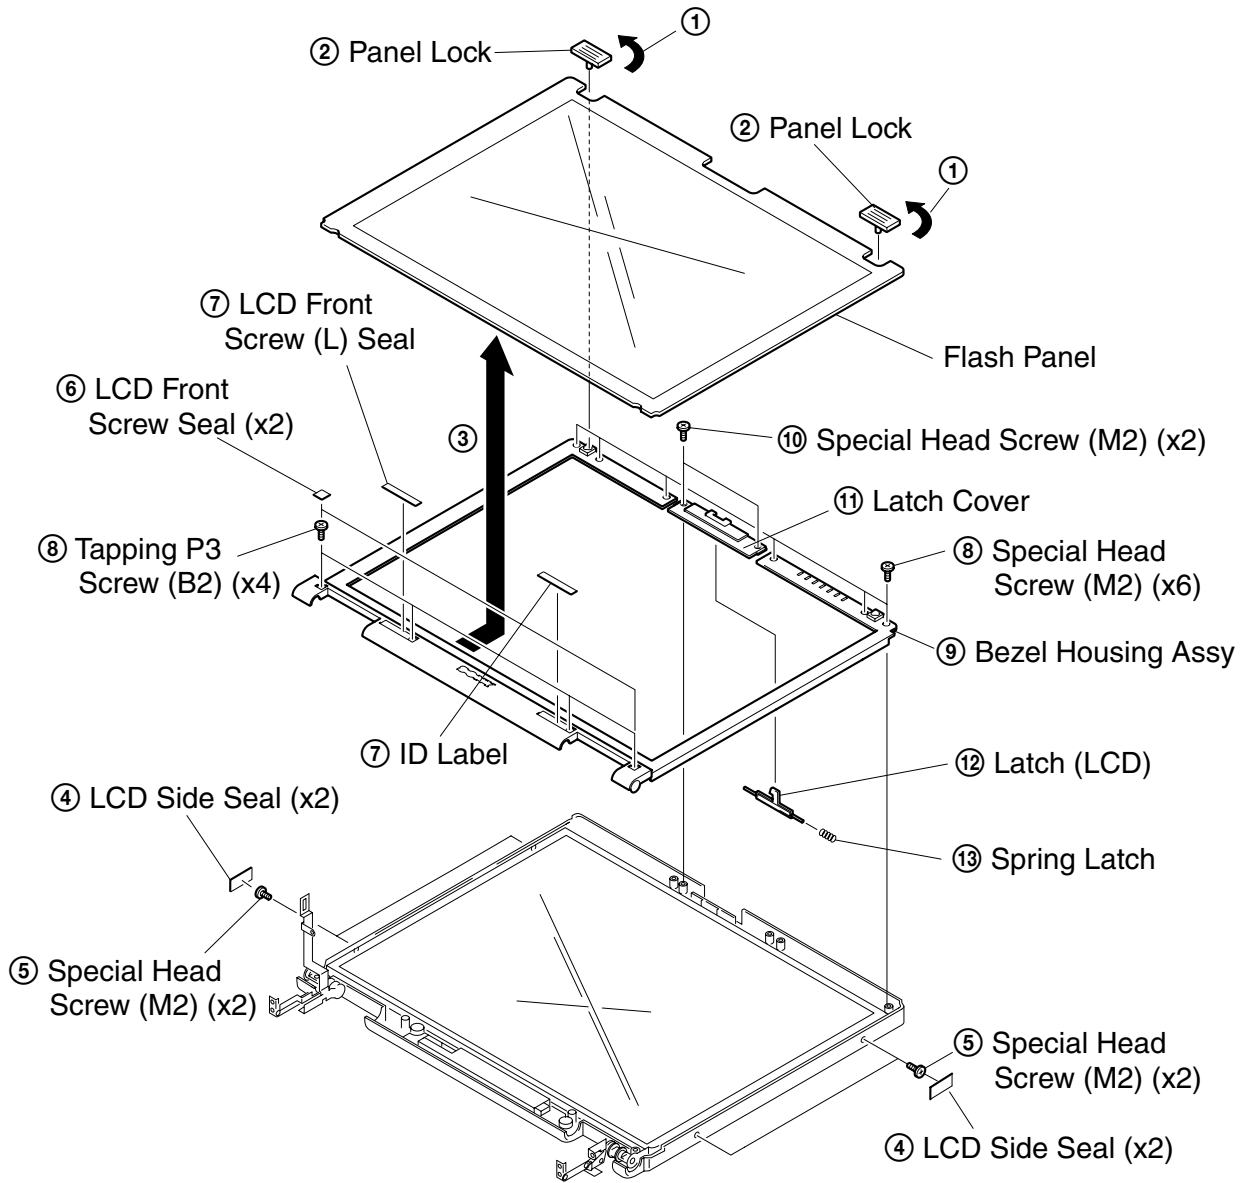


## 2. LCD Unit, Inverter Assy, LCD Flexible Print

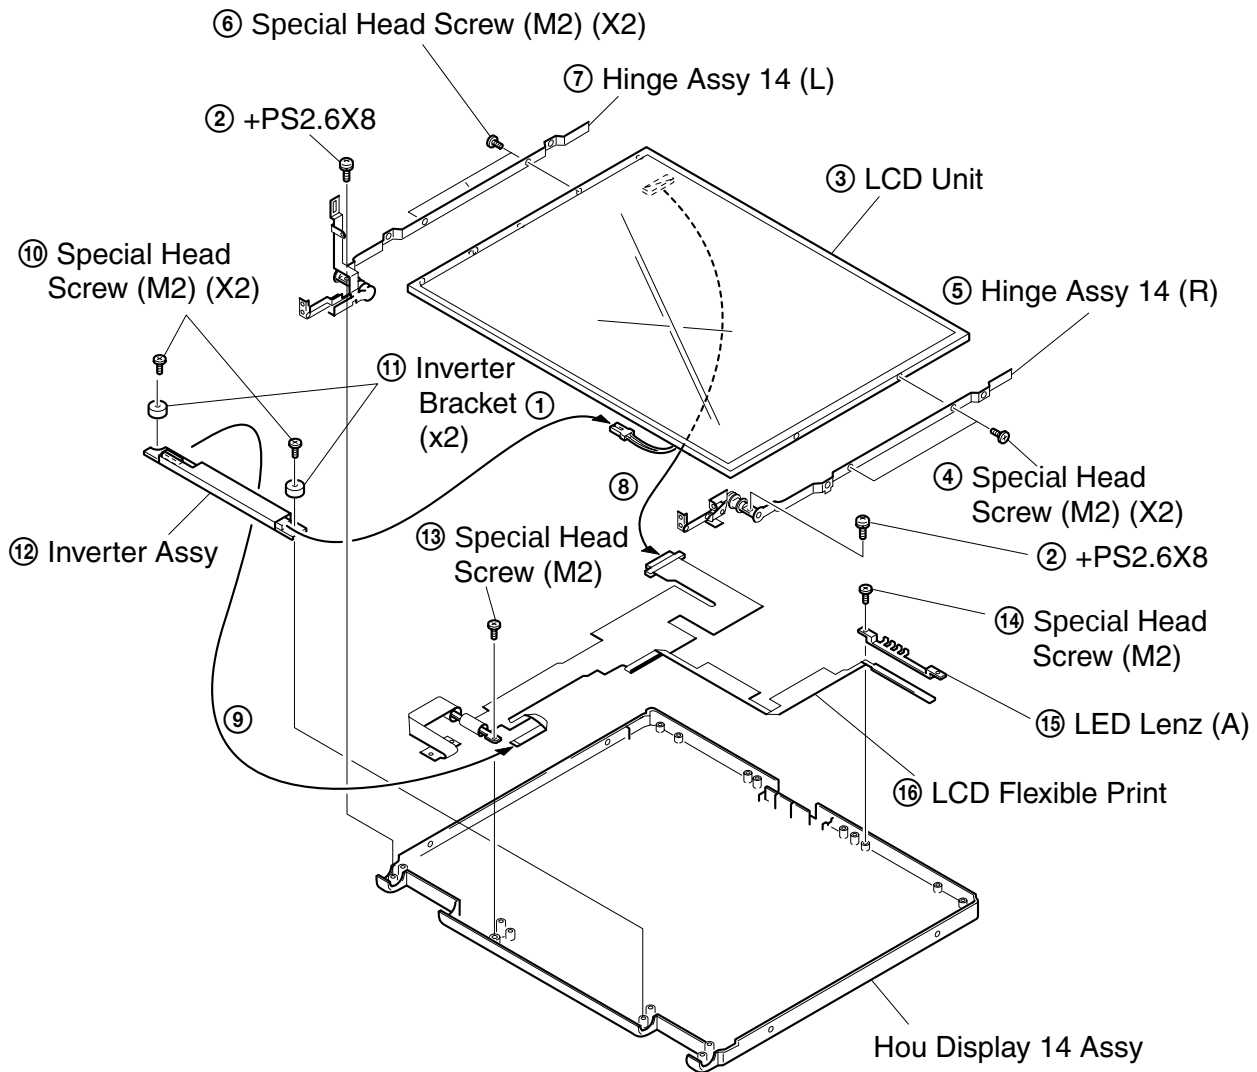


## 11. LCD Section (XG38/XG38K Model) – Made by SA –

### 1. Flash Panel, Bezel Housing Assy

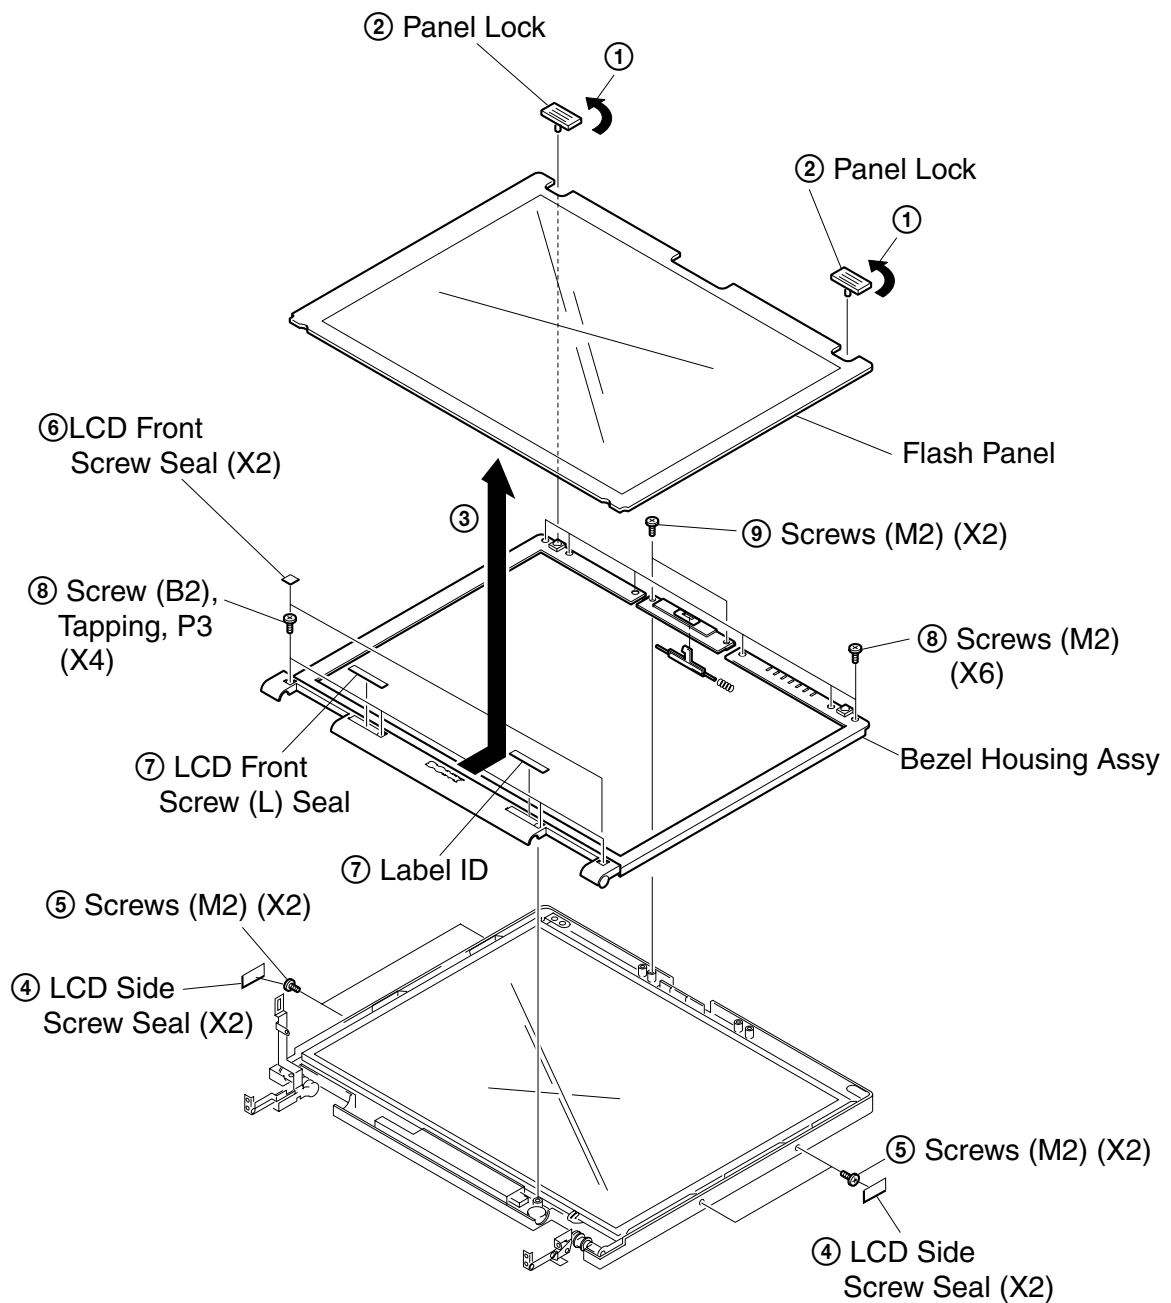

## 2. LCD Unit, Inverter Assy, LCD Cable

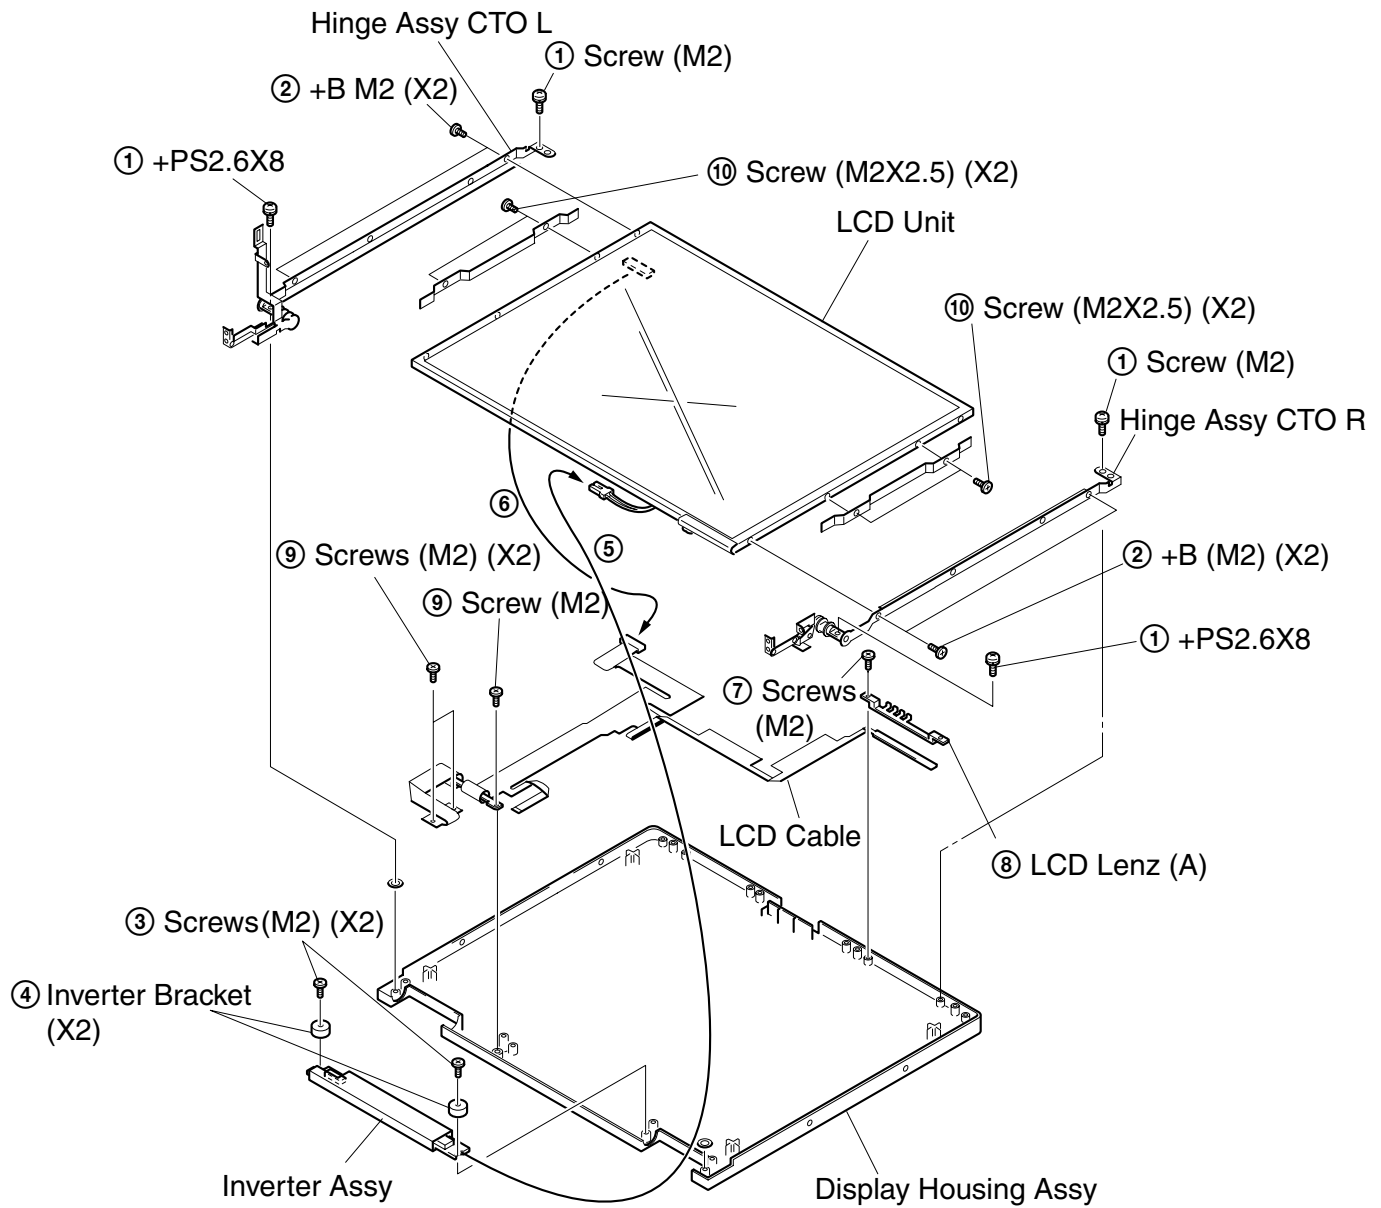

## CHAPTER 2.

### SELF DIAGNOSTICS

#### 2-1. Required Tools and Peripheral Devices


|    | Tools and Peripheral Devices                                           | Test Items                      |
|----|------------------------------------------------------------------------|---------------------------------|
| 1  | Parallel Loopback Tool<br>Specified Loopback Tool (Refer to next page) | Parallel Port (printer) test    |
| 2  | Stereo microphone                                                      | Audio related tests             |
| 3  | Headphone                                                              |                                 |
| 4  | 56K Modem and Line Simulator                                           | Modem test                      |
| 5  | VGA Monitor and Monitor Cable                                          | VGA output test                 |
| 6  | PC Card Tester<br>PCCtest 450 Made by Sycard Corp.                     | PC Card test                    |
| 7  | PCG-X series VAIO for IrDA Function/IEEE1394 Test                      | IrDA/IEEE1394 test              |
| 8  | Mini Docking Station PCGA-PSX1 for Docking Connector Test              | Test of docking PCI connector   |
| 9  | DVD-ROM Bay supplied                                                   | DVD-ROM test                    |
| 10 | External FDD and supplied FDD Cable                                    | FDD test                        |
| 11 | Diagnostics FD Media                                                   | (Diagnostics starting software) |
| 12 | Diagnostics CD-ROM Media                                               | (Diagnostics software)          |
| 13 | Battery supplied                                                       | Battery related tests           |
| 14 | AC Adaptor supplied                                                    | (Power supply for diagnostics)  |
| 15 | HDD                                                                    | HDD related tests               |

**[Reference] On Parallel Loopback Tool**

- The serial loopback tool and the parallel loopback tool are necessary for diagnostics of the serial communication line and the parallel communication line. Create the serial loopback tool and the parallel loopback tool locally, referring to the connection diagrams shown below.


**PARALLEL LOOPBACK CONNECTOR CONNECTION DIAGRAM**

- Connector Types DB25P(Male)
  - Interface Standard Centronics
  - Loopback Status to Commands
- NOTE:** The black round mark "●" indicates soldering.

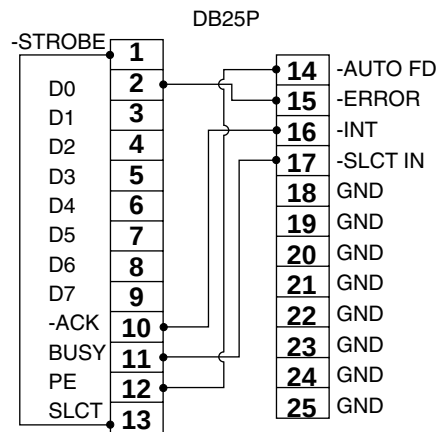

## 2-2. Tools and Peripheral Device Connection

System Connection Diagram

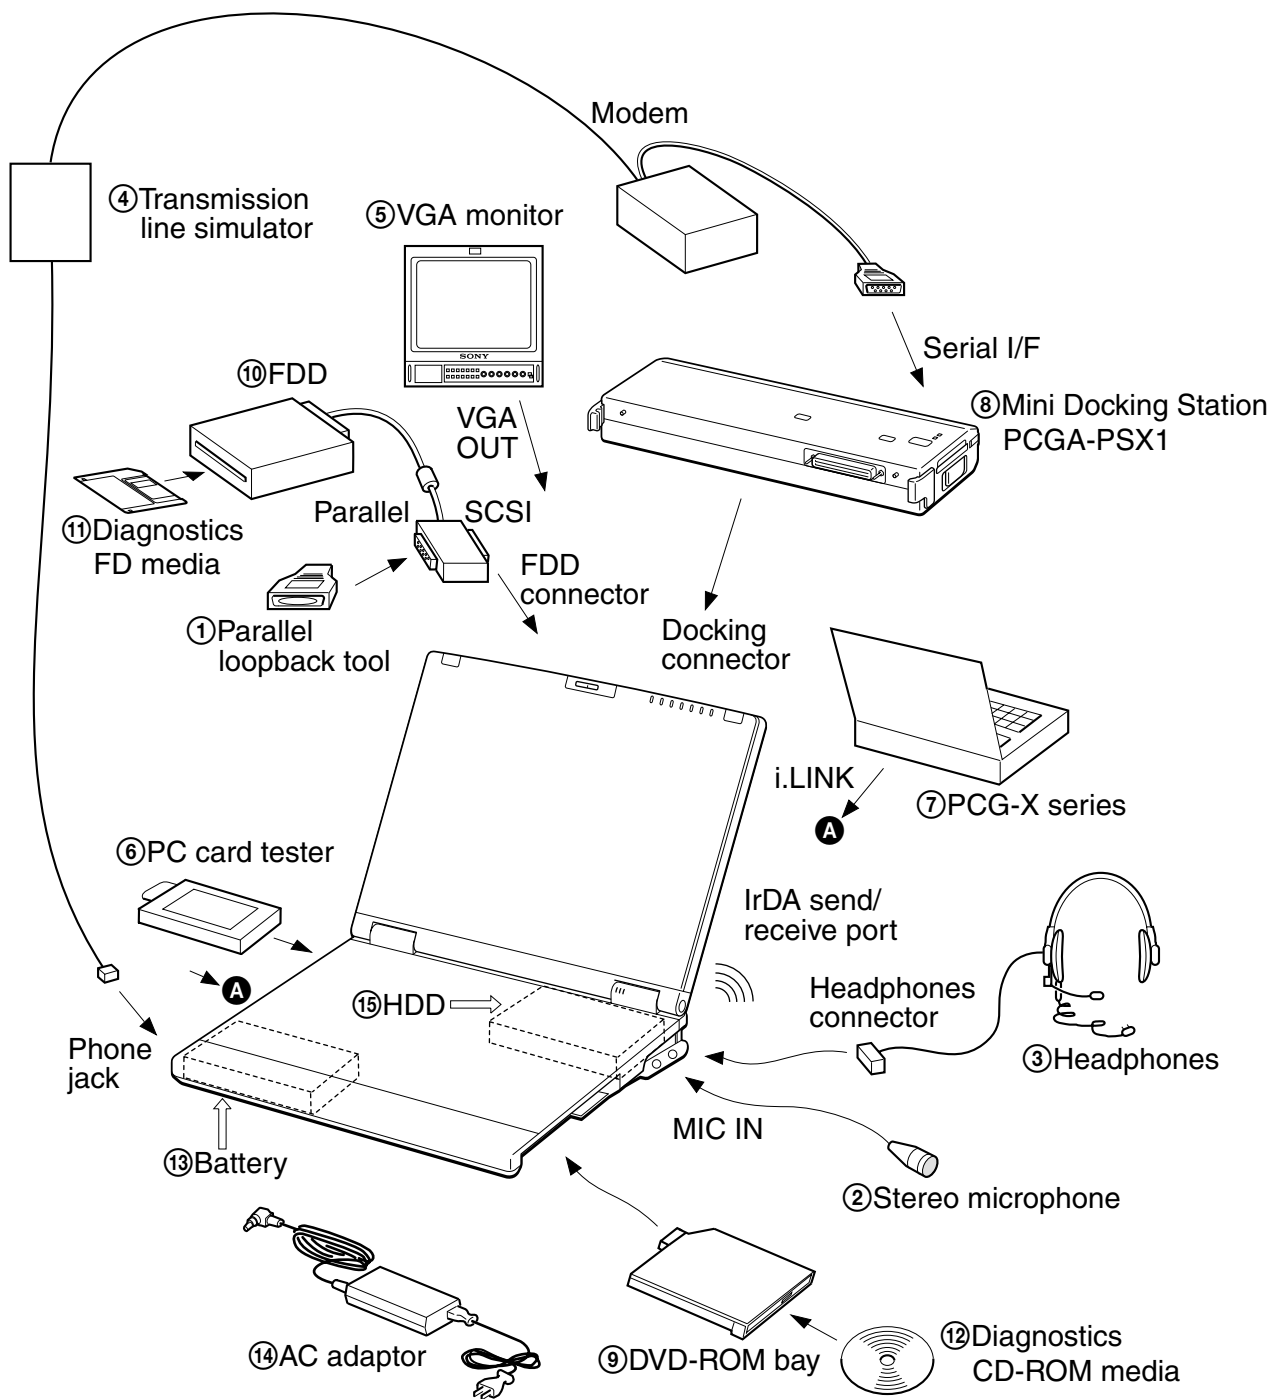

## 2-3. Starting up the Service Diagnostics

1. The service diagnostics floppy disk and CD disc are prepared separately for their respective models . Insert the service diagnostics floppy disk and CD disc of the desired model, then turn on the main power of the personal computer.  
The model information, stored in the CD-ROM, is read automatically, and the test menu is displayed. If the CD does not support the model, an error message is displayed.
2. The driver software is installed from the CD disc, the necessary ROM information is automatically read, and the initial settings are made. The following self-diagnostics menu then appears.

```
***** Main Menu *****  
1:Check ROM Information...      d:Parallel Loopback test...  
2:Battery test...              e:PC Card Slot test...  
3:CD/DVD Drive test...         f:Video test...  
4:FDD test...                  g:PPK test...  
5:HDD test...                  h:GUID (IEEE1394) test...  
6:Keyboard test...             i:IEEE1394 Interface test...  
7:LED test...                  j:IrDA test...  
8:Main memory test...          k:Jog dial test...  
9:Main system test...          l:Short aging test...  
a:FAN test...                  m:Long aging test...  
b:Touch pad test...            n:Aging test including the HDD test...  
c:Serial Loopback test...      o:Exit from Diagnostics MENU
```

3. When the service diagnostics ends with success, the message “Pass” appears. When it ends with failure, detecting an error, the message “Fail” appears. Press the “Esc” key to abort the self diagnostics.

## 2-4. Outline of Service Diagnostics Functions

- Check ROM Information...  
Displays the model information, serial number, BIOS and other information saved in the BIOS ROM.  
Does not test whether or not the personal computer is normal.
- Battery test...  
Tests the battery as to whether the battery is attached or removed, the main power is supplied from an AC power adapter or not, and the battery is charged or discharged. The test procedure appears on display. Perform the battery test following the messages on display.  
Remove and attach the battery → Check (Removal and attachment of battery)  
Disconnect and connect the AC power → Check (Disconnection and connection of AC power)  
Remove and attach the battery → Check (Discharge and charge of battery)
- CD/DVD Drive test...  
Tests the CD, CD-R, CD-RW and DVD drives.
- FDD test...  
Tests the floppy disk drive.

- HDD test...

Tests whether the HDD returns a response when communication is established with the hard disk drive. The HDD can be tested without damaging the HDD data (without formatting the HDD) in this test, since the HDD data is tentatively stored in memory during the test.

If the main power is turned off by mistake while the test is under way, the HDD data can be damaged. The following tests are automatically performed.

1. HDD interface test (Tests whether or not the HDD is recognized)
2. HDD seek test
3. HDD read test
4. HDD write test
5. HDD random read test and random write test (It takes about 2 hours for the 18 GB HDD. This time is a guideline and changes depending on the model.)
6. Returns to the main menu.

- Keyboard test...

Tests the keyboard. When the “Auto select” menu is selected, the keyboard type in use is recognized from the model information that is written in ROM when shipped from the factory, and the test is executed accordingly. When a specific keyboard type is selected such as US, UK, or JP, then the keyboard of the selected type is tested. If the model of your computer is JP and the keyboard type is replaced by either the US type or UK type keyboard, select the keyboard type after it is replaced.

**NOTE:** The “Fn” key can be checked by pressing the “Fn” and “→” keys at the same time. Other keys can be checked by pressing the respective keys.

- LED test...

Tests the LED. This test turns on one LED after another. The person conducting the test must visually check whether each LED is normal or not.

- Main Memory test...

Tests the main memory. The Main Memory test contains the following three test menus. Select the desired menu that suits your need. The test is exited automatically when the respective test items end normally.

- Fast: Tests once. (Taking one and half minutes to two minutes)
- Medium: Test ten times.
- Heavy: Test twenty times.

Press the “Esc” key to abort the test.

- Main System test...

Tests the fundamental functions of the CPU, etc. The test is exited automatically when all test items end normally.

- FAN test...

Tests the fan. Tests whether the fan rotates and stops. Listen to the rotating sound or feel the wind of the fan to judge whether the fan rotates and stops. The test procedure appears on the display. Perform the FAN test following the messages on the display. Press “Y” to resume rotation when the fan comes to stop. Press “Y” when the fan starts rotating, indicating that the test ends in success.

- **Touch pad test...**  
Tests the touch pad. Tests whether the cursor moves, and whether right-clicking and left-clicking function properly.  
The dialog box appears three times. Move the cursor to the box that appears. The tests are performed in the following order.
  - (1) Touch pad
  - (2) Left-click button
  - (3) Right-click button (Two times)
- **Serial loopback test...**  
Performs the loopback test of the serial port. Connect the port replicator and the loopback tool to the serial port.
- **Parallel loopback test...**  
Performs the loopback test of the parallel port. Connect the port replicator and loopback tool to the parallel port.
- **PC card Slot test...**  
Tests the PC card slot. Implements the 16-bit/card-bus test for the two slots of the main unit.
- **Video test...**  
**NOTE:** Because this test is performed by visual inspection, confirm first the normal video picture, then start the test.  
  
Tests the video signal. Several video patterns appear every time the key is pressed. The person conducting the test must visually check whether the patterns appear properly. Press Y when there is no abnormality.
- **PPK test...**  
The computer cannot perform this test.
- **GUID test...**  
This test is not required normally. Displays the GUID (i.Link ID value), and judges whether the value on the display is appropriate.
- **IEEE 1394 Interface test...**  
Performs the 1394 communication test. Another personal computer to communicate with is necessary for this test. The models released from the year 2000 have already been confirmed that they do not cause any problems regarding the IEEE1394 interface. Even models released before 2000 will cause no problem if the same type of IEEE1394 interface IC chip (the IC chip used in the iLink block connected to the PCI bus) is used in both personal computers that are connected. In other combinations, the IEEE1394 interface test is not confirmed. (Use of the models released from the year 2000 is recommended.)
  1. Connect the iLink cable.
  2. Start up the personal computer at the other end of the IEEE1394 interface test connection using the tool floppy disk.  
This must be created beforehand by copying programs from the service diagnostics CD disc. (Prepare a floppy disk that is formatted to contain the DOS system. Create a tool floppy disk by copying the entire TOOL folder of the CD disc to a floppy disk.)
  3. Select the 1394 test from the menu at the connected computer to enter the reception state.
  4. After the connected personal computer has entered the reception state, select the 1394 test at the personal computer to be tested. The IEEE1394 interface test then starts. Send and receive of the random data is repeated five times (i.e., this test is repeated five times.)

- IrDA test...

Performs the IrDA communication test. Another personal computer to communicate with is necessary for this test. The models released from the year 2000 have already been confirmed that they do not cause any problems regarding the IrDA communication. Even models released before 2000 will cause no problem if the same type of IrDA communication IC chip (the IC chip used in the SIE block connected to the Extend I/O bus) is used in both personal computers that are connected. In other combinations, the IrDA communication test is not confirmed. (Use of the models released from the year 2000 is recommended.)

1. Place the two computers so that their IrDA transmitter and receiver ports face each other.
2. Start up the personal computer at the other end of the IrDA communication test connection using the tool floppy disk that must be created beforehand by copying programs from the service diagnostics CD disc. (Prepare a floppy disk that is formatted to contain the DOS system. Create a tool floppy disk by copying the entire TOOL folder of the CD disc to a floppy disk.)
3. Select the IrDA communication test from the menu at the connected computer to enter the reception state.
4. After the connected personal computer has entered the reception state, select the IrDA communication test at the personal computer to be tested. The IrDA communication test then starts.

- Jog dial test...

Tests the revolution and clicking of the jog dial. Angle brackets < > appear when the jog dial test is selected. Rotate the jog dial clockwise (upwards) until it moves to the mark (^\_^), then press the jog dial. The mark (^\_^) will appear on the top of the screen. Next, rotate the jog dial counter-clockwise (downwards) until it moves to the mark (^\_^), then press the jog dial.

- Short aging test.../Long aging test...

Performs the aging test. The short aging test ends when all test items have been performed once. The long aging test checks the machine for about 10 hours by repeating the test items.

- Aging test including the HDD...

**NOTE:**Note that this test destroys the entire contents of the user's hard disk drive.

Perform this test only when destructive testing of HDD is desired.

The aging test is performed first, then read and write tests of the hard disk are implemented following the aging test.

There are two tests; SHORT and LONG. However, the contents of the SHORT aging test are the same as those of the LONG aging test. The test starts immediately when the menu item is selected.

- Exit from Diagnostics MENU...

Quits the service diagnostics program and the DOS prompt appears. If you exit the service diagnostics program by mistake, start the program again.

## 2-5. *Inspecting Windows*

The Windows inspection contains the following two types of inspection.

Audio  
Modem

Before starting inspections, create a floppy disk from the service diag CD to be serviced.

The files to be used for inspection are stored in the following sub directory inside the CD. Copy all the files in the folder to the floppy disk.

Audio        \windiag\wave  
Modem        \windiag\modem

- **Audio**

A microphone and headphones are required for this inspection.

Double-click the “t\_auw01” icon (MS-DOS icon) in the floppy disk that is created in advance. The display of the DOS prompt opens and the inspection starts. Once inspection starts, follow the instructions on the display to inspect the audio.


- **Modem**

A modem and a line simulator are required for this inspection.

Double-click the “modem” icon (MS-DOS icon) in the floppy disk that is created in advance.


The display of the DOS prompt opens and the inspection starts.

# CHAPTER 3. BLOCK DIAGRAM

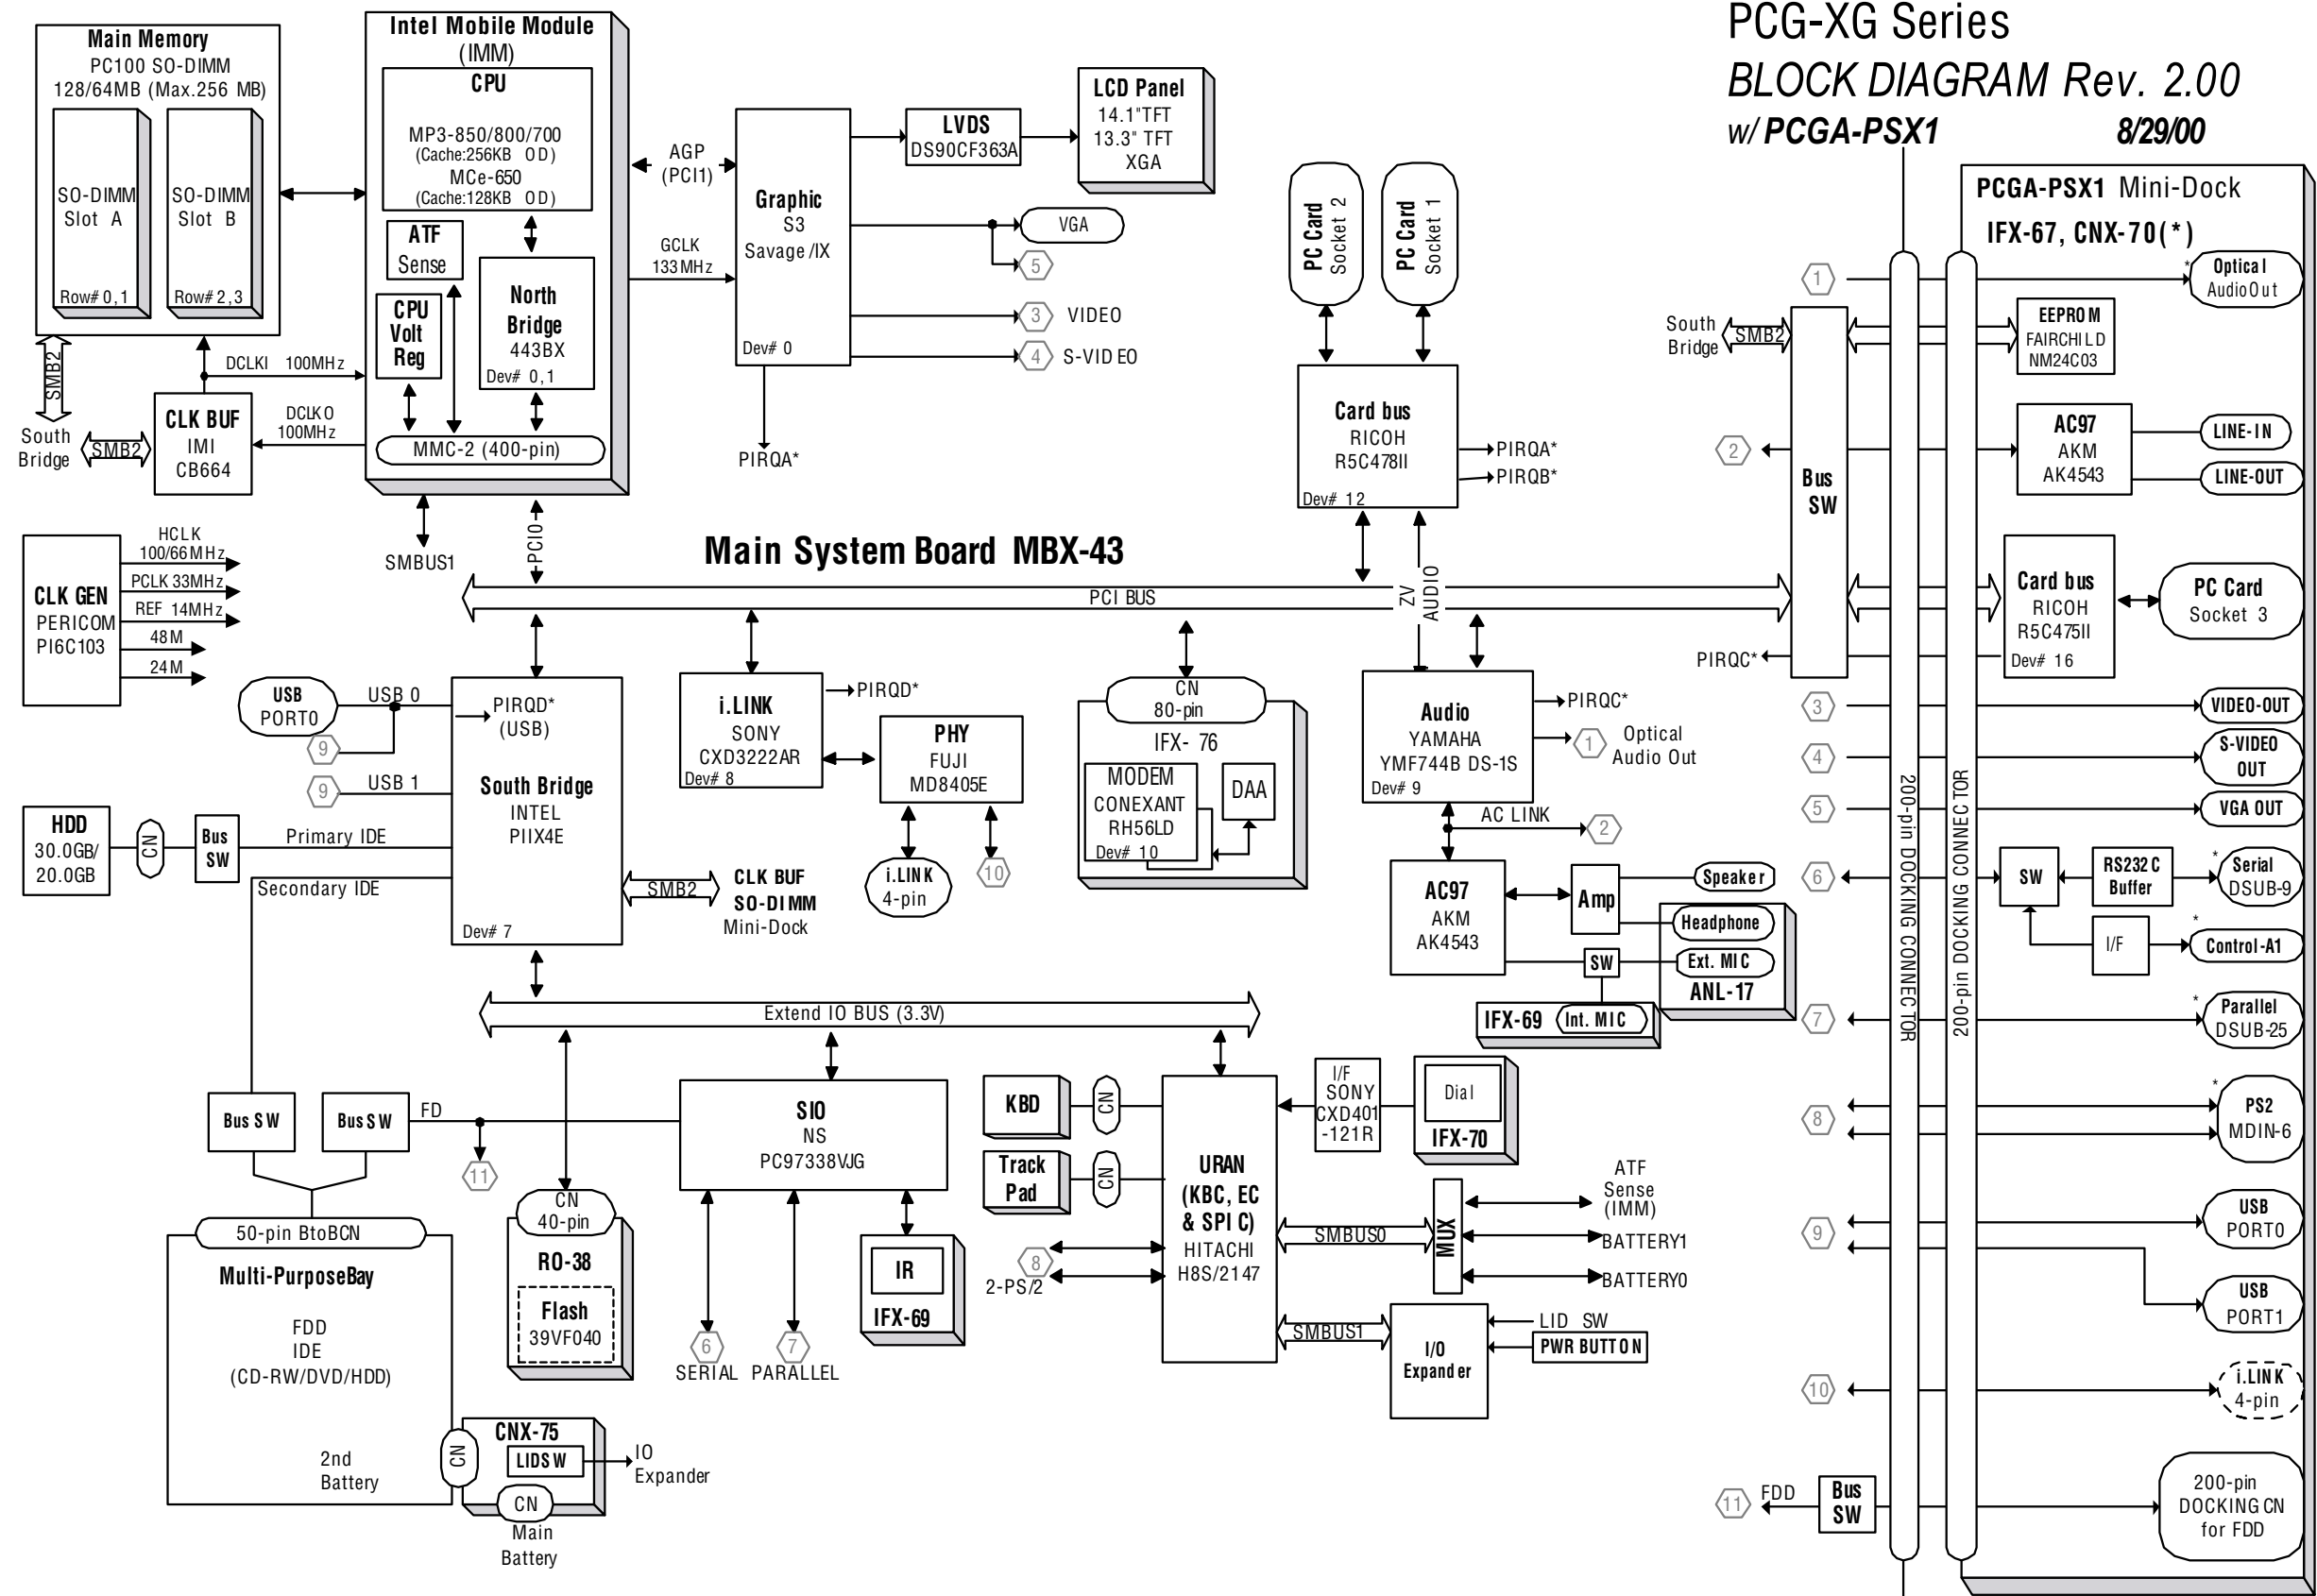

# CHAPTER 4.

## FRAME HARNESS DIAGRAM

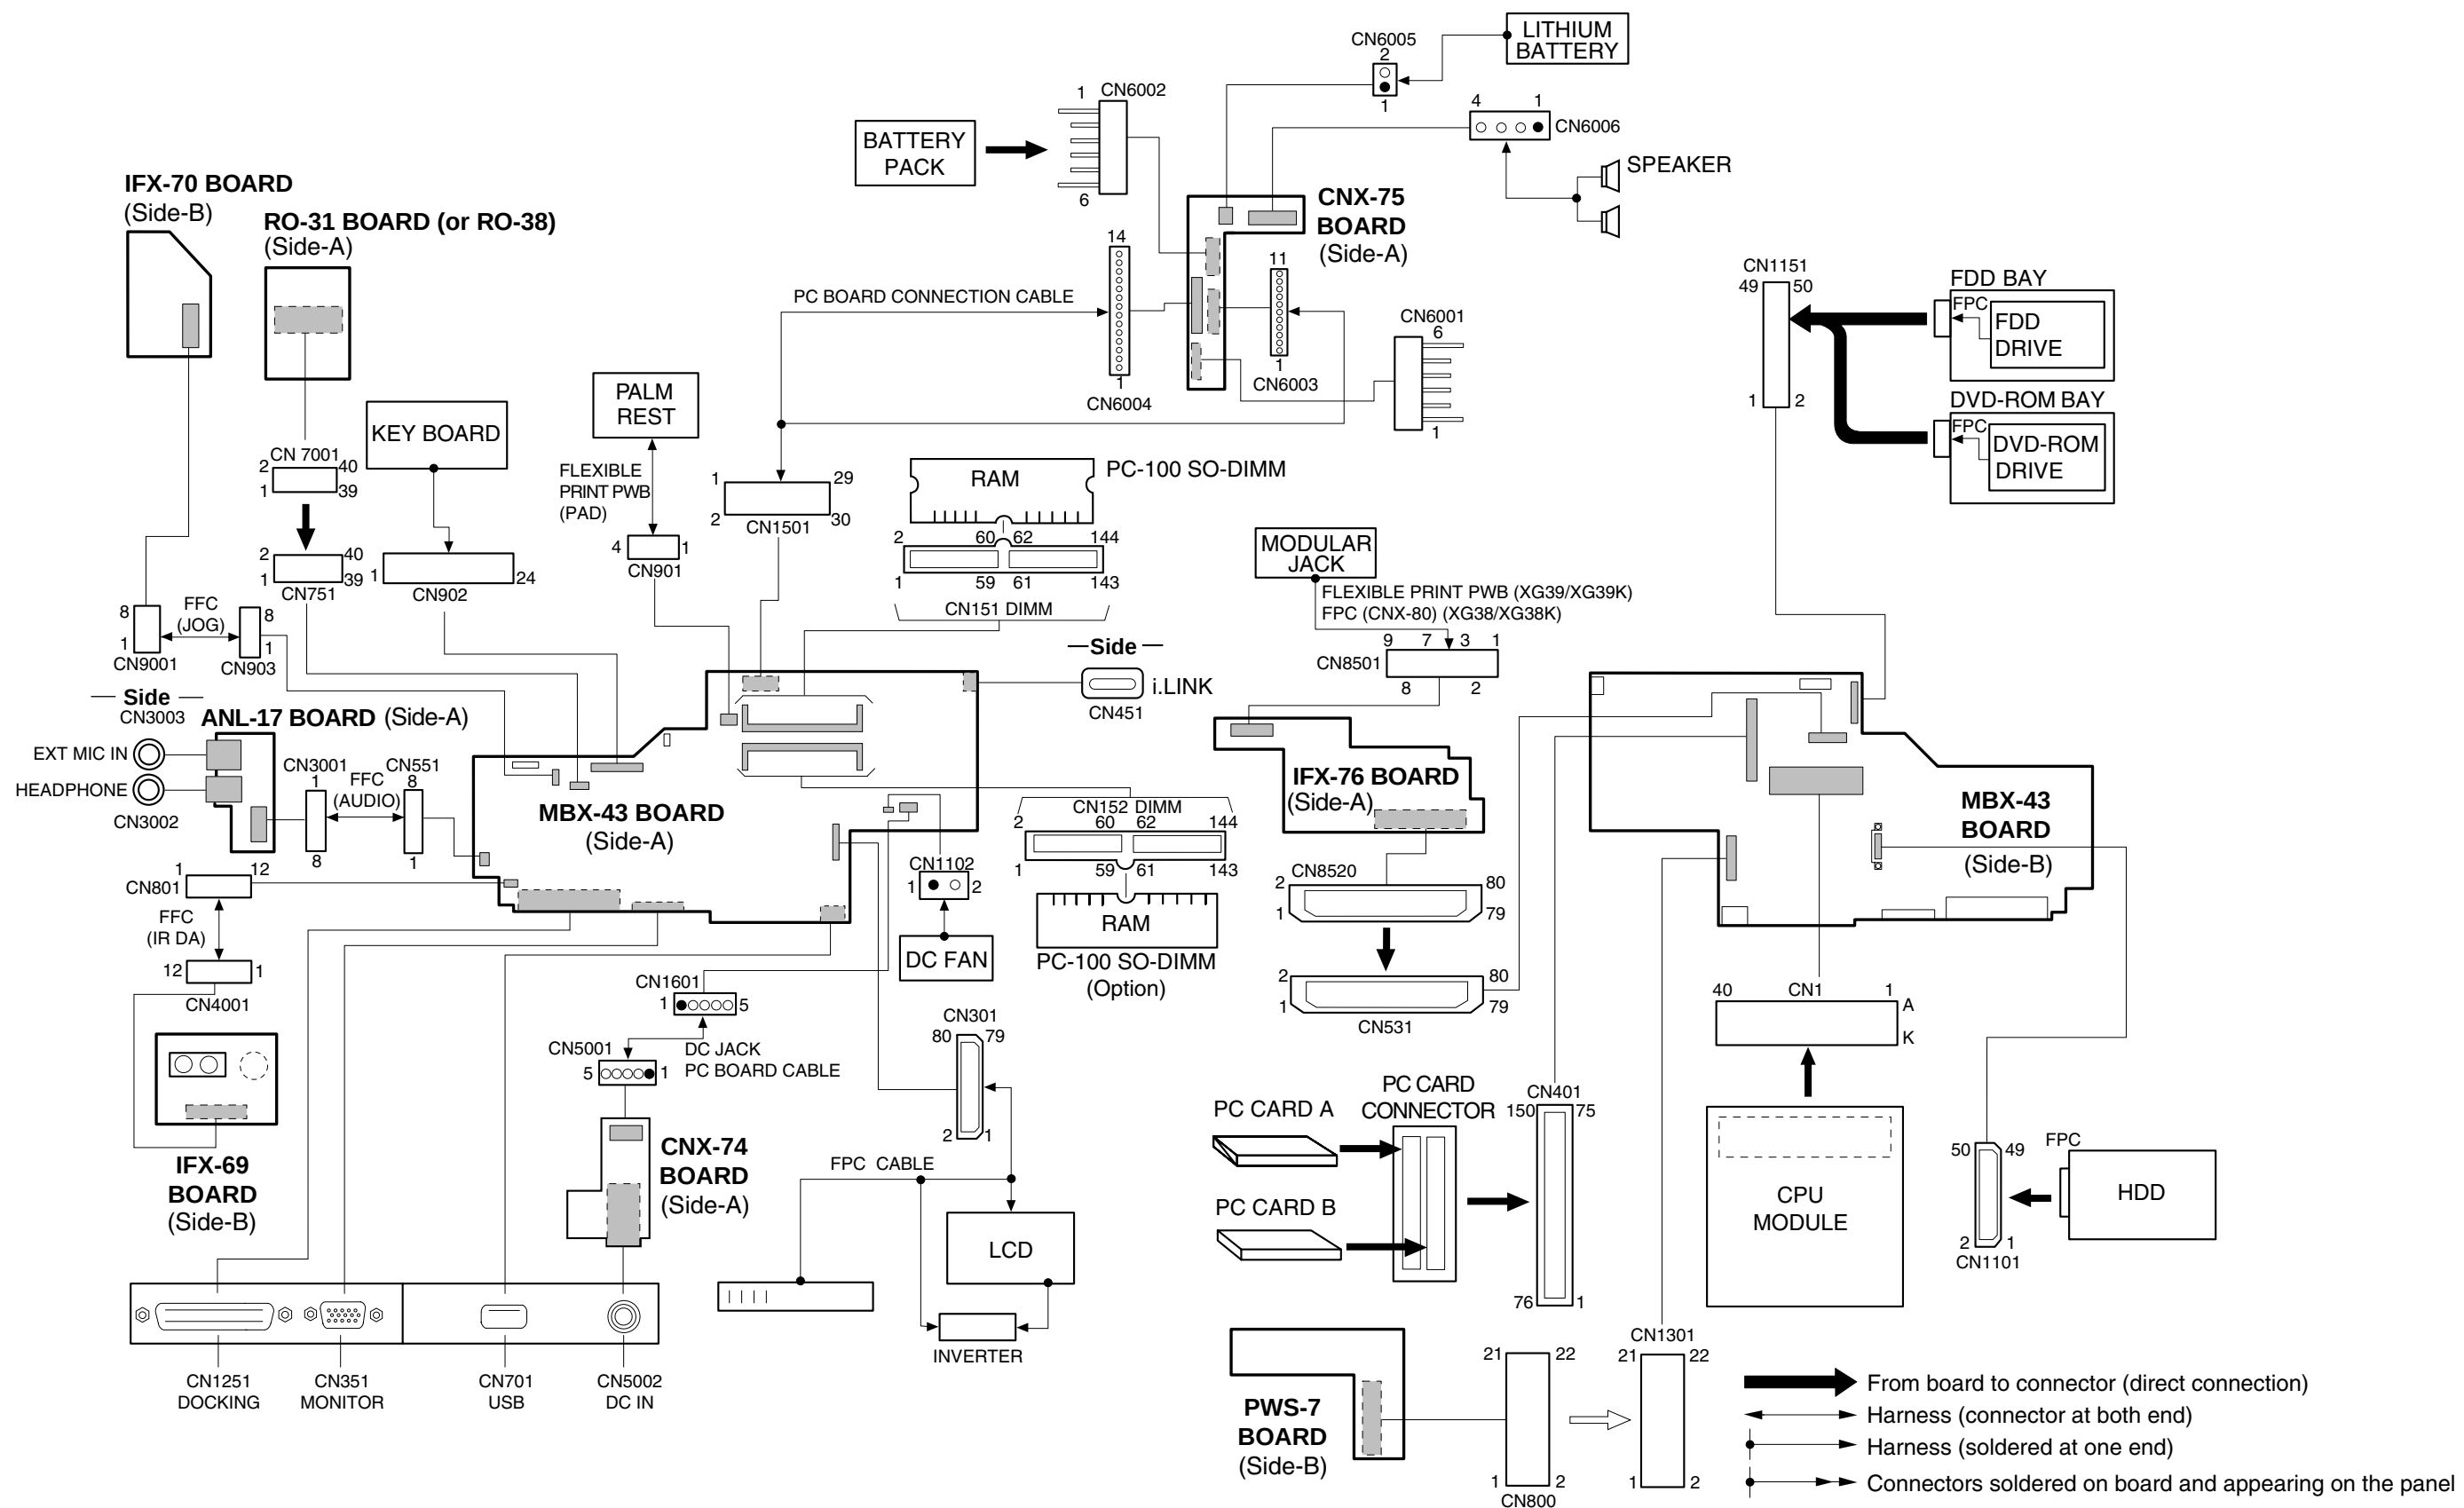

***EXPLODED VIEWS AND PARTS LIST***

---

**NOTE:**

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked “ \* ” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- When two or more parts are shown in parallel, use the part described first as the main part.


|                                                                                                                                                      |
|------------------------------------------------------------------------------------------------------------------------------------------------------|
| The components identified by mark $\Delta$ or dotted line with mark $\Delta$ are critical for safety. Replace only with part number specified.       |
| Les composants identifiés par une marque $\Delta$ sont critiques pour la sécurité.<br>Ne les remplacer que par une pièce portant le numéro spécifié. |

## 5-1. Main Section (XG39/XG39K Model)


| Ref.No. | Part No.     | Description                                                           | Ref.No. | Part No.     | Description                |
|---------|--------------|-----------------------------------------------------------------------|---------|--------------|----------------------------|
| 1       | A-8048-295-A | MBX43 (P3 850) 1650 ASSY (S)<br>(MBX-43 BOARD/CPU MODULE (PIII850SS)) | 66      | 4-641-655-11 | SCREW (M2), + SPECIAL HEAD |
| * 3     | 4-642-786-01 | HEAT SINK U                                                           | * 67    | 4-635-966-01 | SCREW (HEX)                |
| 4       | 8-759-665-37 | IC KMM464S1724BT1-FL (128MB)                                          | * 68    | 4-642-776-01 | BRACKET I/O                |
| 5       | A-8066-166-A | COMPLETE PWB PWS-7                                                    | 69      | 1-791-146-11 | FFC (AUDIO)                |
| 7       | 3-740-546-21 | SCREW (M2)                                                            | 70      | A-8056-329-A | COMPLETE PWB ANL-17        |
| 8       | A-8056-719-A | RO-38 (X) COMPLETE                                                    | 72      | 1-565-999-11 | JACK, MODULAR 2P           |
| 9       | A-8066-164-A | COMPLETE PWB IFX-76 (U)                                               | 74      | 1-772-936-11 | HDD (30.0GB)-DSJA230       |
| 10      | 1-793-360-11 | CONNECTOR, PC CARD (EJECTOR)                                          | * 75    | 4-642-777-01 | HD BRACKET (A)             |
| 11      | A-8056-331-A | COMPLETE PWB IFX-69                                                   | 76      | 4-642-781-02 | BUTTON BAY LATCH           |
| 12      | 4-637-921-02 | STAND OFF                                                             | 77      | 1-791-144-11 | PWB, (HDD) FLEXIBLE        |
| * 13    | 4-643-383-01 | INSULATOR HEAT (B)                                                    | * 78    | 4-643-215-01 | CUSHION SPEAKER            |
| * 14    | 4-642-787-02 | HEAT SINK B                                                           | 79      | 1-529-455-11 | SPEAKER (40X20MM)          |
| 15      | 4-642-852-31 | +B M2                                                                 | 80      | A-8056-325-A | COMPLETE PWB CNX-75        |
| 16      | 4-642-794-03 | COVER (PAD)                                                           | 81      | 4-642-783-01 | COVER (BATT)               |
| 17      | 1-772-529-11 | PAD, TOUCH                                                            | 82      | 4-645-919-01 | LATCH DETECTOR 14          |
| 18      | 4-643-379-01 | INSULATOR PALM (L)                                                    | 83      | 1-756-000-11 | BATTERY, V/L RECHARGEABLE  |
| 19      | 1-791-147-11 | PWB, (PAD) FLEXIBLE PRINT                                             | 84      | 1-677-886-12 | PWB, FLEXIBLE PRINT        |
| * 20    | 4-642-799-01 | PLATE (SW)                                                            | 85      | 4-642-876-01 | COVER (FFC)                |
| * 21    | 4-642-842-01 | SPRING (PAD), PLATE                                                   | 86      | 4-642-778-04 | DOOR BATTERY               |
| 22      | 4-642-954-01 | CUSHION (PALM)                                                        | 87      | 4-642-779-01 | SPRING HD DOOR             |
| 23      | 1-418-545-22 | KEYBOARD UNIT                                                         | 88      | 4-642-816-01 | FD LENZ                    |
| 24      | 4-642-795-01 | COVER HINGE (L)                                                       | 89      | X-4622-631-2 | ASSY HOU BOTTOM 14         |
| 25      | 4-642-796-01 | COVER HINGE (R)                                                       | 90      | 4-641-726-21 | SCREW (M2), SPECIAL HEAD   |
| 26      | 4-642-798-01 | LENS IRDA                                                             | 91      | 4-635-301-01 | SCREW M3X4                 |
| 27      | 4-642-789-01 | DISPLAY BASE                                                          | 92      | 4-642-780-01 | LATCH BAY                  |
| 28      | X-4622-632-3 | ASSY HOU PALMREST 14                                                  | 93      | 4-642-782-01 | BAY LATCH SPRING           |
| 29      | 4-643-380-01 | INSULATOR PALM (R)                                                    | 94      | A-8056-323-A | COMPLETE PWB CNX-74        |
| 30      | 4-642-855-01 | DIAL                                                                  | 95      | 1-763-466-11 | FAN, DC                    |
| 31      | A-8056-327-A | COMPLETE PWB IFX-70                                                   | 97      | 4-643-214-01 | INSULATOR PC CARD          |
| 32      | 1-791-150-11 | FFC (JOG)                                                             | 98      | 4-643-382-02 | INSULATOR HDD              |
| 33      | 4-643-381-01 | INSULATOR PALM (M)                                                    | 99      | 4-641-726-01 | SCREW (M2), SPECIAL HEAD   |
| 34      | 4-642-819-01 | HINGE FLAP                                                            | 101     | 1-791-178-11 | CABLE, DC JACK PC BOARD    |
| 35      | X-4622-787-2 | ASSY FLAP LOCK L                                                      | 102     | 1-791-177-11 | CABLE, PC BOARD CONNECTION |
| 36      | 4-642-837-04 | LOCK PLATE L                                                          | 103     | 4-642-840-01 | LEVER R                    |
| * 37    | 4-642-841-01 | PLATE FLAP BASE                                                       | * 105   | 4-642-955-01 | INSULATOR BAY FPC          |
| 38      | X-4622-788-2 | ASSY FLAP LOCK R                                                      | 106     | 4-643-916-01 | CUSHION PSW A              |
| 39      | 4-642-838-01 | LOCK PLATE R                                                          | 107     | 4-643-917-01 | CUSHION PSW B              |
| 40      | 4-642-839-02 | LEVER L                                                               | 108     | 4-643-825-01 | THERMAL SHEET NC           |
| 41      | 4-641-726-51 | SCREW (M2), SPECIAL HEAD                                              | 109     | 4-644-350-01 | SHEET, THERMAL             |
| 42      | X-4622-675-1 | ASSY HOU FLAP 2                                                       | 110     | 4-643-826-01 | THERMAL SHEET NM           |
| 43      | A-8045-662-A | ASSY BAY (FD)                                                         | 111     | 4-643-915-01 | SPACER SW POWER            |
| 44      | 4-642-811-01 | FD BRKT UPPER                                                         | 112     | X-4622-371-1 | ASSY SHIELD FLAP L         |
| * 45    | 4-642-956-01 | INSULATOR FDD                                                         | 113     | X-4622-372-1 | ASSY SHIELD FLAP R         |
| * 46    | 4-642-815-01 | FD UNDER PLATE                                                        | 114     | 4-643-574-01 | INSULATOR FAN              |
| * 47    | 4-642-814-01 | FD GND PLATE                                                          | * 115   | 4-642-868-01 | PLATE BAY B                |
| * 48    | 4-642-813-01 | FD PLATE                                                              | * 116   | 4-642-867-01 | PLATE BAY A                |
| 49      | 4-641-656-12 | SCREW (M2.5), Ø PLATE P                                               | 117     | 4-643-918-01 | CUSHION ROM                |
| 50      | 1-791-143-11 | PWB, (FDD) FLEXIBLE                                                   | 118     | 4-644-052-01 | CUSHION IFX                |
| 51      | 1-772-212-11 | 3.5" 3MODE FLOPPY DISK DRIVE                                          | 121     | 4-644-062-02 | CUSHION BACK UP BATTERY    |
| 52      | X-4622-388-3 | ASSY FD BRKT UNDER                                                    | 122     | 4-643-828-01 | ISOLATOR HDD               |
| 53      | 4-643-832-02 | DUMMY CARD                                                            | 123     | 4-645-178-03 | SHIELD (LCD FPC)           |
| 54      | 4-642-229-11 | TAPPING, Ø NUMBER SPECIAL HEAD                                        | 124     | 4-643-967-01 | CUSHION (KEY)              |
| 56      | X-4622-322-1 | ASSY BEZEL DVD-ROM                                                    | 126     | 4-643-923-01 | TAPE PAD (A)               |
| 57      | 1-772-657-11 | DVD-ROM (8X)-SD-C2402                                                 | 128     | 4-644-290-11 | SPACER KEYBOARD            |
| 58      | 4-642-809-02 | CD BRKT UPPER                                                         |         |              |                            |
| 59      | 1-791-142-11 | PWB, (CD-ROM) FLEXIBLE                                                |         |              |                            |
| * 60    | 4-642-817-01 | CD GND PLATE                                                          |         |              |                            |
| 61      | X-4622-387-6 | ASSY CD BRKT UNDER                                                    |         |              |                            |
| 62      | 4-641-726-31 | SCREW (M2), SPECIAL HEAD                                              |         |              |                            |
| 65      | 1-791-145-11 | FFC (IRDA)                                                            |         |              |                            |

| Ref.No. | Part No.     | Description                       |
|---------|--------------|-----------------------------------|
| * 129   | 4-642-792-01 | FENCE LCD CN                      |
| * 130   | 4-642-850-01 | FENCE HDD CN                      |
| * 131   | 4-642-874-01 | BRACKET IFX                       |
| 132     | 4-643-878-02 | INSULATOR CN                      |
| 133     | 4-643-975-01 | INSULATOR IRDA                    |
| 136     | 4-644-899-01 | SCREW (M2), 0 NUMBER P3 KIND      |
| 137     | 4-645-523-01 | SPACER BATTERY                    |
| 138     | 4-645-548-01 | GASKET BAY                        |
| 139     | 4-645-549-02 | SHIELD (BATT)                     |
| 140     | 4-645-412-01 | SPACER FAN                        |
| 141     | 4-645-070-01 | CD FPC SEAL                       |
| 143     | 4-645-768-01 | CAP MODEM                         |
| 144     | 4-645-339-01 | WASHER P3                         |
| 147     | 4-644-492-31 | ACE (M2), LOCK                    |
| 150     | 4-646-988-11 | SCREW (M2 EG)                     |
| 151     | A-8022-331-A | DVD (SD-C2402) OVERALL ASSY, MAIN |
| * 152   | 4-642-875-01 | PLATE IFX                         |

| Ref.No. | Part No.     | Description   |
|---------|--------------|---------------|
| B3      | 7-621-283-10 | SCREW +P 2X10 |
| B5      | 7-621-772-60 | SCREW +B 2X12 |
| B7      | 7-622-205-05 | NUT M2 TYPE2  |

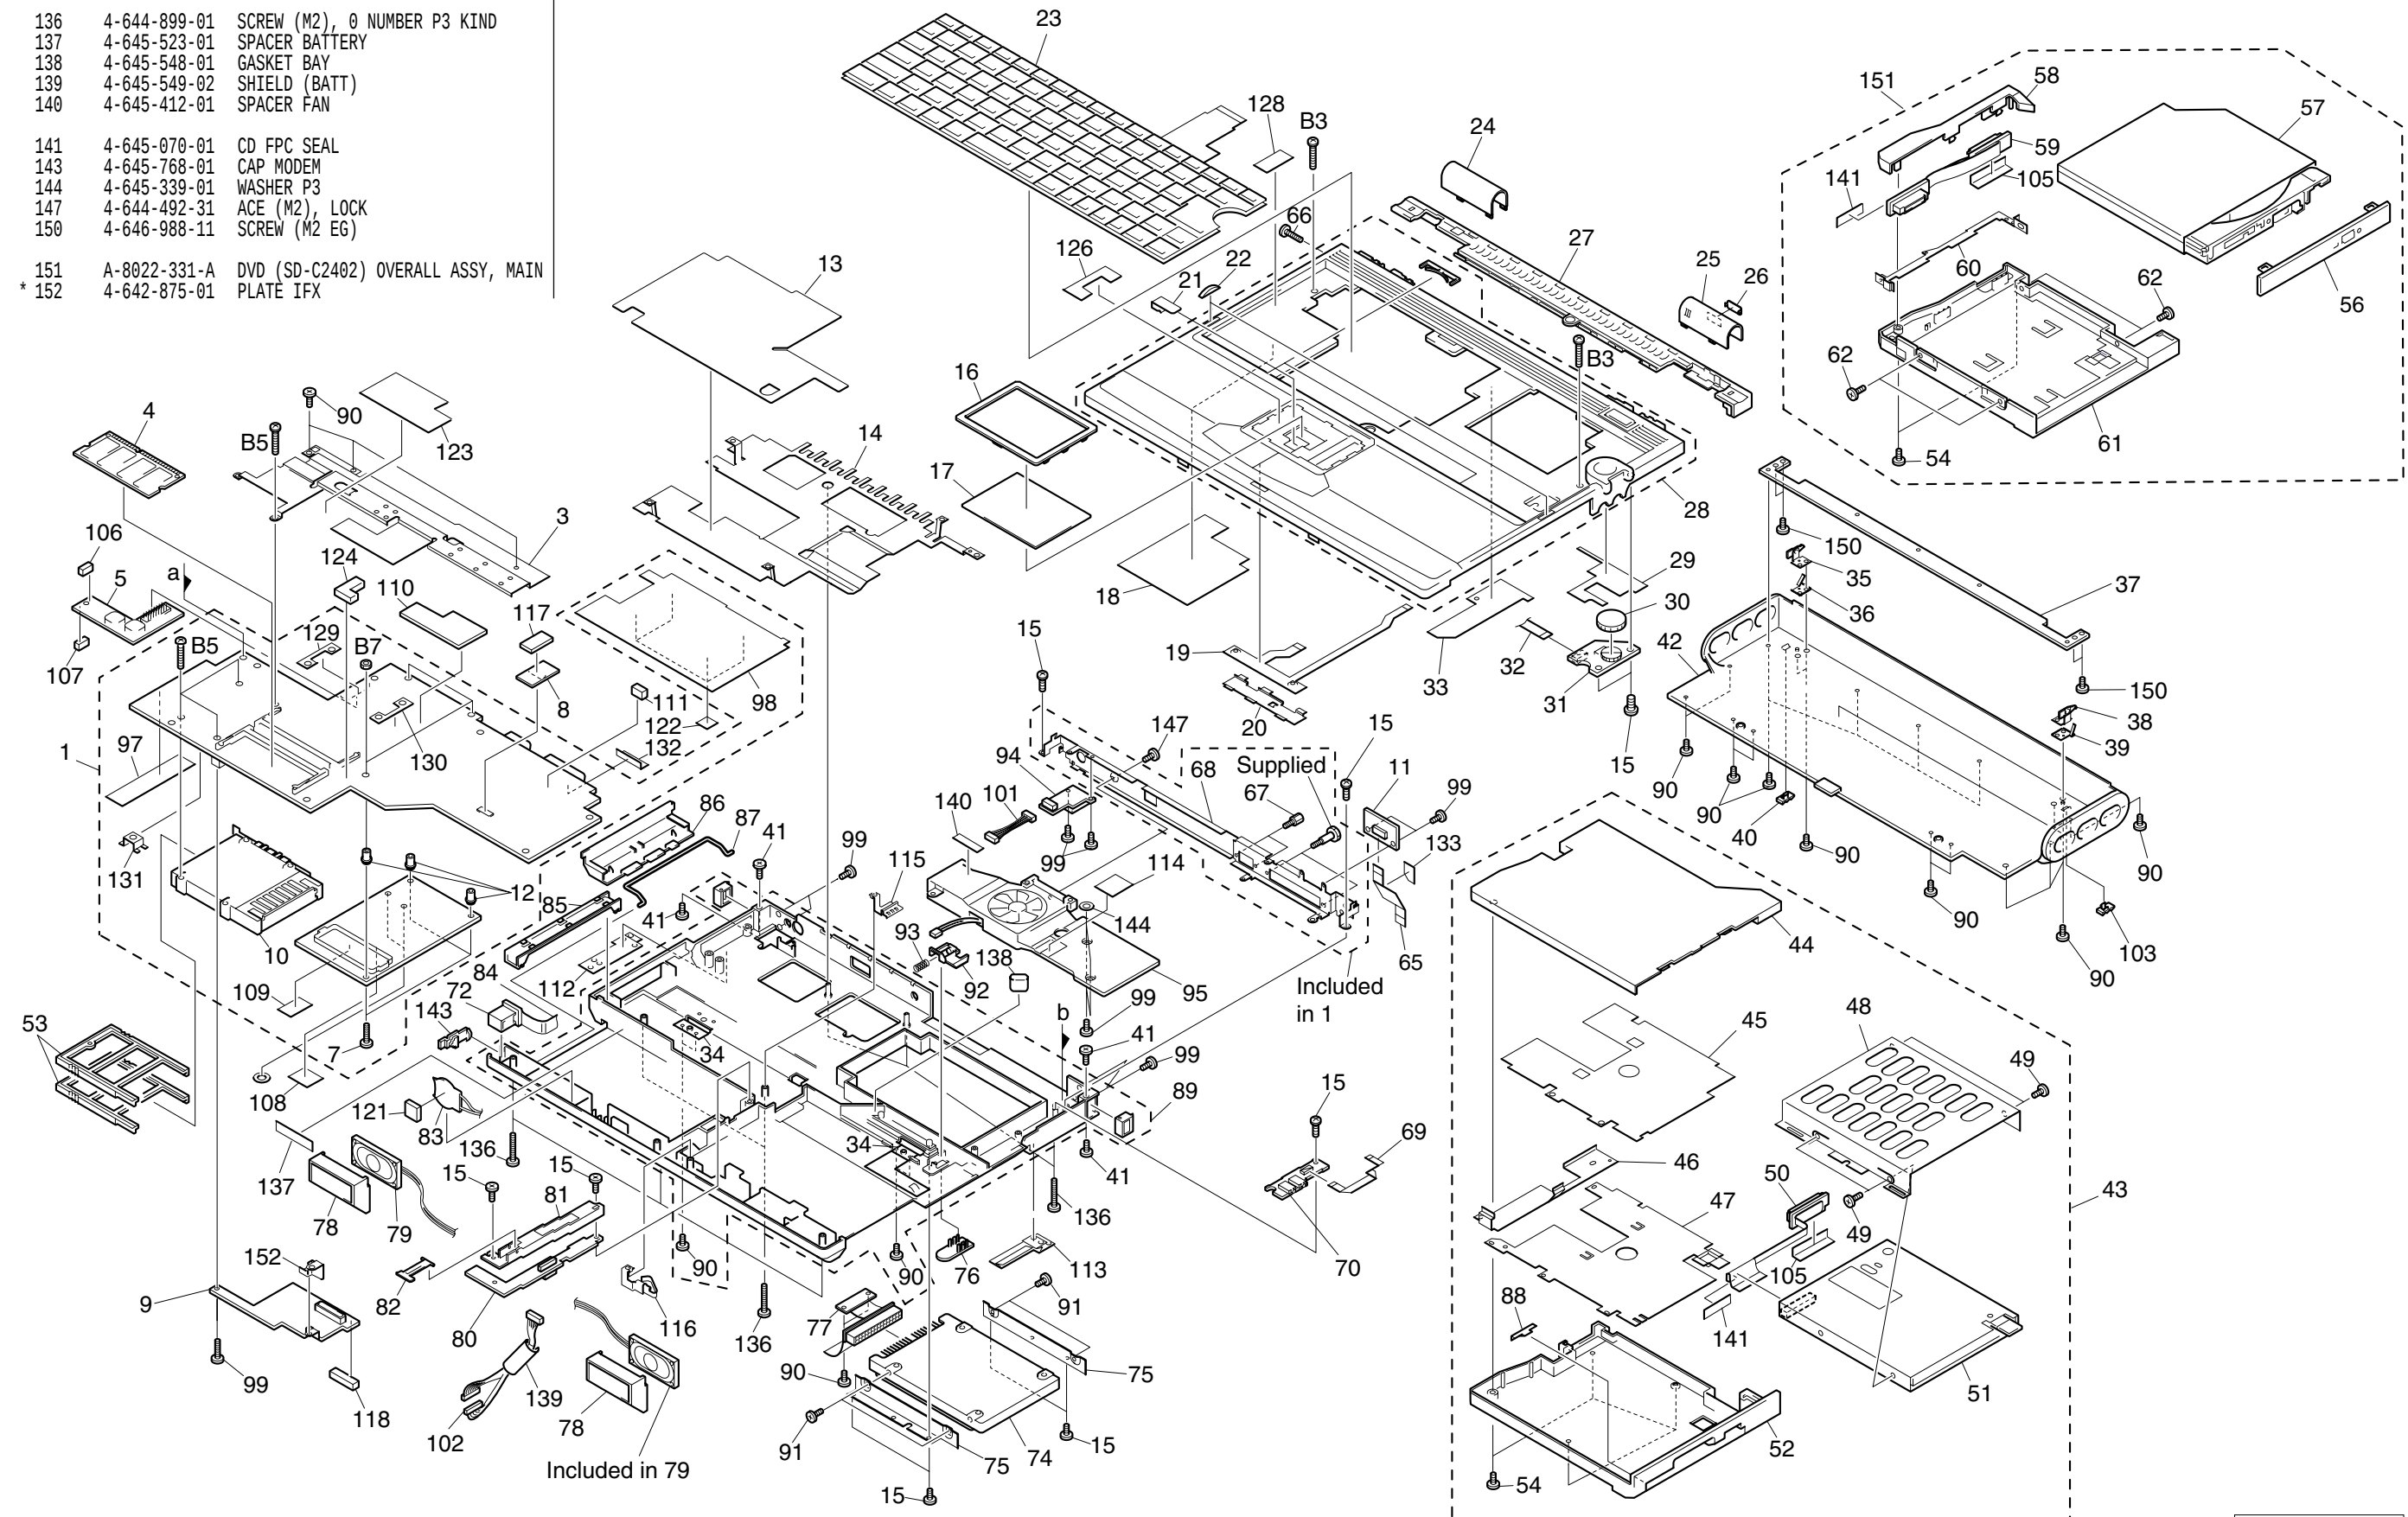

### 5-2. Main Section (XG38/XG38K Model)

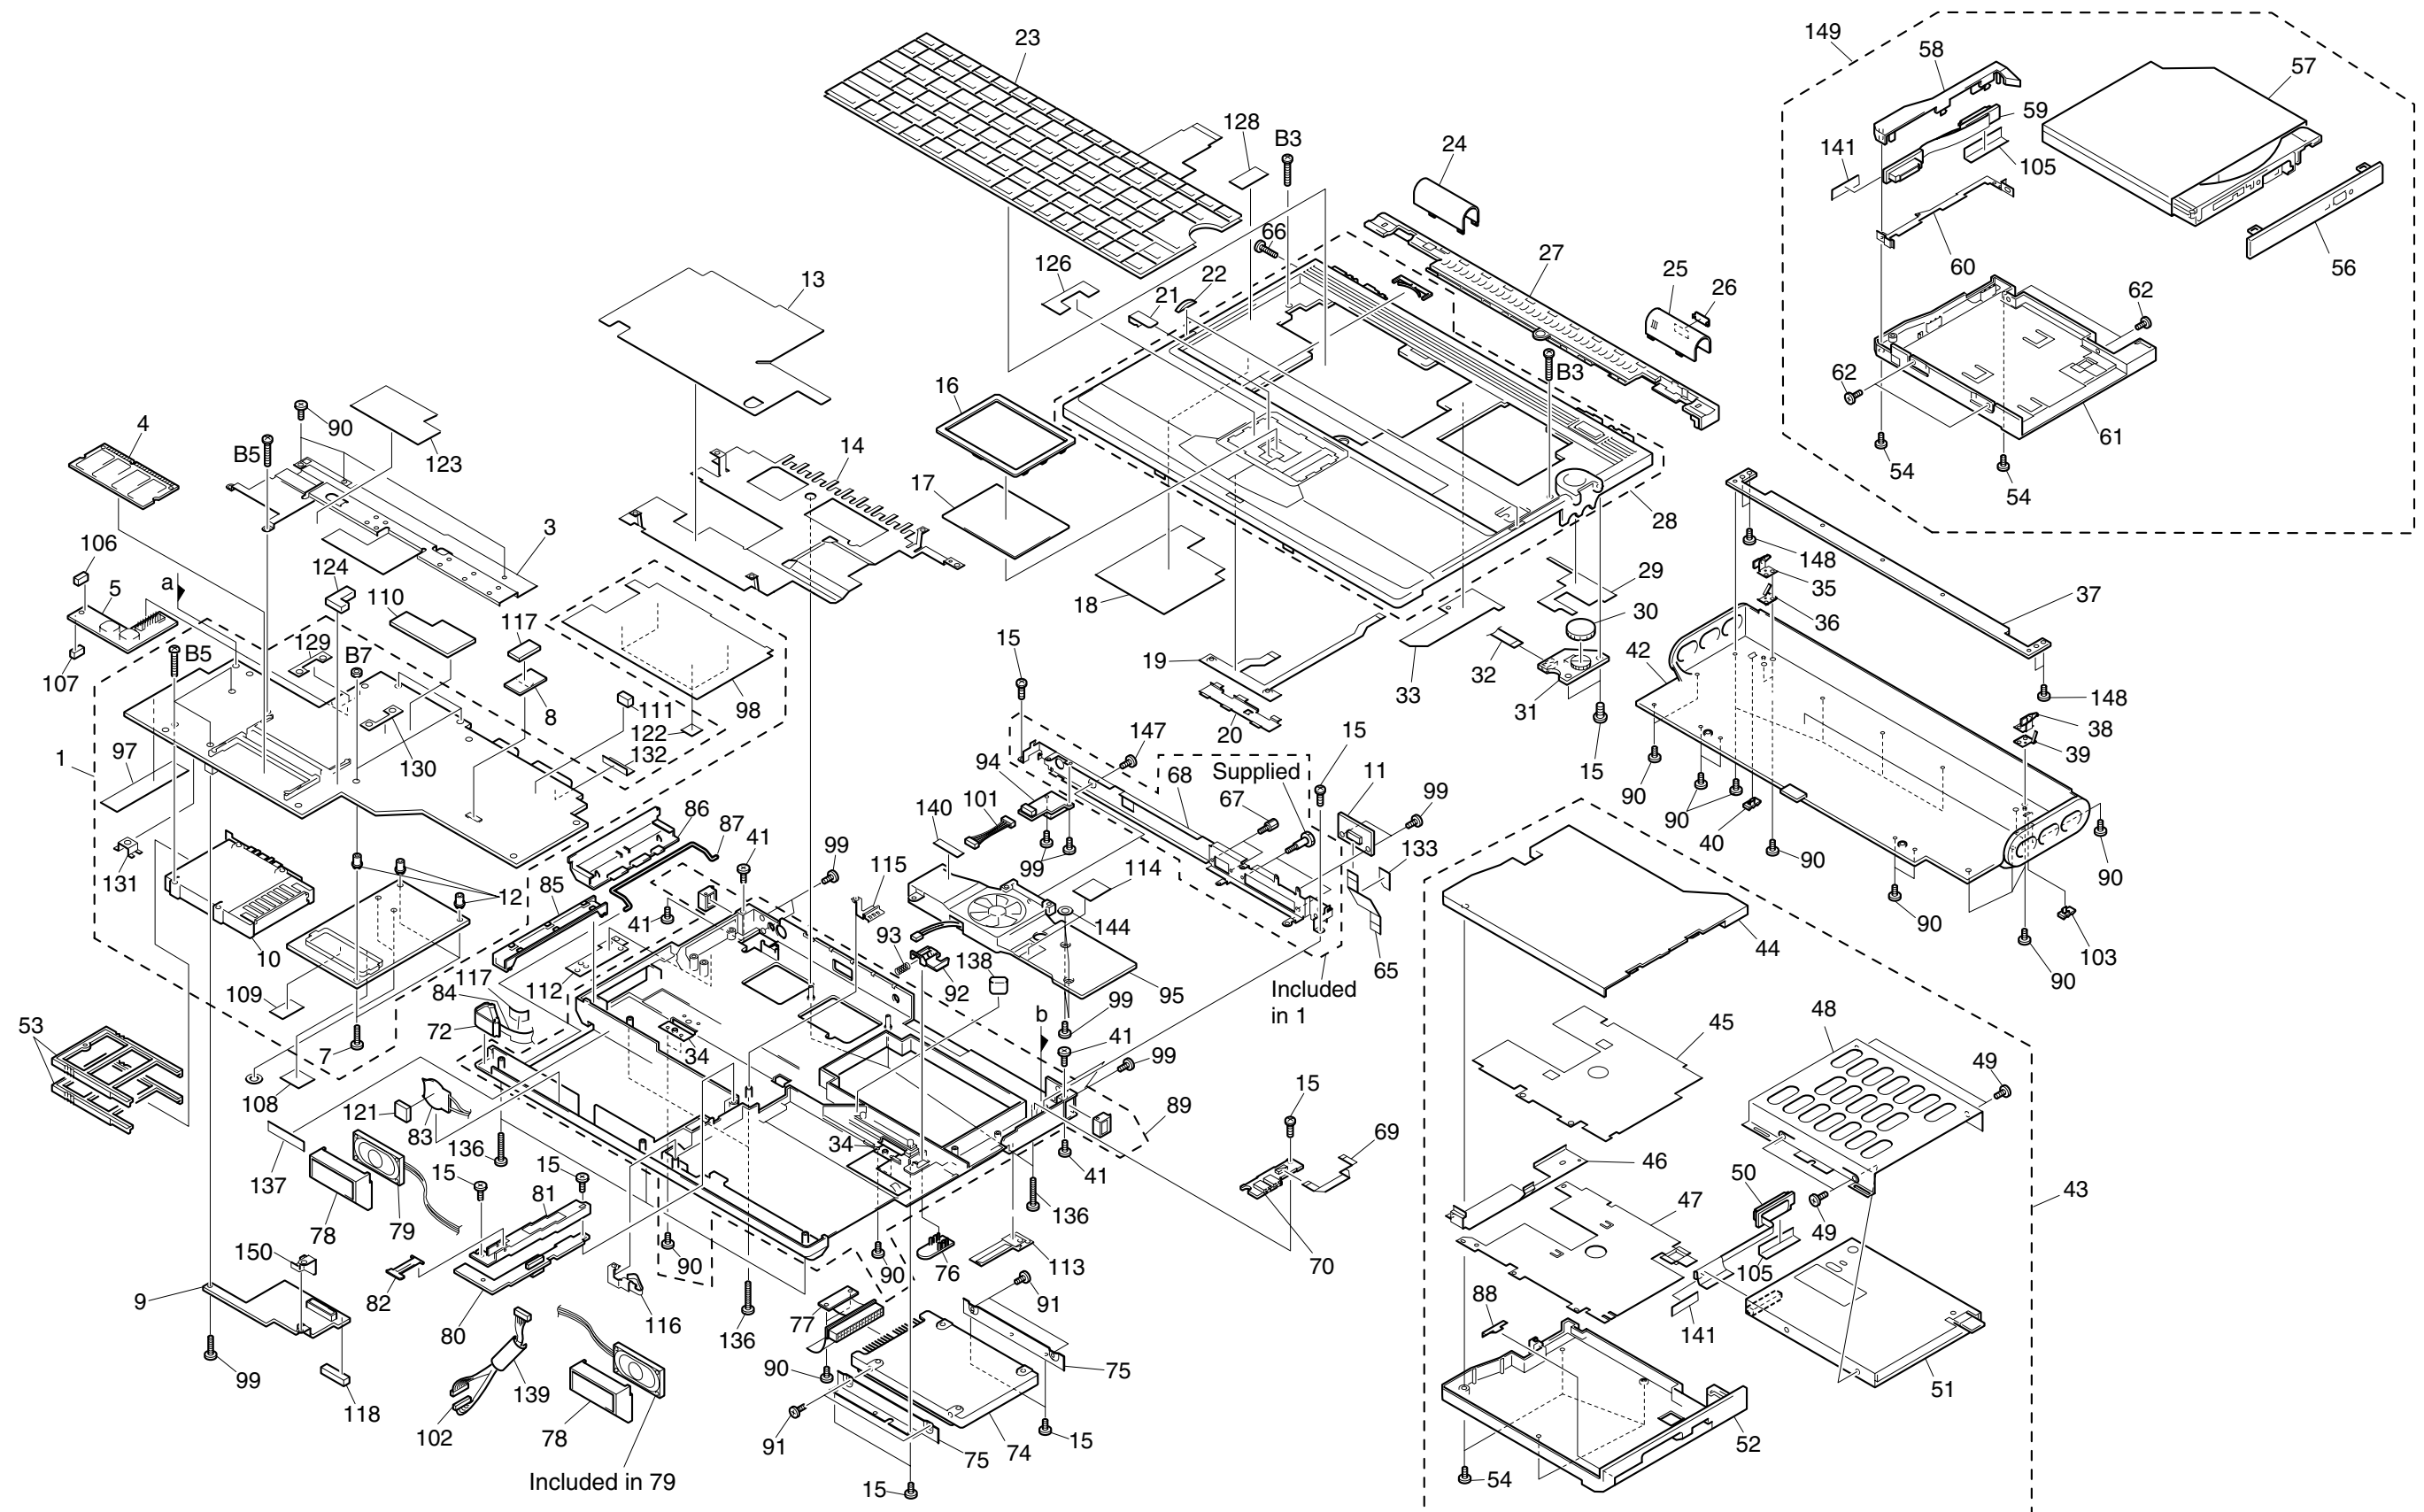

Confidential


| Ref.No. | Part No.     | Description                                                           |
|---------|--------------|-----------------------------------------------------------------------|
| 1       | A-8048-297-A | MBX43 (P3 700) 1650 ASSY (S)<br>(MBX-43 BOARD/CPU MODULE (PIII700SS)) |
| * 3     | 4-642-786-01 | HEAT SINK U                                                           |
| 4       | 8-759-638-65 | IC HYM7V65801BLTQG-10S (64MB)                                         |
| 5       | A-8066-166-A | COMPLETE PWB PWS-7                                                    |
| 7       | 3-740-546-21 | SCREW (M2)                                                            |
| 8       | A-8056-719-A | RO-38 (X) COMPLETE                                                    |
| 9       | A-8066-164-A | COMPLETE PWB IFX-76 (U)                                               |
| 10      | 1-793-360-11 | CONNECTOR, PC CARD (EJECTOR)                                          |
| 11      | A-8056-331-A | COMPLETE PWB IFX-69                                                   |
| 12      | 4-637-921-02 | STAND OFF                                                             |
| * 13    | 4-643-383-01 | INSULATOR HEAT (B)                                                    |
| * 14    | 4-642-787-02 | HEAT SINK B                                                           |
| 15      | 4-642-852-31 | +B M2 X5                                                              |
| 16      | 4-642-794-03 | COVER (PAD)                                                           |
| 17      | 1-772-529-11 | PAD, TOUCH                                                            |
| 18      | 4-643-379-01 | INSULATOR PALM (L)                                                    |
| 19      | 1-791-147-11 | PWB, (PAD) FLEXIBLE PRINT                                             |
| * 20    | 4-642-799-01 | PLATE (SW)                                                            |
| * 21    | 4-642-842-01 | SPRING (PAD), PLATE                                                   |
| 22      | 4-642-954-01 | CUSHION (PALM)                                                        |
| 23      | 1-418-545-22 | KEYBOARD UNIT                                                         |
| 24      | 4-642-795-01 | COVER HINGE (L)                                                       |
| 25      | 4-642-796-01 | COVER HINGE (R)                                                       |
| 26      | 4-642-798-01 | LENS IRDA                                                             |
| 27      | 4-642-789-01 | DISPLAY BASE                                                          |
| 28      | X-4622-287-5 | ASSY HOU PALMREST                                                     |
| 29      | 4-643-380-01 | INSULATOR PALM (R)                                                    |
| 30      | 4-642-855-01 | DIAL                                                                  |
| 31      | A-8056-327-A | COMPLETE PWB IFX-70                                                   |
| 32      | 1-791-150-11 | FFC (JOG)                                                             |
| 33      | 4-643-381-01 | INSULATOR PALM (M)                                                    |
| 34      | 4-642-819-01 | HINGE FLAP                                                            |
| 35      | X-4622-787-2 | ASSY FLAP LOCK L                                                      |
| 36      | 4-642-837-04 | LOCK PLATE L                                                          |
| * 37    | 4-642-841-01 | PLATE FLAP BASE                                                       |
| 38      | X-4622-788-2 | ASSY FLAP LOCK R                                                      |
| 39      | 4-642-838-01 | LOCK PLATE R                                                          |
| 40      | 4-642-839-02 | LEVER L                                                               |
| 41      | 4-641-726-51 | SCREW (M2), SPECIAL HEAD                                              |
| 42      | X-4622-675-1 | ASSY HOU FLAP 2                                                       |
| 43      | A-8045-662-A | ASSY BAY (FD)                                                         |
| 44      | 4-642-811-01 | FD BRKT UPPER                                                         |
| * 45    | 4-642-956-01 | INSULATOR FDD                                                         |
| * 46    | 4-642-815-01 | FD UNDER PLATE                                                        |
| * 47    | 4-642-814-01 | FD GND PLATE                                                          |
| * 48    | 4-642-813-01 | FD PLATE                                                              |
| 49      | 4-641-656-12 | SCREW (M2.5), Ø PLATE P                                               |
| 50      | 1-791-143-11 | PWB, (FDD) FLEXIBLE                                                   |
| 51      | 1-772-212-11 | 3.5" 3MODE FLOPPY DISK DRIVE                                          |
| 52      | X-4622-388-3 | ASSY FD BRKT UNDER                                                    |
| 53      | 4-643-832-02 | DUMMY CARD                                                            |
| 54      | 4-642-229-11 | TAPPING, Ø NUMBER SPECIAL HEAD                                        |
| 56      | X-4622-322-1 | ASSY BEZEL DVD-ROM                                                    |
| 57      | 1-772-657-11 | DVD-ROM (8X)-SD-C2402                                                 |
| 58      | 4-642-809-02 | CD BRKT UPPER                                                         |
| 59      | 1-791-142-11 | PWB, (CD-ROM) FLEXIBLE                                                |
| * 60    | 4-642-817-01 | CD GND PLATE                                                          |
| 61      | X-4622-387-6 | ASSY CD BRKT UNDER                                                    |
| 62      | 4-641-726-31 | SCREW (M2), SPECIAL HEAD                                              |
| 65      | 1-791-145-11 | FFC (IRDA)                                                            |

| Ref.No. | Part No.     | Description                |
|---------|--------------|----------------------------|
| 66      | 4-641-655-11 | SCREW (M2), + SPECIAL HEAD |
| * 67    | 4-635-966-01 | SCREW (HEX)                |
| * 68    | 4-642-776-01 | BRACKET I/O                |
| 69      | 1-791-146-11 | FFC (AUDIO)                |
| 70      | A-8056-329-A | COMPLETE PWB ANL-17        |
| 72      | 1-793-462-12 | JACK, MODULAR              |
| 74      | 1-772-727-11 | HDD (DJSA-220 20.0GB)      |
| * 75    | 4-642-777-01 | HD BRACKET (A)             |
| 76      | 4-642-781-02 | BUTTON BAY LATCH           |
| 77      | 1-791-144-11 | PWB, (HDD) FLEXIBLE        |
| * 78    | 4-643-215-01 | CUSHION SPEAKER            |
| 79      | 1-529-455-11 | SPEAKER, (40X20MM)         |
| 80      | A-8056-325-A | COMPLETE PWB CNX-75        |
| 81      | 4-642-783-01 | COVER (BATT)               |
| 82      | 4-642-784-01 | LATCH DETECTOR             |
| 83      | 1-756-000-11 | BATTERY, V/L RECHARGEABLE  |
| 84      | 1-791-186-12 | FPC (CNX-80)               |
| 85      | 4-642-876-01 | COVER (FFC)                |
| 86      | 4-642-778-04 | DOOR BATTERY               |
| 87      | 4-642-779-01 | SPRING HD DOOR             |
| 88      | 4-642-816-01 | FD LENZ                    |
| 89      | X-4622-286-4 | ASSY HOU BOTTOM            |
| 90      | 4-641-726-21 | SCREW (M2), SPECIAL HEAD   |
| 91      | 4-635-301-01 | SCREW M3X4                 |
| 92      | 4-642-780-01 | LATCH BAY                  |
| 93      | 4-642-782-01 | BAY LATCH SPRING           |
| 94      | A-8056-323-A | COMPLETE PWB CNX-74        |
| 95      | 1-763-466-11 | FAN, DC                    |
| 97      | 4-643-214-01 | INSULATOR PC CARD          |
| 98      | 4-643-382-02 | INSULATOR HDD              |
| 99      | 4-641-726-01 | SCREW (M2), SPECIAL HEAD   |
| 101     | 1-791-178-11 | CABLE, DC JACK PC BOARD    |
| 102     | 1-791-177-11 | CABLE, PC BOARD CONNECTION |
| 103     | 4-642-840-01 | LEVER R                    |
| * 105   | 4-642-955-01 | INSULATOR BAY FPC          |
| 106     | 4-643-916-01 | CUSHION PSW A              |
| 107     | 4-643-917-01 | CUSHION PSW B              |
| 108     | 4-643-825-01 | THERMAL SHEET NC           |
| 109     | 4-644-350-01 | THERMAL SHEET CP2          |
| 110     | 4-643-826-01 | THERMAL SHEET NM           |
| 111     | 4-643-915-01 | SPACER SW POWER            |
| 112     | X-4622-371-1 | ASSY SHIELD FLAP L         |
| 113     | X-4622-372-1 | ASSY SHIELD FLAP R         |
| 114     | 4-643-574-01 | INSULATOR FAN              |
| * 115   | 4-642-868-01 | PLATE BAY B                |
| * 116   | 4-642-867-01 | PLATE BAY A                |
| 117     | 4-643-918-01 | CUSHION ROM                |
| 118     | 4-644-052-01 | CUSHION IFX                |
| 121     | 4-644-062-02 | CUSHION BACK UP BATTERY    |
| 122     | 4-643-828-01 | ISOLATOR HDD               |
| 123     | 4-645-178-03 | SHIELD (LCD FPC)           |
| 124     | 4-643-967-01 | CUSHION (KEY)              |
| 126     | 4-643-923-01 | TAPE PAD (A)               |
| 128     | 4-644-290-11 | SPACER KEYBOARD            |
| * 129   | 4-642-792-01 | FENCE LCD CN               |
| * 130   | 4-642-850-01 | FENCE HDD CN               |
| * 131   | 4-642-874-01 | BRACKET IFX                |
| 132     | 4-643-878-02 | INSULATOR CN               |
| 133     | 4-643-975-01 | INSULATOR IRDA             |
| 137     | 4-645-523-01 | SPACER BATTERY             |

| Ref.No. | Part No.     | Description                       |
|---------|--------------|-----------------------------------|
| 138     | 4-645-548-01 | GASKET BAY                        |
| 139     | 4-645-549-02 | SHIELD (BATT)                     |
| 140     | 4-645-412-01 | SPACER FAN                        |
| 141     | 4-645-070-01 | CD FPC SEAL                       |
| 144     | 4-645-339-01 | WASHER P3                         |
| 147     | 4-644-492-31 | ACE (M2), LOCK                    |
| 148     | 4-646-988-11 | SCREW (M2 EG)                     |
| 149     | A-8022-331-A | DVD (SD-C2402) OVERALL ASSY, MAIN |
| * 150   | 4-642-875-01 | PLATE IFX                         |

| Ref.No. | Part No.     | Description   |
|---------|--------------|---------------|
| B3      | 7-621-283-10 | SCREW +P 2X10 |
| B5      | 7-621-772-60 | SCREW +B 2X12 |
| B7      | 7-622-205-05 | NUT M2 TYPE2  |


5-3. LCD Section (XG39/XG39K Model) – Made by HI –

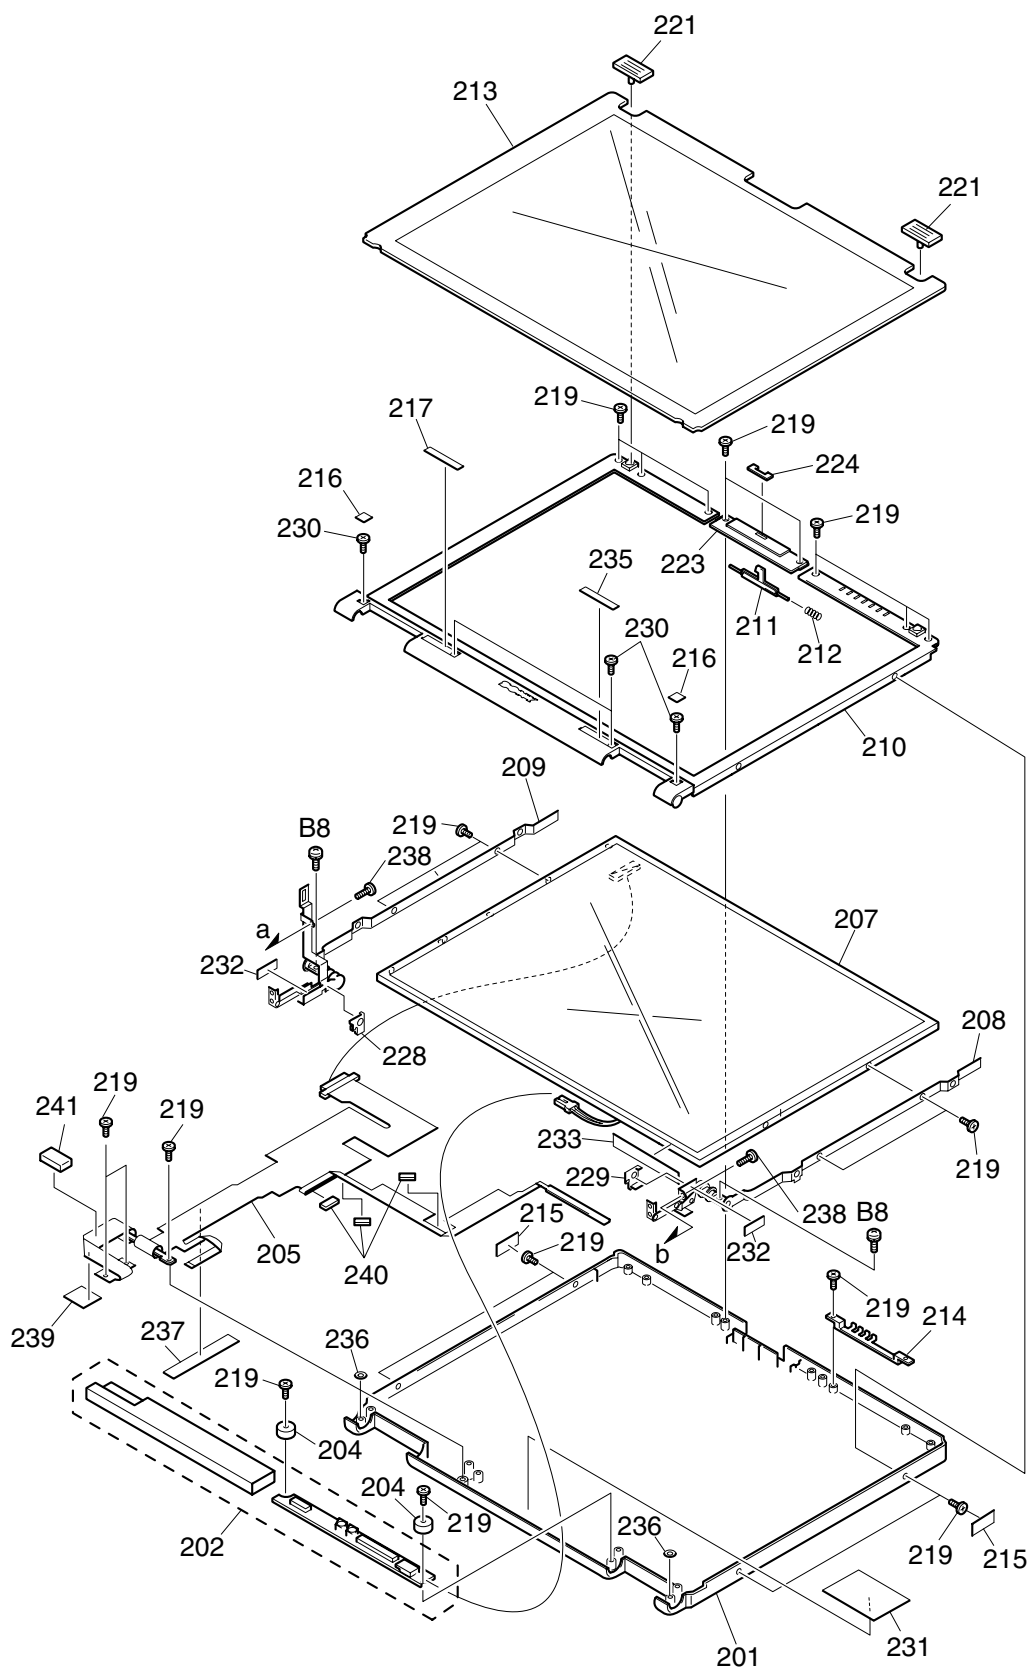

| Ref.No. | Part No.     | Description              |
|---------|--------------|--------------------------|
| 201     | X-4622-634-2 | ASSY HOU DISPLAY 14      |
| 202     | 1-418-557-31 | INVERTOR UNIT            |
| 204     | 4-635-274-01 | BRACKET INVERTER         |
| 205     | 1-677-447-11 | PWB, LCD FLEXIBLE PRINT  |
| 207     | A-8046-809-A | LCD (14HI) 1220 ASSY (S) |
| 208     | X-4622-606-3 | HINGE ASSY 14 (R)        |
| 209     | X-4622-605-3 | HINGE ASSY 14 (L)        |
| 210     | X-4622-633-2 | ASSY HOU BEZEL (14)      |
| 211     | 4-642-807-01 | LATCH (LCD)              |
| 212     | 4-637-903-01 | SPRING LATCH             |
| 213     | 4-647-669-01 | PANEL (14), FLASH        |
| 214     | 4-642-803-01 | LED LENZ (A)             |
| 215     | 4-646-766-01 | SEAL, LCD SIDE           |
| 216     | 4-643-406-01 | SEAL LCD FRONT SCREW     |
| 217     | 4-643-407-01 | SEAL LCD FRONT SCREW (L) |
| 219     | 4-641-726-51 | SCREW (M2), SPECIAL HEAD |
| 221     | X-4622-382-1 | PANEL LOCK ASSY          |
| 223     | 4-642-856-01 | LATCH COVER              |
| 224     | 4-643-409-01 | CUSHION LATCH            |
| 228     | 4-642-829-01 | PLATE FLAP L             |
| 229     | 4-642-830-01 | PLATE FLAP R             |
| 230     | 3-719-408-11 | SCREW (B2), TAPPING, P3  |
| 231     | 4-645-172-01 | HEAT SPREADER LCD        |
| 232     | 4-644-541-11 | SPACER HINGE             |
| 233     | 4-644-063-01 | SHEET LCD                |
| 235     | 4-649-761-01 | (XG39)...LABEL (ID)      |
| 235     | 4-649-761-11 | (XG39K)...LABEL (ID)     |
| 236     | 4-644-484-01 | WASHER                   |
| 237     | 4-644-292-02 | TAPE LCD                 |
| 238     | 4-642-852-31 | +B M2NV                  |
| 239     | 4-645-872-01 | TAPE FPC LCD             |
| 240     | 4-646-986-01 | SPACER, LCD FLEXIBLE     |
| 241     | 4-651-355-01 | GASKET LCD FPC           |

| Ref.No. | Part No.     | Description     |
|---------|--------------|-----------------|
| B8      | 7-628-254-20 | SCREW +PS 2.6X8 |

5-4. LCD Section (XG38/XG38K Model) – Made by SA –

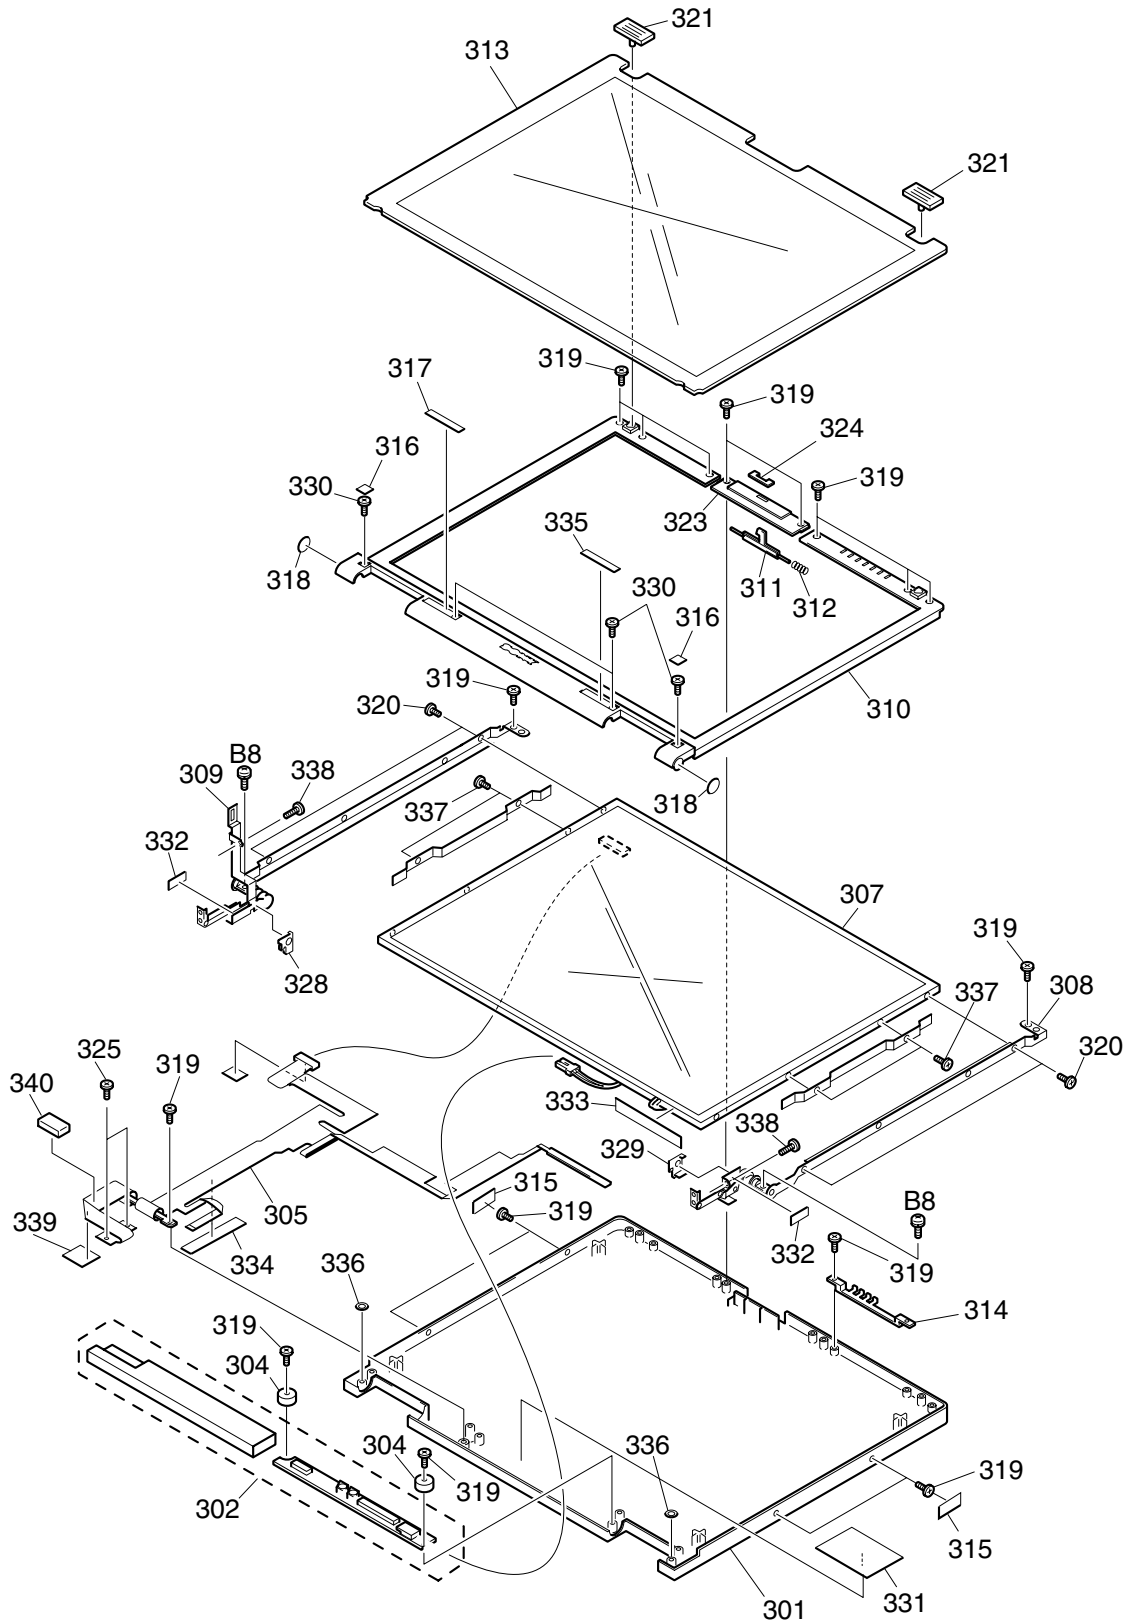


| Ref.No. | Part No.     | Description                  |
|---------|--------------|------------------------------|
| 301     | X-4622-549-2 | ASSY HOU DISPLAY CTO         |
| 302     | 1-418-557-31 | INVERTOR UNIT                |
| 304     | 4-635-274-01 | BRACKET INVERTER             |
| 305     | 1-676-513-11 | CABLE FPC (13.3" TFT XGA SA) |
| 307     | 1-803-642-11 | PANEL, LCD                   |
| 308     | X-4622-512-3 | HINGE ASSY CTO R             |
| 309     | X-4622-511-3 | HINGE ASSY CTO L             |
| 310     | X-4622-550-1 | ASSY HOU BEZEL CTO           |
| 311     | 4-642-807-01 | LATCH (LCD)                  |
| 312     | 4-637-903-01 | SPRING LATCH                 |
| 313     | 4-642-802-01 | FLASH PANEL                  |
| 314     | 4-642-803-01 | LED LENZ (A)                 |
| 315     | 4-643-405-01 | SEAL LCD SIDE SCREW          |
| 316     | 4-643-406-01 | SEAL LCD FRONT SCREW         |
| 317     | 4-643-407-11 | SEAL LCD FRONT SCREW (L)     |
| 318     | 4-643-408-01 | SEAL LCD SIDE                |
| 319     | 4-641-726-51 | SCREW (M2), SPECIAL HEAD     |
| 320     | 4-641-726-71 | SCREW (M2), SPECIAL HEAD     |
| 321     | X-4622-382-1 | PANEL LOCK ASSY              |
| 323     | 4-642-856-01 | LATCH COVER                  |
| 324     | 4-643-409-01 | CUSHION LATCH                |
| 325     | 4-641-726-21 | SCREW (M2), SPECIAL HEAD     |
| 326     | 4-642-852-11 | +B M2                        |
| 328     | 4-642-829-01 | PLATE FLAP L                 |
| 329     | 4-642-830-01 | PLATE FLAP R                 |
| 330     | 3-719-408-11 | SCREW (B2), TAPPING, P3      |
| 331     | 4-645-172-01 | HEAT SPREADER LCD            |
| 332     | 4-644-541-01 | SPACER HINGE                 |
| 333     | 4-644-063-01 | SHEET LCD                    |
| 334     | 4-644-292-02 | TAPE LCD                     |
| 335     | 4-649-761-21 | (XG38)...LABEL (ID)          |
| 335     | 4-649-761-31 | (XG38K)...LABEL (ID)         |
| 336     | 4-644-481-01 | WASHER                       |
| 337     | 3-039-037-01 | SCREW (M2X2.5)               |
| 338     | 4-642-852-31 | +B M2                        |
| 339     | 4-645-872-01 | TAPE FPC LCD                 |
| 340     | 4-651-355-01 | GASKET LCD FPC               |
| B8      | 7-628-254-20 | SCREW +PS 2.6X8              |

| Ref.No.     | Part No.     | Description               |
|-------------|--------------|---------------------------|
| ACCESSORIES |              |                           |
| *****       |              |                           |
| △           | 1-782-614-11 | CORD, POWER               |
| 401         | X-4622-412-1 | WEIGHT SAVER ASSY         |
| 402         | A-8045-662-A | ASSY BAY (FD)             |
| △403        | 1-476-342-11 | ADAPTOR, A.C.             |
| 404         | 1-528-935-11 | PACK, LITHIUM ION BATTERY |
| 405         | 1-791-149-12 | FDD-CABLE                 |
|             | 4-650-552-11 | WELCOME MAT, XG           |
|             | 4-650-553-11 | USER GUIDE, XG            |
|             | 4-650-555-11 | QUICK START, XG           |


**401** Weight Saver (1) **404** Battery Pack (1)



**402** ASSY BAY (FD) (1) **405** Floppy Disk Drive Cable (1)

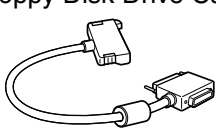

**403** AC Adaptor (1)

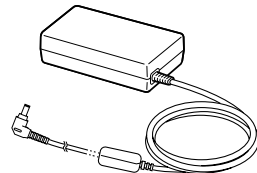

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.